

6. SAFETY EQUIPMENT


1) BOOM LOCK

Make sure that the boom lock and the slew lock be engaged before travelling on the road.

Check on a daily basis that the boom lock fully engages and secures the boom. If the lock does not fully engage (or disengage) the boom stop (1) may need adjusting (consult your Hyundai distributor).

▲ Operate the control levers only when you are correctly seated inside the cab.

※ It is recommended that the slew lock is engaged before fitting the boom lock.

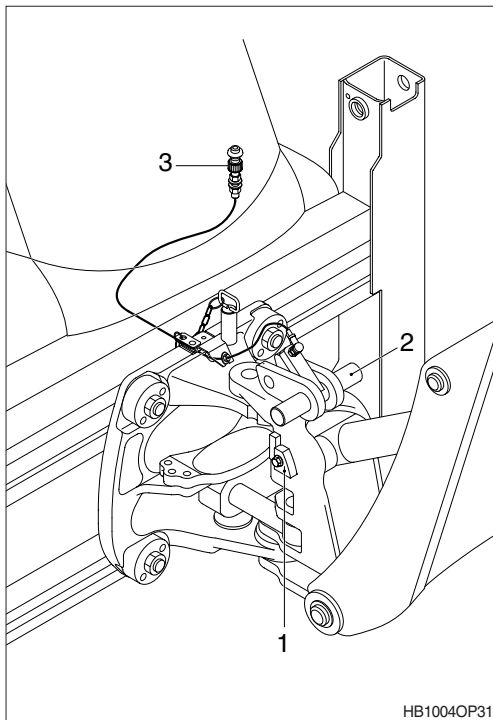

(1) Engage the boom lock

- ① Set the backhoe straight behind the machine, rest the backhoe on the ground.
- ② Make sure that the boom lock (2) is fully raised, if necessary lift control lever (3) to raise the lock.
- ③ Close the boom ram (raise the boom).
- ④ Lower control lever (3) to lower the boom lock (2), make sure that the lock is fully engaged in the boom lugs.
- ⑤ Lower the boom a little to tighten the lock.

(2) Disengage the boom lock

- ① Raise the boom a little to release the lock.
- ② Lift control lever (3) to raise the boom lock (2).


2) SLEW LOCK

Make sure that the boom lock and the slew lock be engaged before travelling on the road.

▲ Operate the control levers only when you are correctly seated inside the cab.

▲ If two people are doing this job make sure that the person working the controls is a competent operator. If the wrong control lever is moved, or if the controls are moved violently, the other person could be killed or injured.

※ It is recommended that the slew lock is engaged before fitting the boom lock.

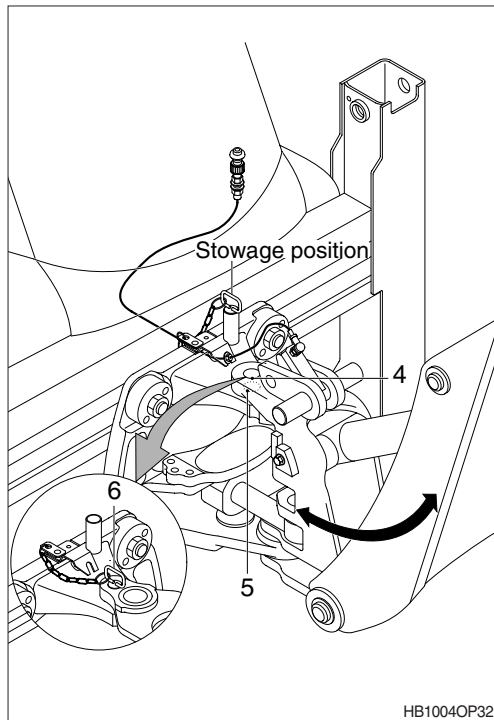

(1) Engage the slew lock


- ① Slew the backhoe into the required position. Make sure that hole (4) (in the king post) aligns with hole (5) (in the mainframe). Stop the engine.

▲ Do not attempt to install or remove the slew lock pin whilst sitting in the cab, you will be leaning over the backhoe control levers. You or others can be killed or seriously injured if the control levers are accidentally operated.

- ② Remove the slew lock pin (6) from its stowage position and fit in into the aligned holes.

(2) Disengage the slew lock

- ① Stop the engine.
- ② Remove the lock pin (6) and put it in its stowage position.

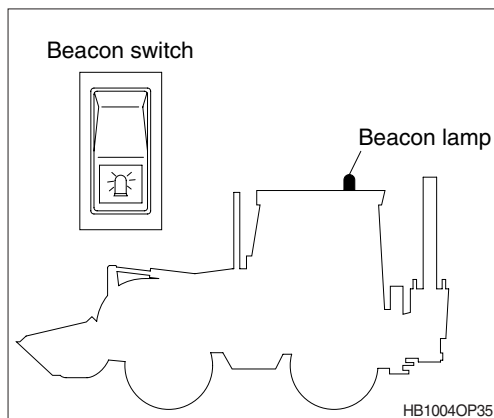

3) Warning beacon

In some territories, to meet legislative requirements, a beacon lamp must be fitted.

Fit the flashing beacon :

- Fit the beacon to the cab roof and plug the lead into the cab roof socket, the beacon will start flashing when the beacon switch is pressed on.

※ We recommend that a flashing beacon is fitted if the machine is travelling on public highways. Make sure you are complying with local laws.