

## 7. OPENING AND CLOSING WINDOWS


### 1) THE SIDE WINDOW

#### (1) Open

- ① Unlock latch (1).
- ② Push lever (2) towards the front of the machine then lift the lever, while pushing window outwards, until it latches down.

#### (2) Close


- ① First lift the lever then pull the window inwards.
- ② Lower the lever (2) and (1) to latch it.

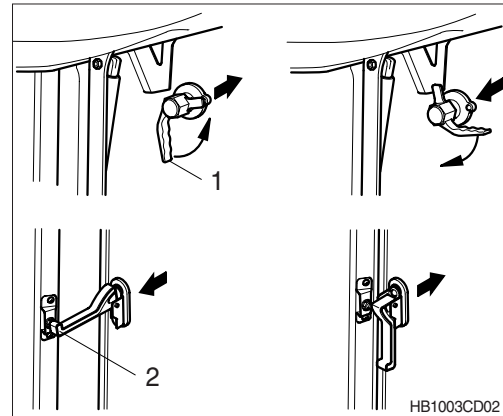

### 2) THE REAR WINDOW

**▲** The rear window is heavy. Take care when raising and lowering it.

- ※ The rear window can contact the bucket teeth.
- ※ With the backhoe stowed across the back of the machine and the bucket closed its possible that the window can hit the bucket teeth when being closed or opened.

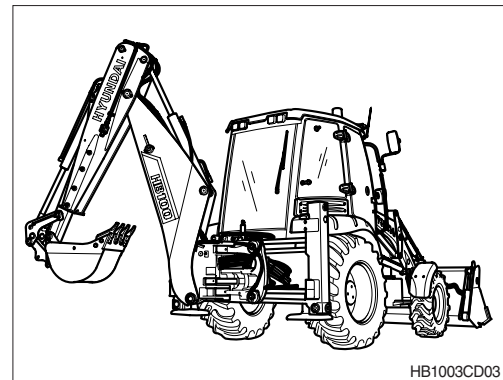

To open the rear window, press the button.

Take a firm grip on the handle, move the window towards the front of the machine and up as far as it will go.

Secure the window in its open position by release the button, make sure the window is locked in position.

It is recommended that the rear window is closed before traveling.

- ※ When closing the window, make sure that the window wiper lead does not get trapped.

