

## 18. AIR CONDITIONER AND HEATER

### 1) CLEANING THE CAB FRESH AIR FILTER

- (1) Park the machine on firm level ground, engage the park brake and set the FNR lever to neutral. Lower the attachments to the ground and stop the engine.
- (2) Loosen the cover retaining screws and then remove the cover.
- (3) Knock loose dust off the filter. Carefully blow compressed air through all the folds of the filter, blow in the opposite direction to the arrows marked on the filter.
- ※ The compressed air must be set at a pressure no greater than 2 kgf/cm<sup>2</sup> (28 psi).
- (4) Refit the cover and secure with the retaining screws.

