


9. CHECKING THE FOOT BRAKE FLUID LEVEL

▲ Faulty brakes can kill. Do not use the machine until the fault has been put right.

- 1) Park the machine on firm level ground, engage the park brake and set the FNR lever to neutral.
 - 2) Lower the loader arms and the backhoe to the ground. Switch OFF the engine and remove the starter key.
 - 3) Pull the handle and open the engine cover.
 - 4) Visually check the level, MAX level is marked on the reservoir D.
 - 5) Add fluid if necessary.
- ※ If the level has fallen a long way below the MAX mark, get the system checked by your Hyundai dealer.
- 6) Refit the reservoir cap. Wipe up any spillage.

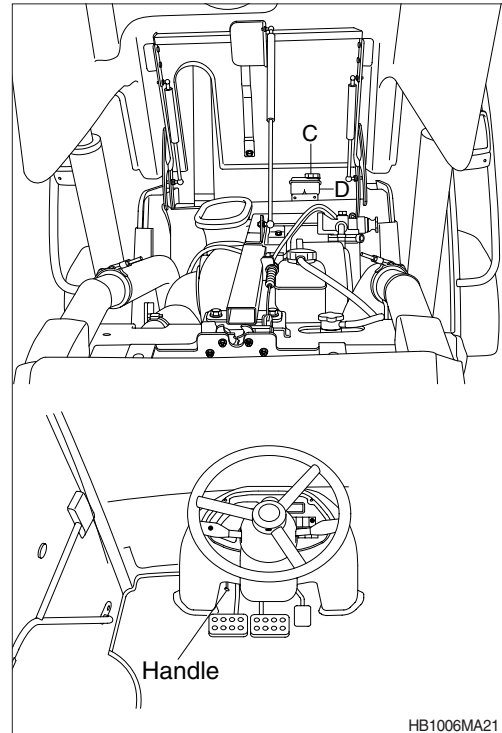

HB1006MA21