

A	
Accelerator pedal	3-16
After engine start	4-4
Air breather element	6-38
Air cleaner filter	6-29
Air conditioner & heater	3-29
Air conditioner filter	6-50
Axle gear oil	6-45
B	
Backhoe work	4-15
Battery	6-21
Before starting engine	4-2
Brake pedal	3-17
Bucket selection guide	2-6
Breaker	3-13
C	
Cab air filter	6-50
Cab device	3-1
Changing machine control pattern	3-11
Cigar lighter	3-5
Coolant	6-30
Cooling fan	6-34
Coolant temperature gauge	3-4
D	
Drive shaft lubricate	6-19
Drive control	3-15
E	
Engine oil filter	6-27
Engine oil level	6-26
Engine starting & stop	4-3
Engine starting by booster	6-22
Engine stop	4-6
F	
Fan belt	6-34
FNR lever	3-16
Fuel filter	6-36
Fixing the machine	5-4
Fuel system bleeding	6-36
Fuel tank	6-35
Fuse & relay box	6-24
Fuel gauge	3-4
G	
Gauge	3-4
H	
Hand throttle lever	3-16
Hour meter	6-1
Hydraulic oil changing	6-39
Hydraulic oil filling	6-38
Hydraulic oil level	6-38
L	
LCD indicator lamp	3-2
LCD warning lamp	3-4
Levers	3-13
Loader operation	4-12
Loading the machine	5-3
Lubricant specification	6-7
M	
Maintenance check list	6-9
Major components	2-1
Multifunction switch	3-12
N	
New machine operation	4-1
O	
Oils	6-8
Oil cooler	6-34
Operating levers	3-18
P	
Pedals	3-16
Periodical replacement parts	6-3
Pilot line filter	6-40
Prefilter	6-37
R	
Radiator flushing	6-31
Radio & USB/MP3 player	3-31
Recommended oils	6-8
Return filter	6-39
Road traveling	5-1
RPM gauge	3-4
S	
Safety hints	1-1

Safety labels	0-6
Safety equipment	3-24
Safety strut	6-15
Seat belt	3-28
Seat controls	3-27
Shovel work	4-13
Speciation for major component	2-3
Specifications	2-2
Start switch	3-7
Storage	4-23
Suction strainer	6-40
Slew lock	3-25
Switch (front console)	3-7
Switches	3-7
Switch (side console)	3-9

T

Tires air pressure	5-1
Torques-major component	6-6
Towing machine	4-21
Transportation	5-1
Transmission	6-41
Travelling position	4-7
Troubleshooting guide	7-1

U

USB socket	3-10
USB player	3-35

W

Warming up operation	4-5
Warning lamps	3-4,5
Weight	2-2
Working	4-11
Working range	2-2