 



6. OTHERS

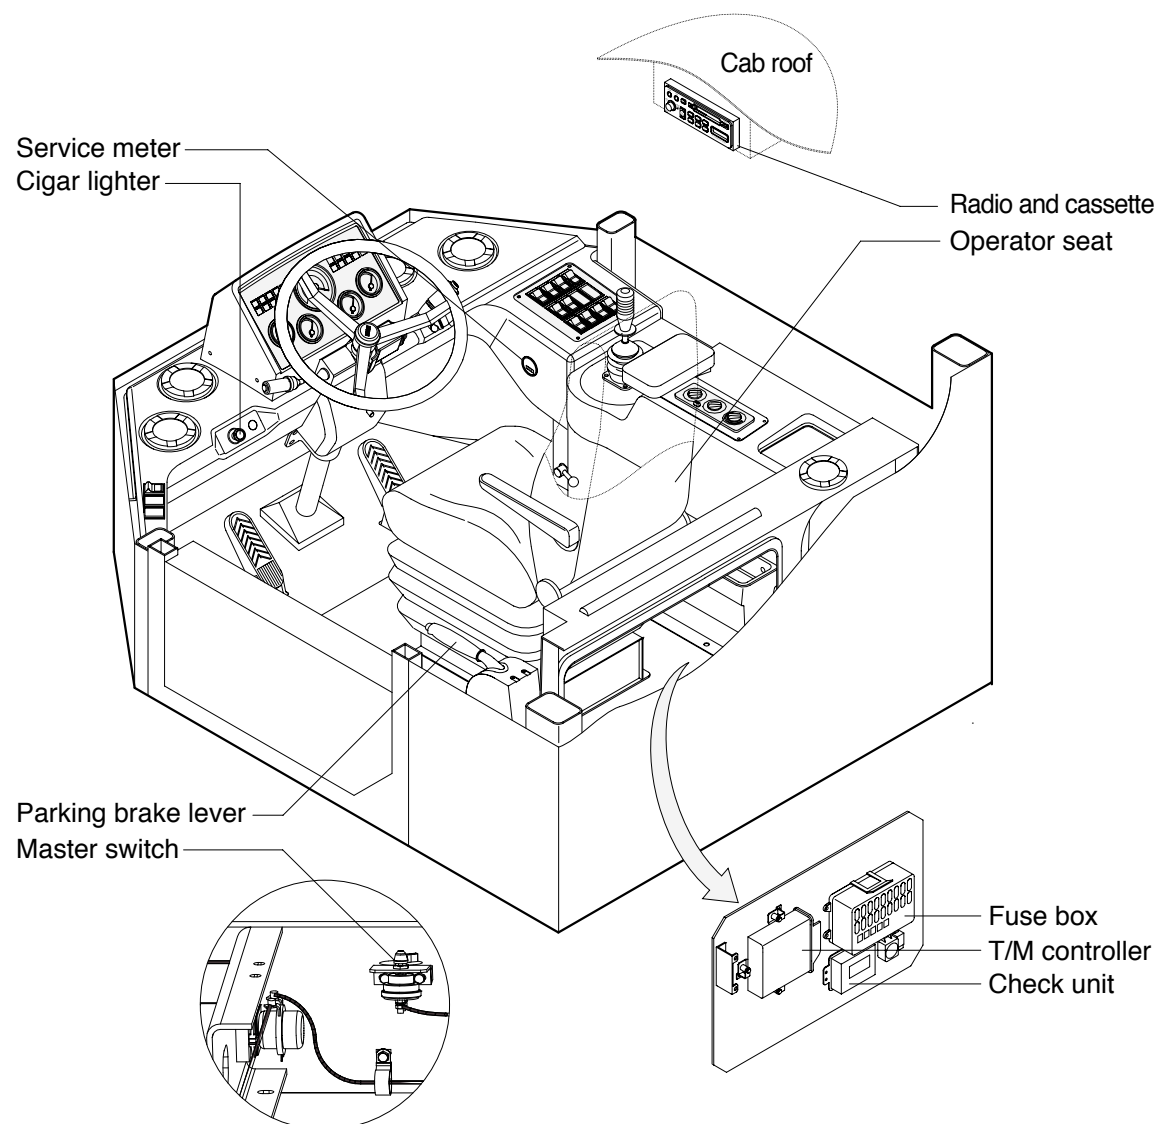

7203CCD06


1) RADIO AND CASSETTE

 High performance audio system is equipped for pleasant operation.

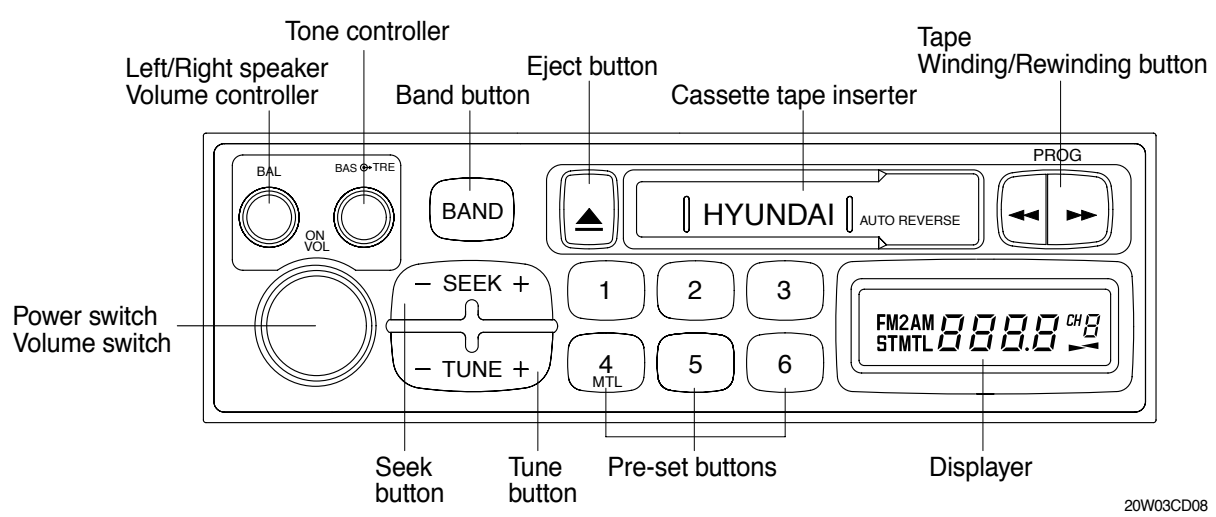

20W03CD08

 
(1) Power and volume switch

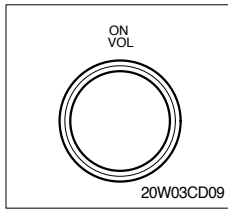

This switch is turned to right, power will be turned ON and the sound is increased.


If it is turned to left, volume will be decreased and power will be turned OFF.

 (2) Seek button

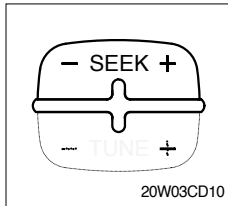

If this seek button is pressed, the radio automatically stops at the next frequency of broadcasting for your listening.

 (3) Tune button

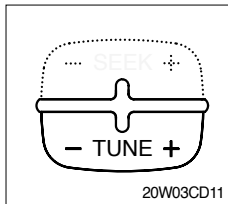

Whenever you press "+" button, higher channels are selected.

Whenever you press "-" button, lower channels are selected.

General

AM band : Frequency changes in 9kHz between 531 to 1602kHz.

FM band : Frequency changes in 0.1MHz between 87.5 to 108.0MHz.

America

AM band : Frequency changes in 10kHz between 530 to 1710kHz.

FM band : Frequency changes in 0.2MHz between 87.9 to 107.9MHz.

 
Europe

LW band : Frequency changes in 9kHz between 153 to 279kHz.

MW band : Frequency changes in 9kHz between 522 to 1620kHz.

FM band : Frequency changes in 0.05MHz between 87.5 to 108.0MHz.

(4) Pre - set button

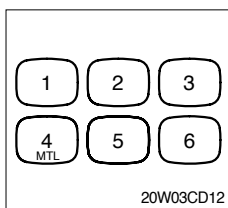


You can immediately listen to the station by pressing pre-set button for which broadcasting station is pre-set.

How to set broadcasting in memory.

- You can pre-set 6 stations each AM/FM band.
- When you want the station to be set in memory, press selected pre-set button for more than 2 seconds.

 (5) Displayer

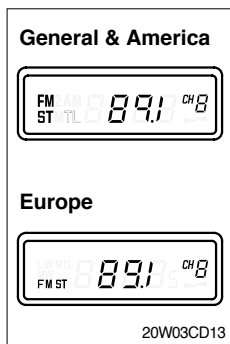

General and America

 
- When radio is turned ON, stereo, AM, FM and reception frequency are displayed.

Europe

- When radio is turned ON, stereo, LW, MW, FM and reception frequency are displayed.

When cassette tape is played, indicator arrow(← , →) are displayed.

(6) Left/Right speaker volume button

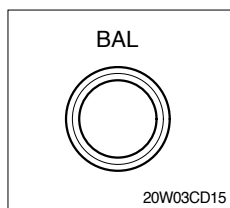


If balance button is pressed, it will spring out.

Volume of right and left speakers will be adjusted by turning the button to right or left.

It will be fixed by pressing again after adjustment.

 (7) Tone button

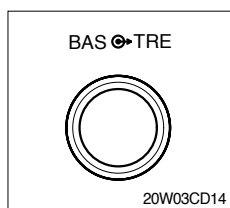

BASS tone

If tone button is pressed, it will spring out.

If it is turned to right, BASS tone is increased, and if it is turned to left, BASS tone is decreased.

 
TREBLE tone

You can adjust the TREBLE tone by pull out the button.

If it is turned to right, TREBLE tone is increased, and if it is turned to left, TREBLE tone is decreased.


It will be fixed by pressing again after adjustment.

(8) Band button

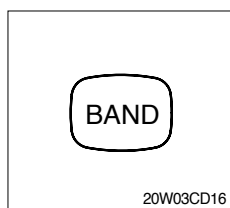

You can listen to broadcasting on AM or FM band by pressing this band selection button.

 (9) Tape winding/Rewinding button

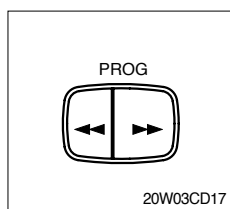


If you press this button once while the tape is playing the direction will be reversed.

If you press one of these buttons the tape will be winding fast or rewinding, and if you press another button on a certain point, the tape will be played.

2) SEAT

 The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

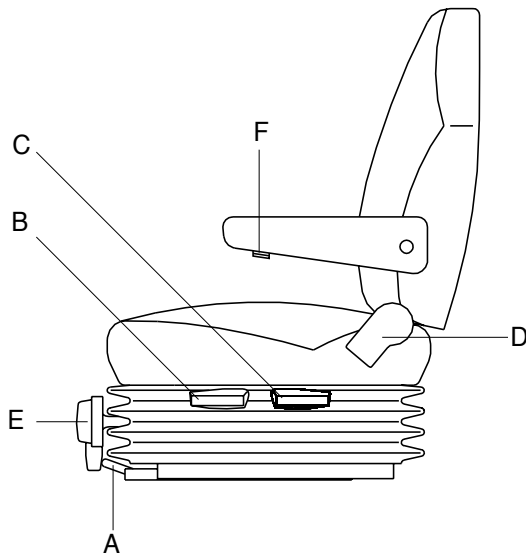

73033CD50

(1) Forward/Backward adjustment

Pull lever A to adjust seat forward or backward.

The seat can be moved forward and backward over 200mm(8in) in 10 steps.

(2) Upward/Downward adjustment

Pull lever B and C to adjust seat upward or downward.

Forward or backward side adjustment only can be made, tilting to one side, by moving lever B or C, respectively.

(3) Reclining adjustment

Pull lever D to adjust seat back rest.

 
(4) Arm rest adjustment

This can be adjusted by turning the handle F to right and left.

(5) Cushion adjustment(E)

Adjusting handle to the operator's weight.

3) CIGAR LIGHTER

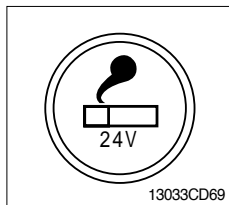

(1) This can be used when the engine starting switch is ON.

 
(2) The lighter can be used when it springs out in a short while after being pressed down.

Service socket

Use cigar lighter socket when you need emergency power.

Do not use the lighter exceeding 24V, 100W.

4) FUSE BOX

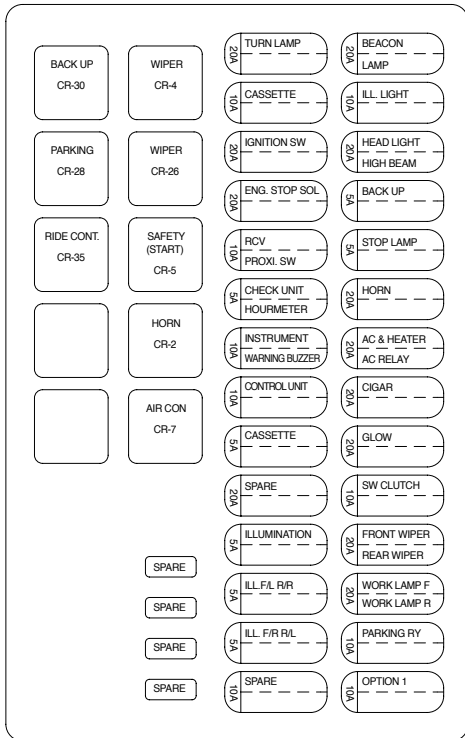


72033CD08

- (1) The fuses protect the electrical parts and wiring from burning out.
- (2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

Replace a fuse with another of the same capacity.

⚠ Before replacing a fuse, be sure to turn OFF the starting switch.

 
5) CHECK UNIT

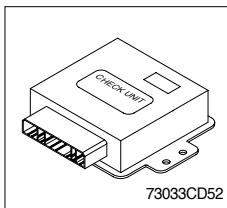

73033CD52

- (1) It consists of electronic parts and controls all lamps and buzzers on the instrument board in accordance with signals transmitted from the switches, the engine and the hydraulic pressure sensors.

 
6) SERVICE METER

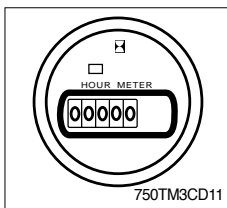

750TM3CD11

- (1) This meter shows the total operation hours of the machine.
- (2) Always ensure the operating condition of the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, **Maintenance**.

 
7) MASTER SWITCH

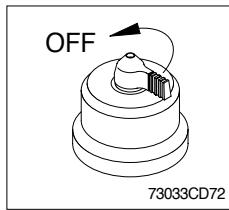

- (1) This switch is used to shut off the entire electrical system.
- (2) ON : The battery remains connected to the electrical system.
OFF : The battery is disconnected to the electrical system.

Never turn the master switch to OFF with the engine running. Engine and electrical system damage could result.

 8) PARKING BRAKE LEVER

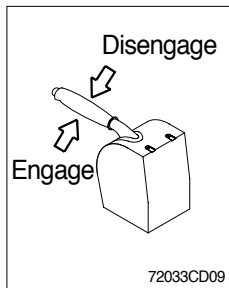

The parking brake lever is located on the left side of the seat. Use the parking brake after the machine is stopped.

(1) Parking brake engaged

Pull up on the parking brake lever in order to engage the parking brake.

The transmission will shift to neutral.

If the parking brake is engaged and the gear selector lever is in a forward position or in a reverse position, the machine will not move.

Move the gear selector lever into NEUTRAL, and then move the gear selector lever into the desired direction in order for the transmission to be in gear.

Do not engage the parking brake while the machine is moving unless the primary service brake fails. The use of the parking brake as a service brake in regular operation will cause severe damage to the brake system.

(2) Parking brake disengaged

Push the button on the top of the parking brake lever. Lower the parking brake lever in order to release the parking brake.