

5. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to chapter 2, **Specification** when you are going to hoist the machine.
 - 2) Use long wire rope and stay to keep the distance with the machine as it should avoid to touch with the machine.
 - 3) Put a rubber plate contact with wire rope and machine to prevent damage.
 - 4) Place crane on the proper place.
 - 5) Install the wire rope and stay like the illustration.
- ⚠ **Make sure wire rope is proper size.**
 - ⚠ **Place the safety lock bar and hydraulic safety lock lever to LOCK position to prevent the machine moving when hoisting the machine.**
 - ⚠ **The wrong hoisting method or installation of wire rope can cause damage to the machine.**
 - ⚠ **Do not load abruptly.**
 - ⚠ **Keep area clear of personnel.**

