

A	
Air cleaner	6-22
Air conditioner & heater	3-23
Air conditioner filter	6-44
Axle oil	6-34
B	
Battery	6-42
Before starting engine	4-2
Belt tensioner	6-21
Boom kick out	4-21
Brake line filter	6-28
Bucket leveler	4-22
C	
Cab device	3-1
Charge air cooler	6-21
Cigar lighter	3-26
Cluster	3-2
Control device	3-20
Coolant level	6-17
E	
Engine control module(ECM)	3-28
Engine oil filter	6-15
Engine oil level	6-15
F	
Fan belt	6-21
Fault codes	3-11
Fuel filter	6-24
Fuse box	3-28
G	
Gear selector lever	3-21
H	
Hydraulic oil changing	6-26
Hydraulic oil filling	6-26
Hydraulic oil level	6-26
Hydraulic safety lock lever	3-22
L	
LCD	3-8
Loading and unloading	5-6
Lubrication	6-37
M	
Machine control unit(MCU)	3-28
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-27
P	
Pilot line filter	6-27
R	
Radiator and oil cooler	6-20
Recommended lubricants	6-9
Return filter	6-27
Radio and cassette	3-29
S	
Safety hints	1-1
Safety labels	0-5
Seat	3-27
Specifications	2-2
Storage	4-25
Switches	3-14
T	
Tightening torque	6-5
Tire	6-29
Towing the machine	5-7
Transmission cold starting	4-6
Transmission oil filter	6-32
Transmission oil level	6-32
Transportation	5-1
Travelling machine	4-9
Troubleshooting guide	7-1
W	
Warming up operation	4-7
Weight	2-5
Working method	4-14