

<b>A</b>		<b>L</b>	
Air cleaner .....	6-22	LCD .....	3-8
Air conditioner & heater .....	3-23	Loading and unloading .....	5-6
Air conditioner filter .....	6-43	Lubrication .....	6-36
Axle oil .....	6-34	<b>M</b>	
<b>B</b>		Machine control unit (MCU) .....	3-28
Battery .....	6-40	Maintenance chart .....	6-13
Before starting engine .....	4-2	Maintenance check list .....	6-10
Belt tensioner .....	6-21	Major components .....	2-1
Boom kick out .....	4-21	Master switch .....	3-27
Brake line filter .....	6-28	<b>P</b>	
Bucket leveler .....	4-22	Pilot line filter .....	6-27
<b>C</b>		<b>R</b>	
Cab device .....	3-1	Radiator and oil cooler .....	6-20
Charge air cooler .....	6-21	Recommended lubricants .....	6-9
Cigar lighter .....	3-26	Return filter .....	6-27
Cluster .....	3-2	Radio and cassette .....	3-29
Control device .....	3-20	<b>S</b>	
Coolant level .....	6-17	Safety hints .....	1-1
<b>E</b>		Safety labels .....	0-5
Engine control module (ECM) .....	3-28	Seat .....	3-27
Engine oil filter .....	6-15	Specifications .....	2-2
Engine oil level .....	6-15	Storage .....	4-25
<b>F</b>		Switches .....	3-14
Fan belt .....	6-21	<b>T</b>	
Fault codes .....	3-11	Tightening torque .....	6-5
Fuel filter .....	6-24	Tire .....	6-29
Fuel prefilter .....	6-24	Towing the machine .....	5-7
Fuse box .....	3-28	Transmission cold starting .....	4-6
<b>G</b>		Transmission control unit (TCU) .....	3-28
Gear selector lever .....	3-21	Transmission oil filter .....	6-32
<b>H</b>		Transmission oil level .....	6-32
Hydraulic oil changing .....	6-26	Transportation .....	5-1
Hydraulic oil filling .....	6-26	Travelling machine .....	4-9
Hydraulic oil level .....	6-26	Troubleshooting guide .....	7-1
Hydraulic safety lock lever .....	3-22	<b>W</b>	
		Warming up operation .....	4-7
		Weight .....	2-3
		Working method .....	4-14