

CONTENTS

Foreword	0-1	5. TRANSPORTATION	
Before servicing this machine	0-2	1. Road traveling	5-1
Table to enter S/No and distribution	0-3	2. Preparation for transportation	5-2
EC regulation approved	0-4	3. Loading the machine	5-3
Safety labels	0-5	4. Fixing the machine	5-4
Guide (direction, S/No, symbol)	0-13	5. Loading and unloading by crane	5-6
		6. Towing the machine	5-7
1. SAFETY HINTS		6. MAINTENANCE	
1. Before operating the machine	1-1	1. Instructions	6-1
2. During operating the machine	1-5	2. Tightening torque	6-5
3. During maintenance	1-14	3. Spec of fuel, coolant and lubricants	6-8
4. Parking	1-18	4. Maintenance check list	6-10
2. SPECIFICATIONS		5. Maintenance chart	6-13
1. Major components	2-1	6. Service instruction	6-15
2. Specifications	2-2	7. Electrical system	6-40
3. Weight	2-3	8. Air conditioner and heater	6-43
4. Specification for major components	2-4	7. TROUBLESHOOTING GUIDE	
3. CONTROL DEVICES		1. Engine	7-1
1. Cab devices	3-1	2. Electrical system	7-2
2. Cluster	3-2	3. Power train system	7-3
3. Monitors	3-11	4. Hydraulic system	7-4
4. Switches	3-25	8. INDEX	8-1
5. Control device	3-32		
6. Air conditioner and heater	3-36		
7. Others	3-40		
4. OPERATION			
1. Suggestion for new machine	4-1		
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3		
4. Warming-up operation	4-6		
5. Operation of the working device	4-7		
6. Traveling of the machine	4-8		
7. Efficient working method	4-13		
8. Adjustment of the work equipment	4-20		
9. Operation in the special work sites	4-21		
10. Storage	4-23		