

## 8. INDEX

<b>A</b>	
Air cleaner	6-22
Air conditioner & heater	3-21
Air conditioner filter	6-45
Axle oil	6-34
<b>B</b>	
Battery	6-42
Before starting engine	4-2
Boom kick out	4-20
Brake line filter	6-27
Bucket leveler	4-21
<b>C</b>	
Cab device	3-1
Check unit	3-27
Cigar lighter	3-26
Cluster	3-2
Control device	3-28
Coolant level	6-17
Corrosion resistor	6-24
<b>E</b>	
Engine oil filter	6-15
Engine oil level	6-15
<b>F</b>	
Fan belt	6-20
Fault codes	3-8
Fuel filter	6-23
Fuel tank	6-22
Fuel water separator	6-23
Fuse box	3-27
<b>G</b>	
Gear selector lever	3-18
<b>H</b>	
Hydraulic oil changing	6-26
Hydraulic oil filling	6-26
Hydraulic oil level	6-25
Hydraulic safety lock lever	3-19
<b>L</b>	
Loading and unloading	5-6
Lubrication	6-36
<b>M</b>	
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-27
<b>P</b>	
Pilot line filter	6-27
<b>R</b>	
Radiator and oil cooler	6-20
Recommended lubricants	6-9
Return filter	6-26
Ridio and cassette	3-23
<b>S</b>	
Safety hints	1-1
Safety labels	0-5
Seat	3-26
Service meter	3-27
Specifications	2-2
Storage	4-24
Switchs	3-11
<b>T</b>	
Tightening torque	6-5
Tire	6-28
Towing the machine	5-7
Transmission cold starting	4-5
Transmission error display	3-28
Transmission oil filter	6-32
Transmission oil level	6-32
Transportation	5-1
Travelling machine	4-8
Troubleshooting guide	7-1
<b>W</b>	
Warming up operation	4-6
Weight	2-5
Working method	4-13