


## 12. RCV LEVER OPERATING PATTERN

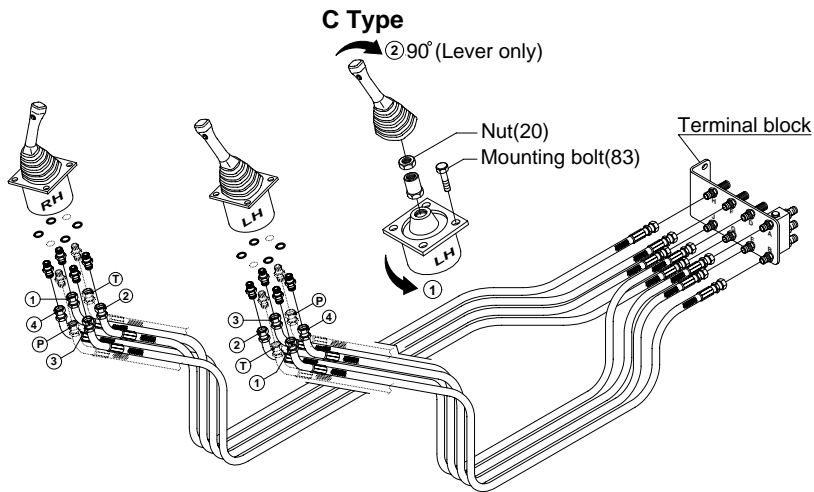

Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

210740P28

Pattern	Operation		Control function	Hose connection(Port)		
	Left	Right		RCV lever	Change of MCV port	
					From	To
ISO Type			Left	Arm out	D	-
				Arm in	E	-
				Swing right	B	-
				Swing left	A	-
			Right	Boom lower	J	-
				Boom raise	H	-
				Bucket out	F	-
Hyundai			Left	Boom lower	D	J
				Boom raise	E	H
				Swing right	B	-
			Right	Swing left	A	-
				Arm out	J	D
				Arm in	H	E
				Bucket out	F	-
A Type			Left	Bucket in	G	-
				Boom lower	D	J
				Boom raise	E	H
			Right	Swing right	B	-
				Swing left	A	-
				Arm out	J	D
				Arm in	H	E
B Type			Left	Bucket out	F	-
				Bucket in	G	-
				Boom lower	D	J
			Right	Boom raise	E	H
				Swing right	F	B
				Swing left	G	A
				Arm out	J	D
C Type			Left	Loosen the RCV lever mounting bolt(83) and rotates lever assy 90, counterclockwise; then install. To put lever in correct position, disassemble nut(20) and rotates only lever 90, clockwise.		
			Right	Same as ISO type		