

<b>A</b>	
Accel dial switch -----	3-10
After engine start -----	4-4
Air breather element -----	6-32
Air cleaner filter -----	6-25
Air conditioner & heater -----	3-21
Air conditioner filter -----	6-47
Alternate exit -----	0-12
Attachment lowering -----	4-29
Axle gear oil -----	6-37
<b>B</b>	
Battery -----	6-44
Before starting engine -----	4-2
Boom lowering -----	4-29
Bucket clearance adjustment -----	6-42
Bucket replacement -----	6-40
Bucket selection guide -----	2-12
Bucket tooth replacement -----	6-41
<b>C</b>	
Cab air filter -----	6-47
Cab device -----	3-1
Cassette & radio -----	3-24
Changing machine control pattern -----	4-32
Charge air cooler -----	6-23
Cigar lighter -----	3-28
Coolant -----	6-20
Cooling fan -----	6-24
CPU controller -----	3-29
<b>D</b>	
Drain filter -----	6-32
Drive shaft lubricate -----	6-34
<b>E</b>	
Engine oil filter -----	6-18
Engine oil level -----	6-18
Engine starting & stop -----	4-3
Engine starting by booster -----	6-45
Engine stop -----	4-6
<b>F</b>	
Fan belt -----	6-24
Fuel filter -----	6-26
Fuel leakage -----	6-29
Fuel system bleeding -----	6-27
Fuel tank -----	6-25
Fuse box -----	3-29
<b>H</b>	
Hydraulic breaker -----	8-1
Hydraulic oil changing -----	6-30
Hydraulic oil filling -----	6-30
Hydraulic oil level -----	6-29
<b>L</b>	
Levers & pedals -----	3-18
Lifting capacities -----	2-5
Lubricant specification -----	2-18
<b>M</b>	
Maintenance check list -----	6-11
Major components -----	2-1
Mode selection system -----	4-7
Monitor display -----	4-12
Monitor panel -----	3-2
Mounting and dismounting -----	1-12
<b>N</b>	
New machine operation -----	4-1
<b>O</b>	
Oil cooler -----	6-23
Operating pattern -----	4-32
<b>P</b>	
Pedals -----	3-18
Periodical replacement parts -----	6-5
Pilot line filter -----	6-31
Pin & bushing adjustment -----	6-43
<b>R</b>	
Radiator flushing -----	6-20
Radio -----	3-24
RCV lever lubricate -----	6-34
Recommended oils -----	2-18, 6-10
Relieving pressure -----	6-3
Resistor -----	3-30
Return filter -----	6-31
<b>Q</b>	
Quick clamp -----	8-6

## S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-28
Seat belt	3-28
Service meter	3-30
Speciation for major component	2-14
Specifications	2-2
Start switch	3-9
Storage	4-30
Suction strainer	6-31
Swing bearing grease	6-33
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-7
Switches	3-9

## T

Tires air pressure	6-36
Torques-major component	6-6
Torques-fastener	6-6
Towing machine	4-18
Transportation	5-2
Transmission gear oil	6-39
Travelling machine	4-15
Travel warming indicator	3-16
Troubleshooting guide	7-1

## W

Warming up operation	4-5
Warning lamps	3-4,5
Water separator	6-26
Weight	2-4
Working device operation	4-14
Working method	4-21
Working range	2-3