

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-31
Air cleaner filter	6-25
Air conditioner & heater	3-21
Air conditioner filter	6-46
Alternate exit	0-12
Attachment lowering	4-29
Axle gear oil	6-36

B

Battery	6-43
Before starting engine	4-2
Boom lowering	4-29
Bucket clearance adjustment	6-41
Bucket replacement	6-39
Bucket selection guide	2-10
Bucket tooth replacement	6-40

C

Cab air filter	6-46
Cab device	3-1
Cassette & radio	3-24
Changing machine control pattern	4-32
Charge air cooler	6-23
Cigar lighter	3-28
Coolant	6-20
Cooling fan	6-23
CPU controller	3-29

D

Drain filter	6-31
Drive shaft lubricate	6-33

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-44
Engine stop	4-6

F

Fan belt	6-24
Fuel filter	6-26
Fuel leakage	6-28

Fuel tank	6-25
Fuel warmer	3-9
Fuse box	3-29

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-29
Hydraulic oil filling	6-29
Hydraulic oil level	6-28

L

LCD	3-5
LCD display lamp	3-6
LCD main operation display	3-3
Levers & pedals	3-18
Lifting capacities	2-7
Lubricant specification	2-15

M

Maintenance check list	6-11
Major components	2-1
Mode selection system	4-7
Monitor display	4-12
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-32

P

Pedals	3-18
Periodical replacement parts	6-5
Pilot line filter	6-31
Pin & bushing adjustment	6-42

R

Radiator flushing	6-20
Radio	3-24
RCV lever lubricate	6-33
Recommended oils	2-18, 6-10
Relieving pressure	6-3
Resistor	3-30

Return filter 6-31

Q

Quick clamp 8-6

S

Safety hints 1-1

Safety labels 0-5

Safety parts 6-5

Seat 3-28

Seat belt 3-28

Service meter 3-30

Speciation for major component 2-11

Specifications 2-2

Start switch 3-9

Storage 4-30

Suction strainer 6-30

Swing bearing grease 6-32

Swing gear 6-32

Swing reduction gear oil 6-32

Switch panel 3-7

Switches 3-9

T

Tires air pressure 6-35

Torques-major component 6-6

Torques-fastener 6-6

Towing machine 4-18

Transportation 5-2

Transmission gear oil 6-38

Travelling machine 4-15

Travel warming indicator 3-16

Troubleshooting guide 7-1

W

Warming up operation 4-5

Warning lamps 3-4,5

Weight 2-6

Working device operation 4-14

Working method 4-21

Working range 2-4