

Foreword .....	0-1	7. Operation in the special work sites .....	4-15
Before servicing this machine .....	0-2	8. Normal operation of excavator .....	4-17
EC regulation approved .....	0-3	9. Attachment lowering .....	4-18
Table to enter S/No and distribution .....	0-4	10. Storage .....	4-19
Safety labels .....	0-5	11. RCV lever operating pattern .....	4-21
Machine data plate .....	0-13		
Guide (direction, S/No, Symbol) .....	0-14		
<b>1. SAFETY HINTS</b>		<b>5. TRANSPORTATION</b>	
1. Before operating the machine .....	1-1	1. Preparation for transportation .....	5-1
2. During operating the machine .....	1-6	2. Loading the machine .....	5-2
3. During maintenance .....	1-13	3. Fixing the machine .....	5-4
4. Parking .....	1-16	4. Loading and unloading by crane .....	5-5
<b>2. SPECIFICATIONS</b>		<b>6. MAINTENANCE</b>	
1. Major components .....	2-1	1. Instruction .....	6-1
2. Specifications .....	2-2	2. Tightening torque .....	6-5
3. Working range .....	2-3	3. Fuel, coolant and lubricants .....	6-8
4. Weight .....	2-4	4. Maintenance check list .....	6-10
5. Lifting capacities .....	2-5	5. Maintenance chart .....	6-15
6. Bucket selection guide .....	2-7	6. Service instruction .....	6-17
7. Undercarriage .....	2-8	7. Electrical system .....	6-34
8. Specification for major components .....	2-9	<b>7. TROUBLESHOOTING GUIDE</b>	
9. Recommended oils .....	2-12	1. Engine .....	7-1
<b>3. CONTROL DEVICES</b>		2. Electrical system .....	7-2
1. Canopy devices .....	3-1	3. Others .....	7-3
2. Cluster .....	3-2	<b>8. HYDRAULIC BREAKER</b>	
3. Switches .....	3-6	1. Selecting hydraulic breaker .....	8-1
4. Levers and pedals .....	3-8	2. Circuit configuration .....	8-2
5. Others .....	3-11	3. Maintenance .....	8-3
<b>4. OPERATION</b>		4. Precaution when operating the breaker .....	8-4
1. Suggestion for new machine .....	4-1	5. Quick clamp .....	8-6
2. Check before starting the engine .....	4-2		
3. Starting and stop the engine .....	4-3		
4. Operation of the working device .....	4-7		
5. Traveling of the machine .....	4-8		
6. Efficient working method .....	4-11		