


## 12. RCV LEVER OPERATING PATTERN

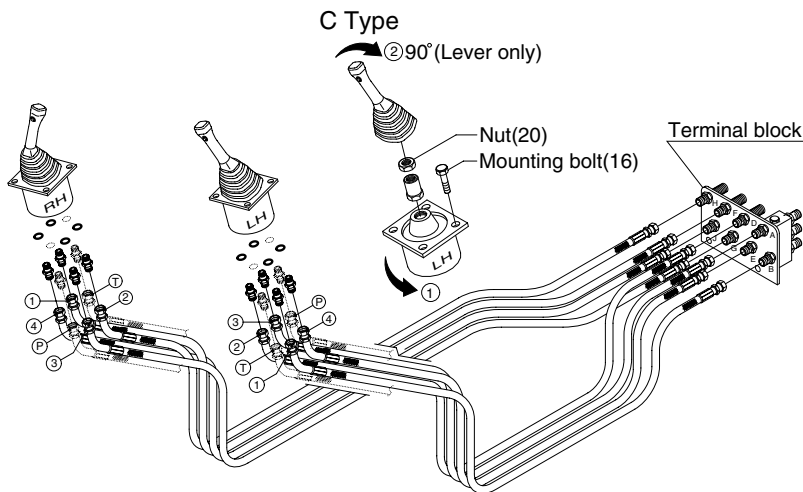

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

17W740P10

Pattern	Operation		Control function	Hose connection(Port)			
	Left	Right		RCV lever	Change of MCV port		
					From	To	
ISO Type  Hyundai			Left	Arm out	②	D	-
				Arm in	④	E	-
				Swing right	③	B	-
				Swing left	①	A	-
			Right	Boom lower	④	J	-
				Boom raise	②	H	-
				Bucket out	①	F	-
A Type			Left	Boom lower	②	D	J
				Boom raise	④	E	H
				Swing right	③	B	-
				Swing left	①	A	-
			Right	Arm out	④	J	D
				Arm in	②	H	E
				Bucket out	①	F	-
B Type			Left	Boom lower	②	D	J
				Boom raise	④	E	H
				Bucket in	③	B	G
				Bucket out	①	A	F
			Right	Arm out	④	J	D
				Arm in	②	H	E
				Swing right	①	F	B
C Type			Left	① Loosen the RCV lever mounting bolt(83) and rotates lever assy 90° counterclockwise; then install.			
				② To put lever in correct position, disassemble nut(20) and rotates only lever 90° clockwise.			
			Right	Same as ISO type			