

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-30
Air cleaner filter	6-25
Air conditioner & heater	3-21
Air conditioner filter	6-45
Alternate exit	0-12
Attachment lowering	4-29
Axle gear oil	6-35

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-29
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-10
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Cassette & radio	3-24
Changing machine control pattern	4-32
Charge air cooler	6-23
Cigar lighter	3-28
Coolant	6-20
Cooling fan	6-23
CPU controller	3-29

D

Drain filter	6-30
Drive shaft lubricate	6-32

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-6

F

Fan belt	6-24
Fuel filter	6-26
Fuel leakage	6-27

Fuel tank	6-25
Fuse box	3-29

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-28
Hydraulic oil level	6-27

L

Levers & pedals	3-18
Lifting capacities	2-7
Lubricant specification	2-15

M

Maintenance check list	6-11
Major components	2-1
Mode selection system	4-7
Monitor display	4-12
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------	-----

O

Oil cooler	6-23
Operating pattern	4-32

P

Pedals	3-18
Periodical replacement parts	6-5
Pilot line filter	6-30
Pin & bushing adjustment	6-41

R

Radiator flushing	6-20
Radio	3-24
RCV lever lubricate	6-32
Recommended oils	2-18, 6-10
Relieving pressure	6-3
Resistor	3-30
Return filter	6-30

Q

Quick clamp	8-6
-------------	-----

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-28
Seat belt	3-28
Service meter	3-30
Speciation for major component	2-11
Specifications	2-2
Start switch	3-9
Storage	4-30
Suction strainer	6-29
Swing bearing grease	6-31
Swing gear	6-31
Swing reduction gear oil	6-31
Switch panel	3-7
Switches	3-9

T

Tires air pressure	6-34
Torques-major component	6-6
Torques-fastener	6-6
Towing machine	4-18
Transportation	5-2
Transmission gear oil	6-37
Travelling machine	4-15
Travel warming indicator	3-16
Troubleshooting guide	7-1

W

Warming up operation	4-5
Warning lamps	3-4,5
Water separator	6-26
Weight	2-6
Working device operation	4-14
Working method	4-21
Working range	2-4