

3. OTHERS

Trouble	Service	Remark
Bucket either rises slowly or not at all.	· Add oil to specified level.	
Slow speed of travel, swing, boom, arm and bucket.	· Add oil to specified level.	
Unusual noise emitted from pump.	· Clean the hydraulic tank strainer.	
Excessive oil temperature rise of hydraulic oil.	· Clean the oil cooler. · Adjust fan belt tension. · Add oil to specified level.	