

## A

Accel dial switch .....	3-10
After engine start .....	4-4
Air breather element .....	6-31
Air cleaner filter .....	6-25
Air conditioner & heater .....	3-21
Air conditioner filter .....	6-46
Alternate exit .....	0-12
Attachment lowering .....	4-29
Axle gear oil .....	6-36

## B

Battery .....	6-43
Before starting engine .....	4-2
Boom lowering .....	4-29
Bucket clearance adjustment .....	6-41
Bucket replacement .....	6-39
Bucket selection guide .....	2-10
Bucket tooth replacement .....	6-40

## C

Cab air filter .....	6-46
Cab device .....	3-1
Cassette & radio .....	3-24
Changing machine control pattern .....	4-32
Charge air cooler .....	6-23
Cigar lighter .....	3-28
Coolant .....	6-20
Cooling fan .....	6-23
CPU controller .....	3-29

## D

Drain filter .....	6-31
Drive shaft lubricate .....	6-33

## E

Engine oil filter .....	6-18
Engine oil level .....	6-18
Engine starting & stop .....	4-3
Engine starting by booster .....	6-44
Engine stop .....	4-6

## F

Fan belt .....	6-24
Fuel filter .....	6-26
Fuel leakage .....	6-28

Fuel tank .....	6-25
Fuel warmer .....	3-9
Fuse box .....	3-29

## H

Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-29
Hydraulic oil filling .....	6-29
Hydraulic oil level .....	6-28

## L

LCD .....	3-5
LCD display lamp .....	3-6
LCD main operation display .....	3-3
Levers & pedals .....	3-18
Lifting capacities .....	2-7
Lubricant specification .....	2-15

## M

Maintenance check list .....	6-11
Major components .....	2-1
Mode selection system .....	4-7
Monitor display .....	4-12
Monitor panel .....	3-2
Mounting and dismounting .....	1-12

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-23
Operating pattern .....	4-32

## P

Pedals .....	3-18
Periodical replacement parts .....	6-5
Pilot line filter .....	6-31
Pin & bushing adjustment .....	6-42

## R

Radiator flushing .....	6-20
Radio .....	3-24
RCV lever lubricate .....	6-33
Recommended oils .....	2-18, 6-10
Relieving pressure .....	6-3
Resistor .....	3-30

Return filter ..... 6-31

## **Q**

Quick clamp ..... 8-6

## **S**

Safety hints ..... 1-1

Safety labels ..... 0-5

Safety parts ..... 6-5

Seat ..... 3-28

Seat belt ..... 3-28

Service meter ..... 3-30

Speciation for major component ..... 2-11

Specifications ..... 2-2

Start switch ..... 3-9

Storage ..... 4-30

Suction strainer ..... 6-30

Swing bearing grease ..... 6-32

Swing gear ..... 6-32

Swing reduction gear oil ..... 6-32

Switch panel ..... 3-7

Switches ..... 3-9

## **T**

Tires air pressure ..... 6-35

Torques-major component ..... 6-6

Torques-fastener ..... 6-6

Towing machine ..... 4-18

Transportation ..... 5-2

Transmission gear oil ..... 6-38

Travelling machine ..... 4-15

Travel warming indicator ..... 3-16

Troubleshooting guide ..... 7-1

## **W**

Warming up operation ..... 4-5

Warning lamps ..... 3-4,5

Weight ..... 2-6

Working device operation ..... 4-14

Working method ..... 4-21

Working range ..... 2-4