

# CONTENTS

Foreword .....	0-1	7. Efficient working method .....	4-18
Before servicing this machine .....	0-2	8. Operation in the special work sites .....	4-23
EC regulation approved .....	0-3	9. Normal operation of excavator .....	4-25
Table to enter S/No and distribution .....	0-4	10. Attachment lowering .....	4-26
Safety labels .....	0-5	11. Storage .....	4-27
Machine data plate .....	0-17	12. RCV lever operating pattern .....	4-29
Guide (direction, S/No, symbol) .....	0-18	13. Switching hydraulic attachment circuit .....	4-31

## SAFETY HINTS

1. Before operating the machine .....	1-1
2. During operating the machine .....	1-6
3. During maintenance .....	1-13
4. Parking .....	1-16

## SPECIFICATIONS

1. Major components .....	2-1
2. Specifications .....	2-2
3. Working range .....	2-3
4. Weight .....	2-5
5. Lifting capacities .....	2-7
6. Bucket selection guide .....	2-9
7. Specification for major components .....	2-10
8. Recommended oils .....	2-14

## CONTROL DEVICES

1. Cab devices .....	3-1
2. Cluster .....	3-2
3. Switches .....	3-23
4. Levers and pedals .....	3-32
5. Air conditioner and heater .....	3-35
6. Others .....	3-42

## OPERATION

1. Suggestion for new machine .....	4-1
2. Check before starting the engine .....	4-2
3. Starting and stop the engine .....	4-3
4. Mode selection system .....	4-6
5. Operation of the working device .....	4-11
6. Traveling of the machine .....	4-12

## TRANSPORTATION

1. Road traveling .....	5-1
2. Preparation for transportation .....	5-2
3. Dimension and weight .....	5-3
4. Loading the machine .....	5-5
5. Fixing the machine .....	5-7
6. Loading and unloading by crane .....	5-8

## MAINTENANCE

1. Instruction .....	6-1
2. Tightening torque .....	6-6
3. Fuel, coolant and lubricants .....	6-9
4. Maintenance check list .....	6-11
5. Maintenance chart .....	6-16
6. Service instruction .....	6-18
7. Electrical system .....	6-44
8. Air conditioner and heater .....	6-47

## TROUBLESHOOTING GUIDE

1. Engine .....	7-1
2. Electrical system .....	7-2
3. Others .....	7-3

## HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting hydraulic breaker .....	8-1
2. Circuit configuration .....	8-2
3. Maintenance .....	8-3
4. Precaution while operating the breaker .....	8-4
5. Quick clamp .....	8-6

INDEX .....	9-1
-------------	-----

## EC Declaration of conformity - update 04/01/'10

1. We hereby declare that the following machine comply with the machine directive 2006/42/EC, EMC-directive 2004/108/EC, Non-road mobile machinery emission directive 97/68/EC (amended by 2002/88/EC, 2004/26/EC, 2006/105/EC) and noise emission 2000/14/EC (amended by 2005/88/EC).

Excavator	Model :	*****
	Serial Nr. :	***

2. Manufacturer	Hyundai Heavy Industries Co. Ltd. 1 Chonha-Dong, Dong-Ku Ulsan The republic of Korea
-----------------	---

Authorized representative : Owner of the technical file for machine production. (TCF : Technical Construction File)	Hyundai Heavy Industries Europe N.V. Vossendal 11 2440 Geel Belgium
--	--

3. Harmonized European directives :	EN474-1:2006 +A1:2009, EN474-5: 2006, EN ISO 12100-1:2003, EN ISO 12100-2:2003, EN ISO 2867:2008, EN ISO 7096:2008, EN ISO 6683:2008, EN ISO 2860:2008, EN ISO 6682:2008, EN ISO 3744:2009, EN 982:1996+A1:2008, EN ISO 3457:2008 EN ISO 2860:2008, EN ISO 7096:2008, ISO 5006: 2006
-------------------------------------	--

4. Noise level :

Certain n° :	e13*2000/14*2005/88*0059*08
--------------	-----------------------------

Date :	2009-06-17
--------	------------

Conformity assessment procedure :	Attachment VIII following the periodical inspection on technical extended with "Information on the scope of delivery" by TÜV Rheinland.
-----------------------------------	---

Authorized entity :	Société Nationale de Certification et d'Homologation s.à r.l CE0499 11, route de Luxembourg 5230 Sandweiler Luxemburg
---------------------	--

Engine power :	*** kW
----------------	--------

Guaranteed sound power level :	*** dB (A)
--------------------------------	------------

5. Remarks

\*\*\*\*\*

Managing Director

Geel, Belgium

\*\*/\*\*/\*\*\*\*\*

## FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or for questions regarding information in this manual.

## BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.


## EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.

LWA : 103dB (EU only)

LPA : 71dB

- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)

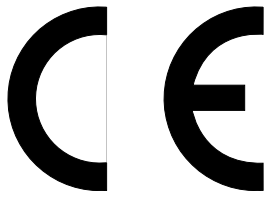 


**TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR**

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	Hyundai Heavy Industries co., Ltd. 1, Jeonha-Dong, Dong-Ku, Ulsan 682-792, Korea
Distributor for U.S.A Address	Hyundai Heavy Industries U.S.A, Inc 955 Estes Avenue EIK Grove village IL, 60001 U.S.A
Distributor for Europe Address	Hyundai Heavy Industries Europe N. V. Vossendal 11 2240 Geel Belgium
Dealer Address	

# SAFETY LABELS

## 1. LOCATION

 Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

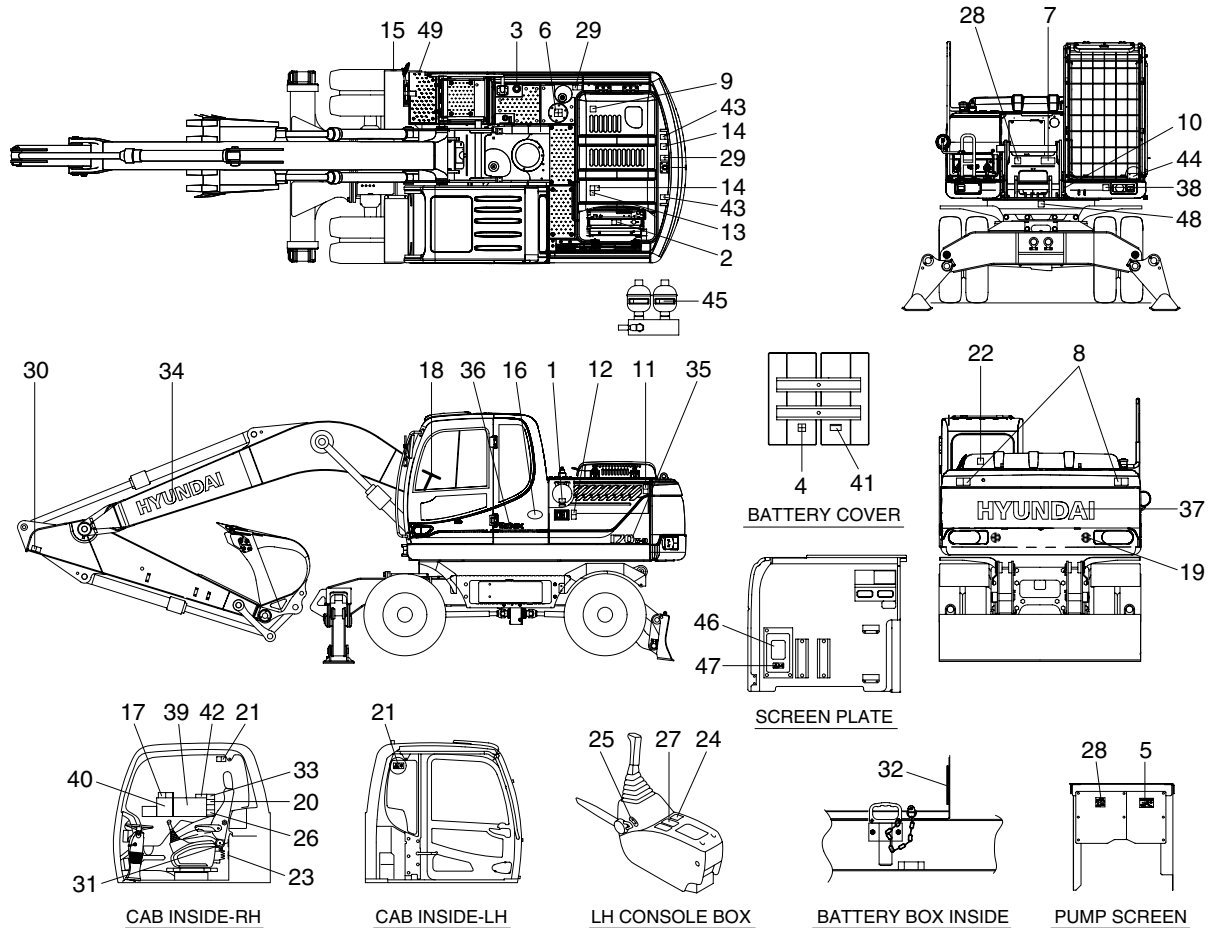

17W90SL01

- |                                |                                       |                        |
|--------------------------------|---------------------------------------|------------------------|
| 1 Air cleaner filter           | 18 Steering wheel                     | 35 Model name          |
| 2 Radiator cap                 | 19 Reflecting                         | 36 Logo (ROBEX)        |
| 3 Fueling                      | 20 Ref operator manual-cab. RH pillar | 37 Trade mark (CWT)    |
| 4 Battery accident             | 21 Safety front window                | 38 Noise level (LWA)   |
| 5 Hydraulic oil level          | 22 Alternate exit                     | 39 Service instruction |
| 6 Hydraulic oil lubrication    | 23 Air conditioner filter             | 40 Lifting chart       |
| 7 Reduction gear grease        | 24 Console box tilting                | 41 ECM connector       |
| 8 Keep clear-rear              | 25 Safety lever                       | 42 Turbocharger        |
| 9 Turbocharger cover           | 26 Locking clamp                      | 43 Lifting eye         |
| 10 Name plate                  | 27 Ideogram-dozer/outrigger           | 44 FOPS FOG plate      |
| 11 Keep clear-side             | 28 High pressure hose                 | 45 Accumulator         |
| 12 Stay fix                    | 29 Falling                            | 46 Control ideogram    |
| 13 Shearing-engine hood        | 30 Keep clear-boom/arm                | 47 RCV-lever pattern   |
| 14 No step-engine hood and CWT | 31 Hammer                             | 48 Swing bearing       |
| 15 Transporting                | 32 Swing ideogram                     | 49 Battery position    |
| 16 Low emission engine         | 33 Swing lock                         |                        |
| 17 Control ideogram            | 34 Trade mark (boom)                  |                        |

## 2. DESCRIPTION

 
There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

### 1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

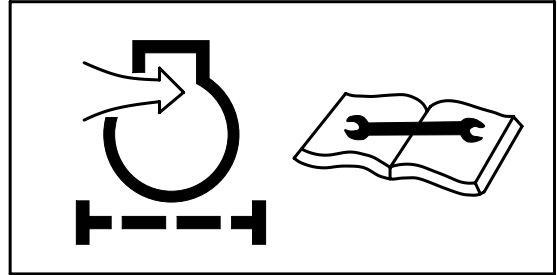

21070FW01

### 2) RADIATOR CAP (item 2)

This warning label is positioned on the radiator.

- ▲ **Never open the filler cap while engine running or at high coolant temperature.**

 


14070FW03

### 3) FUELING (item 3)

This warning label is positioned on the fuel filler neck.

- ▲ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

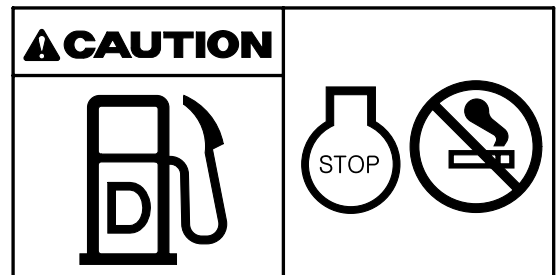

21070FW04

#### 4) BATTERY ACCIDENT (item 4)

This warning label is positioned on the battery cover.

⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**

※ **Maintain the electrolyte at the recommended level.**

 
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

⚠ **Extinguish all smoking materials and open flames before checking the battery.**

⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**

⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**

⚠ **For safety from electric shock, do not battery terminals with a wet hand.**

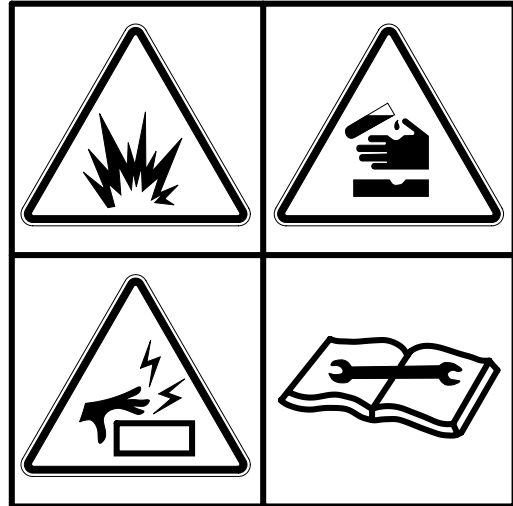

36070FW05


#### 5) HYDRAULIC OIL LEVEL (item 5)

 This warning label is positioned on the screen plate.

⚠ **Place the bucket on the ground whenever servicing the hydraulic system.**

※ **Check oil level on the level gauge.**

※ **Refill the recommended hydraulic oil up to specified level if necessary.**

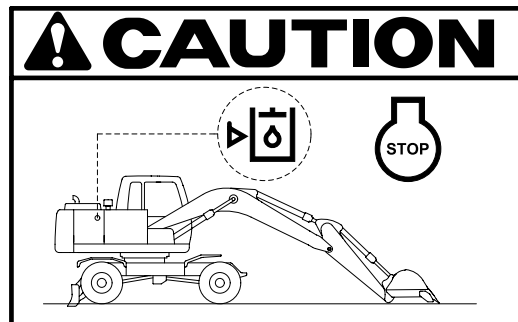

20W70FW07A

**6) HYDRAULIC OIL LUBRICATION (item 6)**

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

 


21070FW08

**7) REDUCTION GEAR GREASE (item 7)**

This warning label is positioned in the front of upper frame.

- ▲ Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

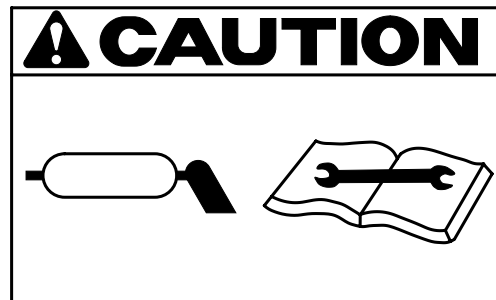


21070FW35

**8) KEEP CLEAR-REAR (item 8)**

 This warning label is positioned on the counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

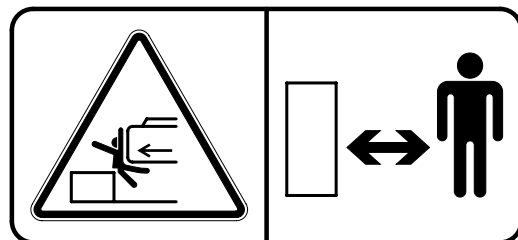

21090FW09

**9) TURBOCHARGER COVER (item 9)**

This warning label is positioned on the turbocharger cover.

- ▲ Do not touch turbo charger or it may cause severe burn.

 


21070FW02

**10) KEEP CLEAR-SIDE (item 11)**

This warning label is positioned on the LH side cover.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

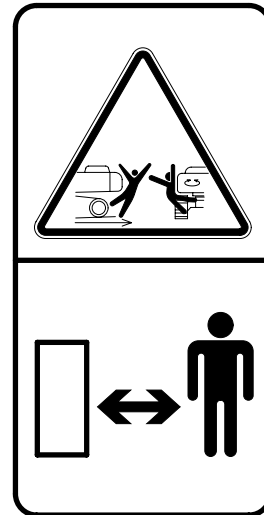

21070FW13

**11) STAY FIX (item 12)**

This warning label is positioned on the both side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**

 


21070FW14

**12) SHEARING-ENGINE HOOD (item 13)**

This warning label is positioned on the engine hood.

- ⚠ **Do not open the engine hood during the engine's running.**
- ⚠ **Do not touch exhaust pipe or it may cause severe burn.**

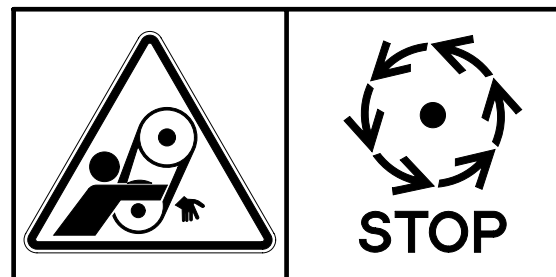


21070FW15

**13) NO STEP-ENGINE HOOD/CWT (item 14)**

 This warning labels are positioned on the engine hood and counterweight.

- △ **Do not step on the engine hood and counterweight.**

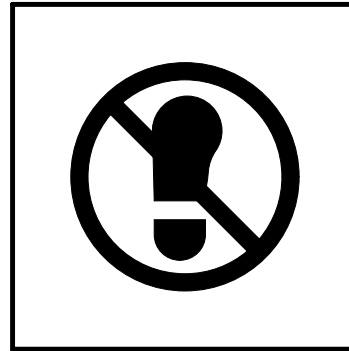


21070FW16

**14) TRANSPORTING (item 15)**

 This warning label is positioned right side of upper frame.

- ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**
- ※ See page 5-7 for details.

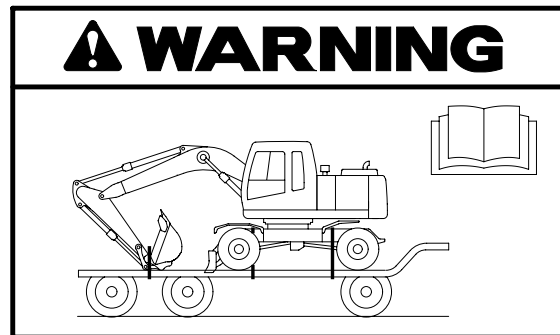


20W70FW17

**15) CONTROL IDEOGRAM (item 17)**

 This warning label is positioned in right window of the cab.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**
- ▲ **Failure to do so could result in injury or death.**
- ※ See page 4-11 for details.

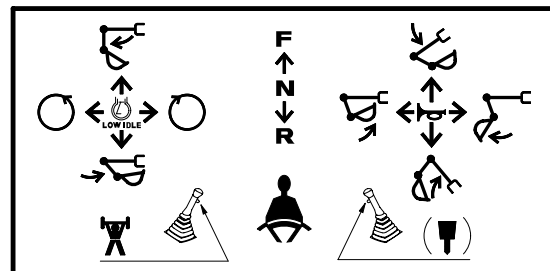


20W70FW19

**16) REF OPERATOR MANUAL (item 20)**

 This warning label is positioned on the right side window of the cab.

- ▲ **Study the operator's manual before starting and operating machine.**

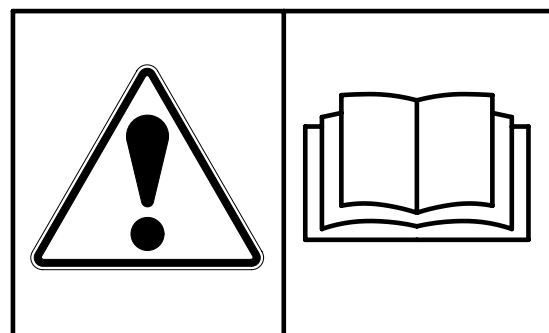


21070FW22

17) **MAX HEIGHT** (item 20)

This warning label is positioned on the right side window of the cab.

- ▲ **Serious injury or death can result from contact with electric lines.**

 An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

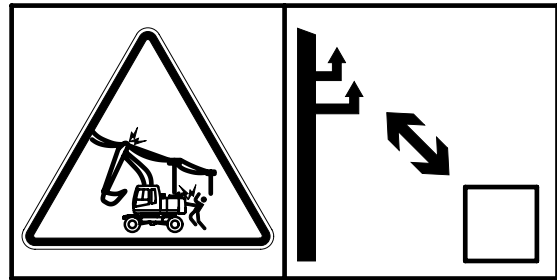

20W70FW23

18) **INTERFERENCE** (item 20)

This warning label is positioned on the right side window of the cab.

- ▲ **Be careful to operate machine equipped with quick clamp or extensions.**
- ▲ **Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.**

 


20W70FW62

19) **SAFETY FRONT WINDOW** (item 21)

This warning label is positioned on the both side window of the cab.

- ▲ **Be careful that the front window may be promptly closed.**

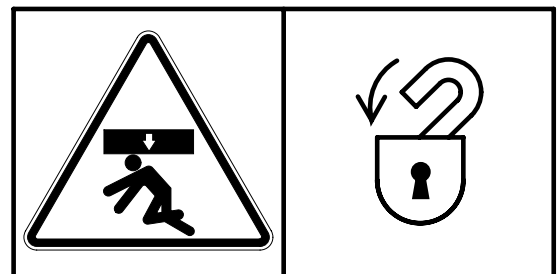


21070FW24

20) **ALTERNATE EXIT** (item 22)

This warning label is positioned on the inside of rear window.

 - ※ **The rear window serves us an alternate exit.**
- ※ **To remove rear window, pull the ring and push out the glass.**

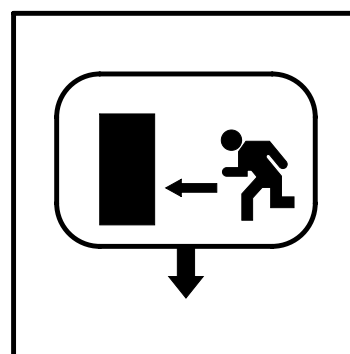


21070FW25

### 21) AIR CONDITIONER FILTER (item 23)

 This warning label is positioned on the air conditioner cover.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

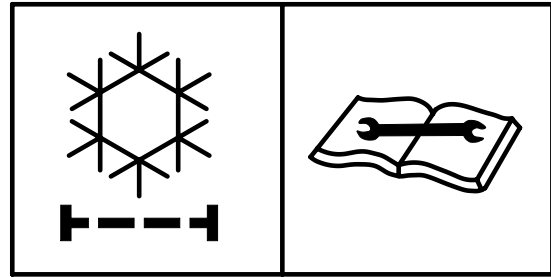


21070FW26

### 22) CONSOLE BOX TILTING (item 24)

 This warning label is positioned on the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**

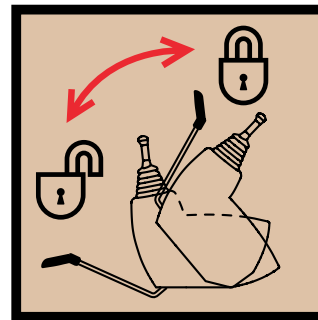


30007A1FW06

### 23) SAFETY LEVER (item 25)

 This warning label is positioned on the cover of the safety lever.

- ▲ **Before you get off the machine be sure to place the safety lever LOCKED position.**

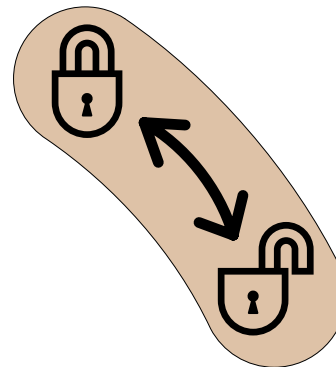


30007A1FW07A

### 24) CLAMP-LOCKING (item 26)

 This warning label is positioned on the right side window of cab.

- ▲ **Serious injury or death can result from dropping bucket.**
- ▲ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

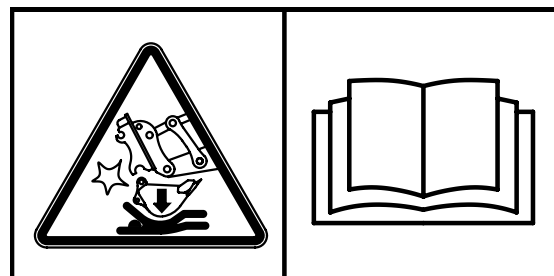

14070FW60

**25) HIGH PRESSURE HOSE (item 28)**

This warning label is positioned on the screen plate.

- ▲ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.



14070FW29

**26) FALLING (item 29)**

This warning label is positioned on the top of the hydraulic tank.

- ▲ Falling is one of the major cause of personal injury.
- ▲ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.



14070FW30

**27) KEEP CLEAR-BOOM/ARM (item 30)**

This warning label is positioned on both side of the boom.

- ▲ Serious injury or death can result from falling of the attachment.
- ▲ To prevent serious injury or death, keep clear the underneath of attachment.

 


14070FW31

### 28) SWING IDEOGRAM (item 32)

This warning label is positioned in the tool box.

- ▲ Before you operating the machine, be sure to release the swing lock pin in the tool box.

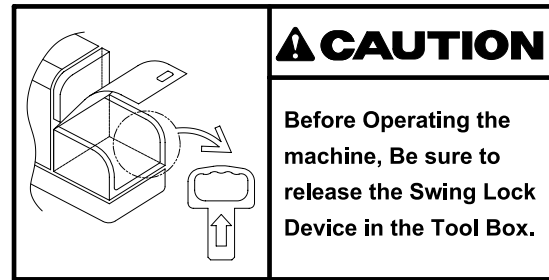


20W70FW63

### 29) SWING LOCK (item 33)

 This warning label is positioned on the right side frame of the cab.

- ▲ Before you leaving the machine, always place the swing lock pin securely in the LOCK position.

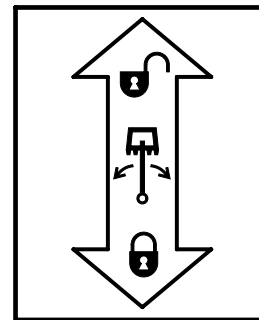


20W70FW64

### 30) ECM CONNECTOR (item 41)

 This warning label is positioned on the battery cover.

- ▲ Before carrying out any electric welding on this machine, follow the below procedure.
  - Pull the connector out of all electric control units.
  - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ See page 6-46 for detail.

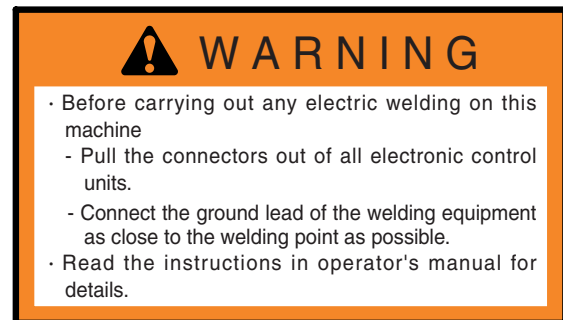


7807AFW20

### 31) TURBOCHARGER (item 42)

 This warning label is positioned in right window of the cab.

- ▲ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

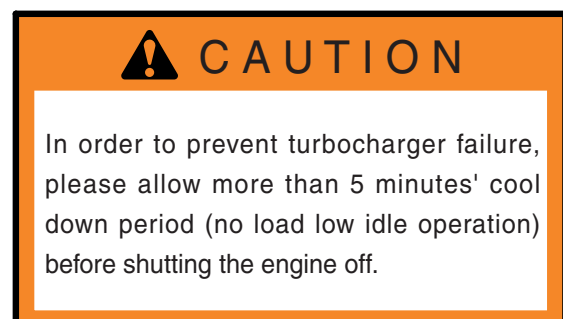


7807AFW20

### 32) LIFTING EYE (item 43)

 This warning label is positioned on the counterweight.

- ⚠ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.

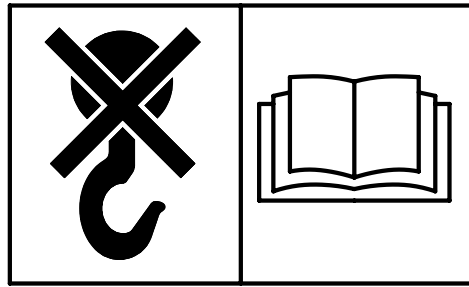


21070FW10

### 33) ACCUMULATOR (item 45)

 This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- ⚠ Never make any hole in the accumulator expose it to flame or fire.
- ⚠ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.

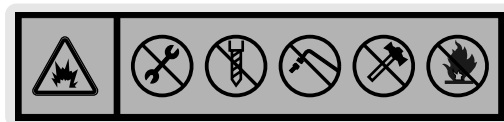

1107A0FW46


### 34) CONTROL IDEOGRAM (item 46)

This warning label is positioned inside of LH side cover.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-11 for details.

**⚠ WARNING**





 
 

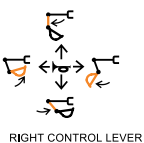 
- THE MACHINE CONTROL PATTERN CAN EASILY BE CHANGED TO THE "ISO TYPE" OR TO THE "A TYPE" BY CHANGING THE POSITION OF THE LEVER-PATTERN.
- BEFORE STARTING THIS MACHINE, CHECK THE LEVER PATTERN VALVE.

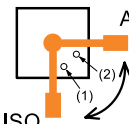

**ISO**

**A**

- HOW TO USE :
  1. LOOSEN BOLT(1) OR BOLT(2).
  2. MOVE LEVER TO THE "ISO" OR "A" POSITION.
  3. AFTER SETTING THE PATTERN, TIGHTEN BOLT TO SECURE LEVER
    - BOLT(1) FOR "ISO" PATTERN
    - BOLT(2) FOR "A" PATTERN
- REFER TO OPERATOR'S MANUAL FOR DETAILS.

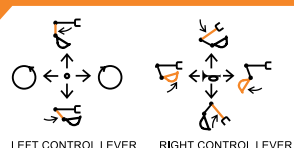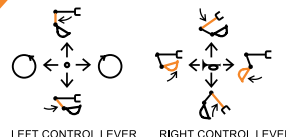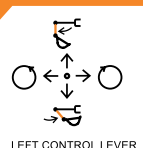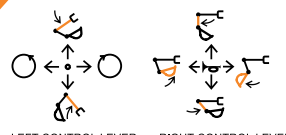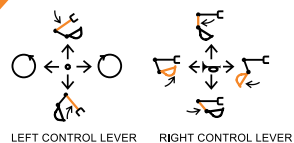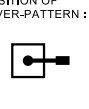 
ISO TYPE	POSITION OF LEVER-PATTERN :	LEFT CONTROL LEVER	RIGHT CONTROL LEVER
			
A TYPE	POSITION OF LEVER-PATTERN :	LEFT CONTROL LEVER	RIGHT CONTROL LEVER
			

14W90FW99

**35) RCV lever pattern (item 47)**

This warning label is positioned on the screen plate.

※ See page 4-29 for details.

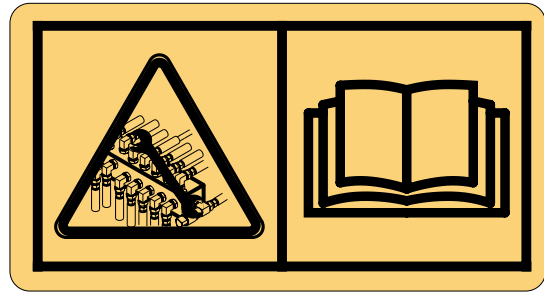


14W90FW47

**36) Swing bearing (item 48)**

 This warning label is positioned in the front of swing ring gear.


※ See page 6-33 for details.

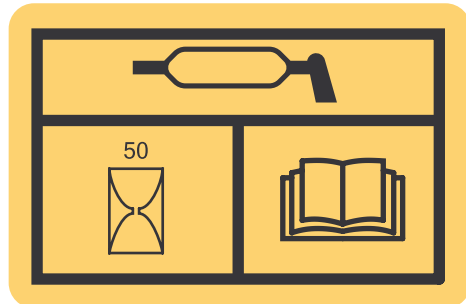

38090FW02


**37) Battery position (item 49)**

 This warning label is positioned right side of tool box.

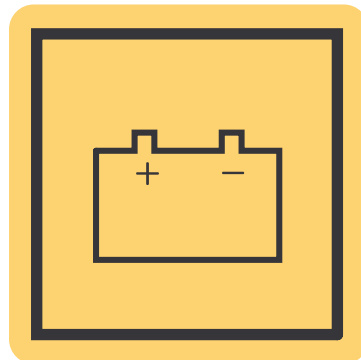

38090FW03

## MACHINE DATA PLATE

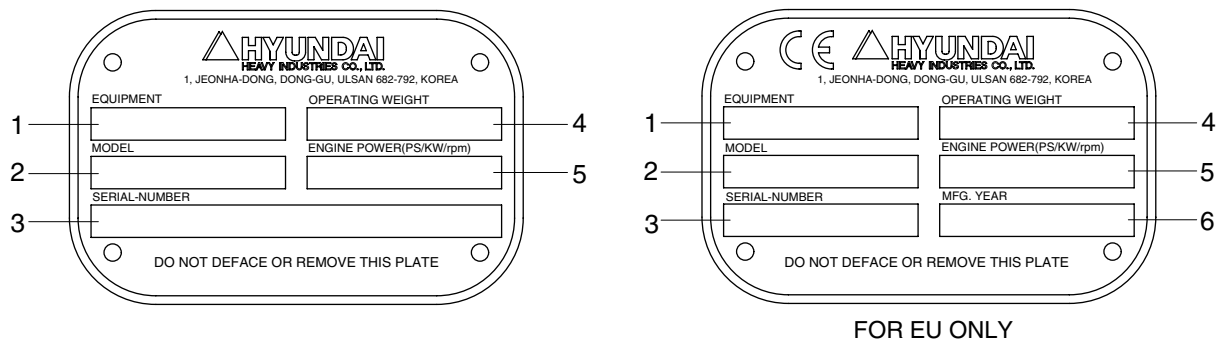 

21090FW10


- |   |            |   |                  |   |                    |
|---|------------|---|------------------|---|--------------------|
| 1 | Equipment  | 3 | Serial number    | 5 | Engine power       |
| 2 | Model name | 4 | Operating weight | 6 | Manufacturing year |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.

## GUIDE
 
### 1. DIRECTION

The direction of this manual indicate forward, backward, right and left on the standard of operator when the dozer blade is in the rear and machine is on the traveling direction.

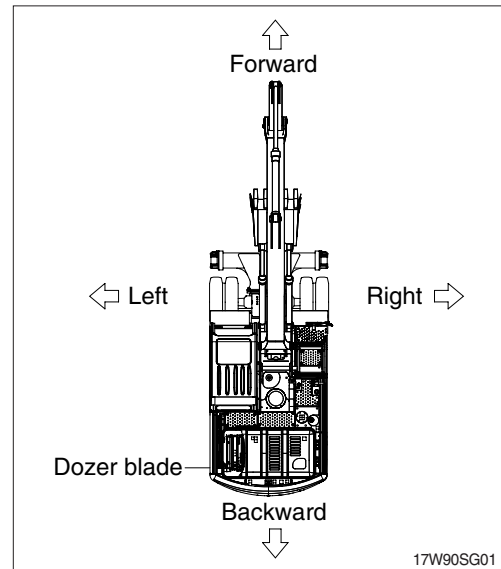


### 2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


#### 1) MACHINE SERIAL NUMBER

 The numbers are located below the right window of the operator's cab.

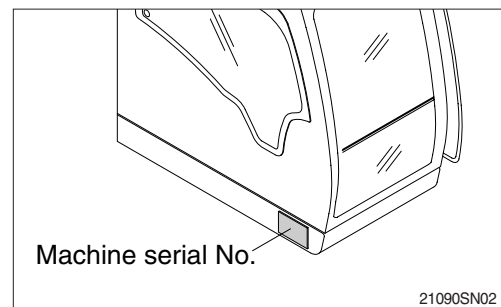

#### 2) ENGINE SERIAL NUMBER

 The numbers are located on the engine name plate.

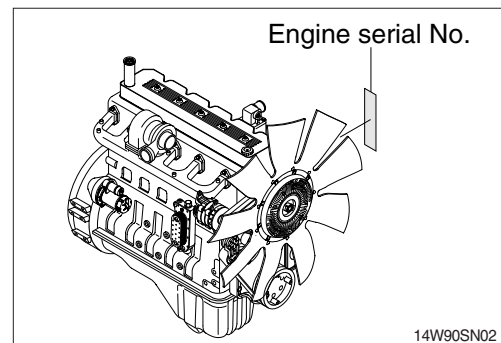

### 3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

### 4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.