


12. RCV LEVER OPERATING PATTERN

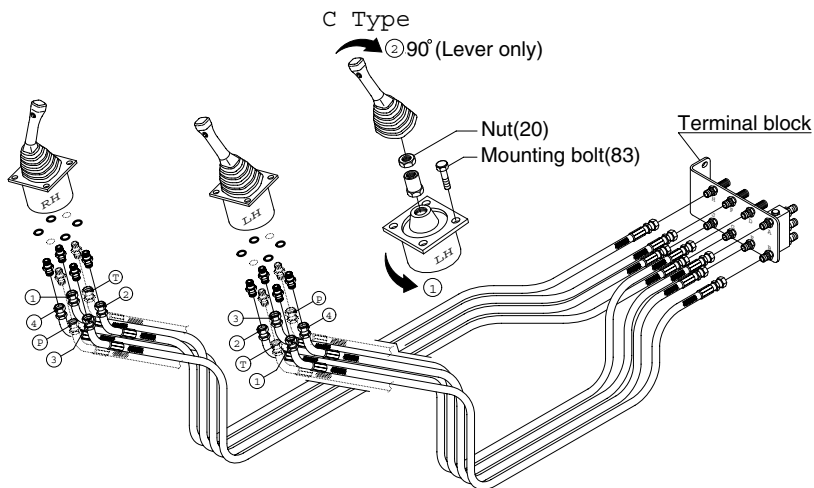

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

210740P28

Pattern	Operation		Control function	Hose connection(Port)						
	Left	Right		RCV lever	Change of MCV port					
					From	To				
ISO Type			Left	Arm out	②	D	-			
				Arm in	④	E	-			
				Swing right	③	B	-			
				Swing left	①	A	-			
			Right	Boom lower	④	J	-			
				Boom raise	②	H	-			
				Bucket out	①	F	-			
Hyundai			Right	Bucket in	③	G	-			
				Boom lower	②	D	J			
			Left	Boom raise	④	E	H			
				Swing right	③	B	-			
				Swing left	①	A	-			
				Right	Arm out	④	J	D		
					Arm in	②	H	E		
A Type			Left	Bucket out	①	F	-			
				Bucket in	③	G	-			
				Right	Boom lower	②	D	J		
					Boom raise	④	E	H		
			Swing right		③	B	G			
			B Type			Left	Swing left	①	A	-
							Arm out	④	J	D
Arm in	②	H					E			
Right	Swing right	①					F	B		
	Swing left	③				G	A			
	Bucket out	①				A	F			
C Type						Left	① Loosen the RCV lever mounting bolt(83) and rotates lever assy 90° counterclockwise; then install.			
			② To put lever in correct position, disassemble nut(20) and rotates only lever 90° clockwise.							
			Right	Same as ISO type						