

# CONTENTS

Foreword .....	0-1	6. Traveling of the machine .....	4-12	
Before servicing this machine .....	0-2	7. Efficient working method .....	4-15	
EC regulation approved .....	0-3	8. Operation in the special work sites .....	4-19	
Table to enter S/No and distribution .....	0-4	9. Normal operation of excavator .....	4-21	
Safety labels .....	0-5	10. Attachment lowering .....	4-22	
Machine data plate .....	0-18	11. Storage .....	4-23	
Guide (direction, S/No, symbol) .....	0-19	12. RCV lever operating pattern .....	4-25	
		13. Switching hydraulic attachment circuit .....	4-27	
<b>SAFETY HINTS</b>				
1. Before operating the machine .....	1-1	<b>TRANSPORTATION</b>		
2. During operating the machine .....	1-6	1. Preparation for transportation .....	5-1	
3. During maintenance .....	1-13	2. Dimension and weight .....	5-2	
4. Parking .....	1-16	3. Loading the machine .....	5-4	
		4. Fixing the machine .....	5-6	
<b>SPECIFICATIONS</b>				
1. Major components .....	2-1	5. Loading and unloading by crane .....	5-7	
2. Specifications .....	2-2	<b>MAINTENANCE</b>		
3. Working range .....	2-3	1. Instruction .....	6-1	
4. Weight .....	2-4	2. Tightening torque .....	6-6	
5. Lifting capacities .....	2-5	3. Fuel, coolant and lubricants .....	6-9	
6. Bucket selection guide .....	2-7	4. Maintenance check list .....	6-11	
7. Undercarriage .....	2-9	5. Maintenance chart .....	6-16	
8. Specification for major components .....	2-11	6. Service instruction .....	6-18	
9. Recommended oils .....	2-15	7. Electrical system .....	6-40	
		8. Air conditioner and heater .....	6-43	
<b>CONTROL DEVICES</b>				
1. Cab devices .....	3-1	<b>TROUBLESHOOTING GUIDE</b>		
2. Cluster .....	3-2	1. Engine .....	7-1	
3. Switches .....	3-23	2. Electrical system .....	7-2	
4. Levers and pedals .....	3-28	3. Others .....	7-3	
5. Air conditioner and heater .....	3-30	<b>HYDRAULIC BREAKER AND QUICK CLAMP</b>		
6. Others .....	3-37	1. Selecting hydraulic breaker .....	8-1	
<b>OPERATION</b>				
1. Suggestion for new machine .....	4-1	2. Circuit configuration .....	8-2	
2. Check before starting the engine .....	4-2	3. Maintenance .....	8-3	
3. Starting and stop the engine .....	4-3	4. Precaution while operating the breaker .....	8-4	
4. Mode selection system .....	4-6	5. Quick clamp .....	8-6	
5. Operation of the working device .....	4-11	<b>INDEX</b> .....		9-1

## EC Declaration of conformity - update 04/01/'10

1. We hereby declare that the following machine comply with the machine directive 2006/42/EC, EMC-directive 2004/108/EC, Non-road mobile machinery emission directive 97/68/EC (amended by 2002/88/EC, 2004/26/EC, 2006/105/EC) and noise emission 2000/14/EC (amended by 2005/88/EC).

Excavator	Model :	*****
	Serial Nr. :	***

2. Manufacturer  
 Hyundai Heavy Industries Co. Ltd.  
 1 Chonha-Dong, Dong-Ku  
 Ulsan  
 The republic of Korea

Authorized representative : Owner of the technical file for machine production. (TCF : Technical Construction File)	Hyundai Heavy Industries Europe N.V. Vossendal 11 2440 Geel Belgium
--	--

3. Harmonized European directives : EN474-1:2006 +A1:2009, EN474-5: 2006, EN ISO 12100-1:2003, EN ISO 12100-2:2003, EN ISO 2867:2008, EN ISO 7096:2008, EN ISO 6683:2008, EN ISO 2860:2008, EN ISO 6682:2008, EN ISO 3744:2009, EN 982:1996+A1:2008, EN ISO 3457:2008 EN ISO 2860:2008, EN ISO 7096:2008, ISO 5006: 2006

4. Noise level :

Certain n° : e13\*2000/14\*2005/88\*0059\*08

Date : 2009-06-17

Conformity assessment procedure : Attachment VIII following the periodical inspection on technical extended with "Information on the scope of delivery" by TÜV Rheinland.

Authorized entity : Société Nationale de Certification et d'Homologation s.à r.l  
 CE0499 11, route de Luxembourg  
 5230 Sandweiler  
 Luxemburg

Engine power : \*\*\* kW

Guaranteed sound power level : \*\*\* dB (A)

5. Remarks

\*\*\*\*\*

Managing Director

Geel, Belgium

\*\*/\*\*/\*\*\*\*\*