


12. RCV LEVER OPERATING PATTERN

1) PATTERN CHANGE VALVE NOT INSTALL (standard)

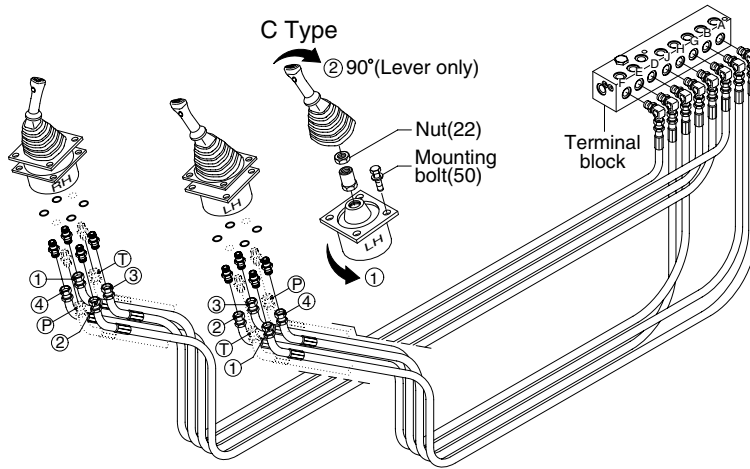

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

20W940P50

Pattern	Operation		Control function	Hose connection (port)		
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block	
					From	To
ISO Type			1 Arm out	②	D	-
			2 Arm in	④	E	-
			3 Swing right	③	B	-
			4 Swing left	①	A	-
Hyundai			5 Boom lower	④	J	-
			6 Boom raise	②	H	-
			7 Bucket out	①	G	-
			8 Bucket in	③	F	-


2) PATTERN CHANGE VALVE INSTALL (option)

- ※ If the machine is equipped with the pattern change valve, the machine operation pattern can be easily changed.
- ※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

Operation	ISO type	A type
Left RCV lever		
Right RCV lever		

(1) The machine control pattern can be easily changed from the "ISO type" to "A type" by changing the position of the lever.

- ▲ **Before starting the machine, check the lever position of pattern change valve and actual operating of attachment.**

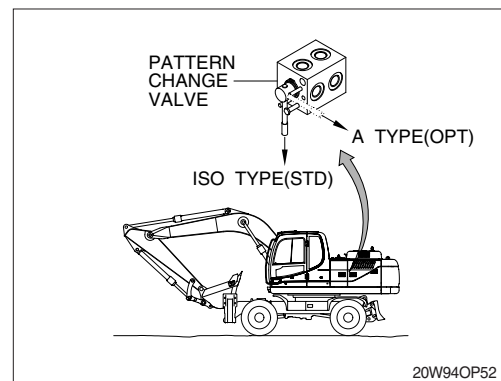

(2) Change of operating pattern

- ① Loosen the bolt (11).
- ② Move lever from the "ISO type" to "A type" position.
- ③ After the lever is set, tighten the bolt in order to secure the lever.

