


# 11. RCV LEVER OPERATING PATTERN

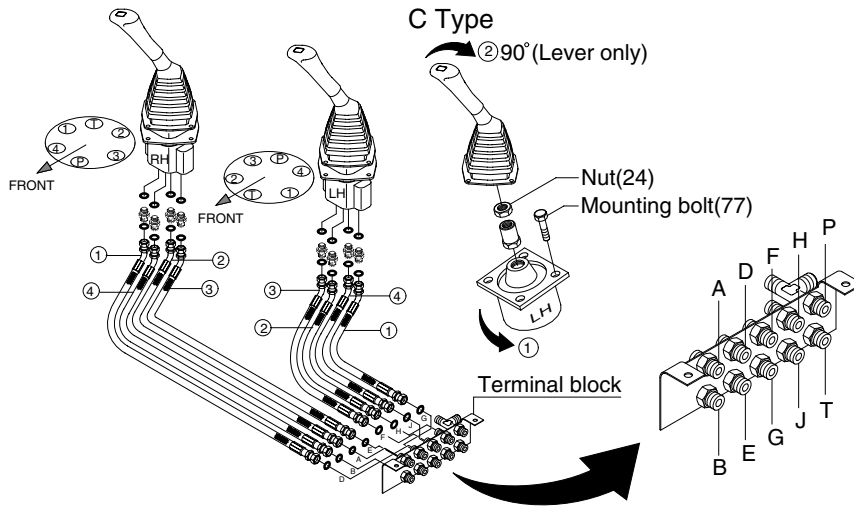

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

R35Z74OP43

Pattern	Operation		Control function	Hose connection (port)				
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block			
					From	To		
ISO Type			Left	1 Arm out	②	H	-	
				2 Arm in	④	J	-	
				3 Swing right	③	F	-	
				4 Swing left	①	G	-	
	Hyundai			Right	5 Boom lower	④	B	-
					6 Boom raise	②	A	-
					7 Bucket out	①	D	-
					8 Bucket in	③	E	-
A Type			Left	1 Boom lower	②	H	B	
				2 Boom raise	④	J	A	
				3 Swing right	③	F	-	
				4 Swing left	①	G	-	
	A Type			Right	5 Arm out	④	B	H
					6 Arm in	②	A	J
					7 Bucket out	①	D	-
					8 Bucket in	③	E	-
B Type			Left	1 Boom lower	②	H	B	
				2 Boom raise	④	J	A	
				3 Bucket in	③	F	E	
				4 Bucket out	①	G	D	
	B Type			Right	5 Arm out	④	B	H
					6 Arm in	②	A	J
					7 Swing right	①	D	F
					8 Swing left	③	E	G
C Type			Left	① Loosen the RCV lever mounting bolt (77) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (24) and rotates only lever 90° clockwise.				
			Right	Same as ISO type				