


8. HEATER

1) CLEAN AND REPLACE OF THE HEATER FILTER

※ **Always stop the engine before servicing.**

- (1) Remove the screw (1) and heater cover (2) on the right side of cabin.
- (2) Remove the heater filter (3).

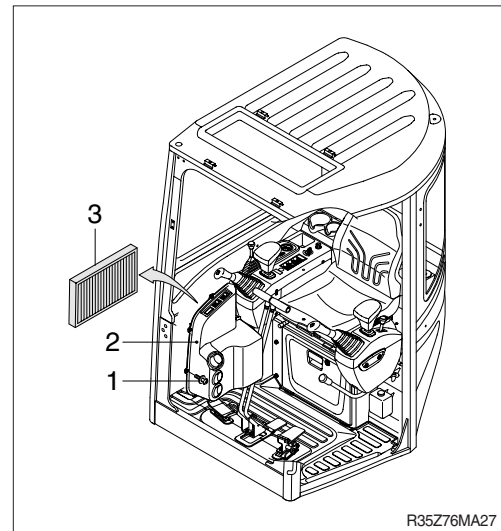

- (4) Clean the filter using a pressurized air (below 2 kgf/cm², 28 psi).

△ **When using pressurized air, be sure to wear safety glasses.**

- (5) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

