 
 


3. SWITCHES

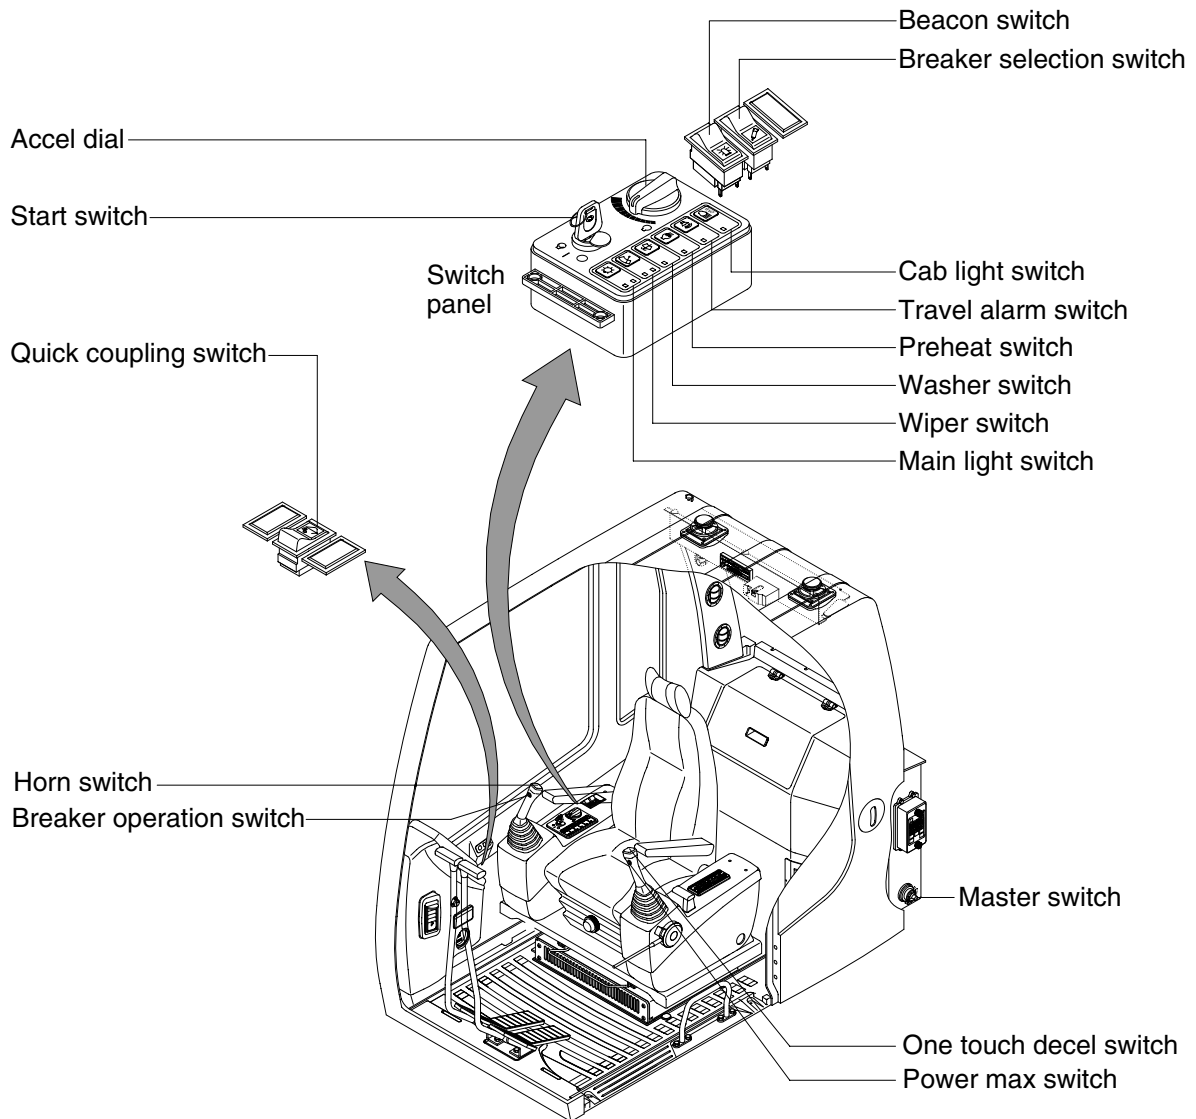

2907H3CD26

1) STARTING SWITCH

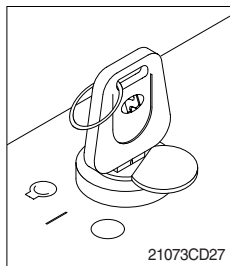


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ◌ (START) : Use when starting the engine. Release key immediately after starting.


※ **Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.**

 2) MASTER SWITCH

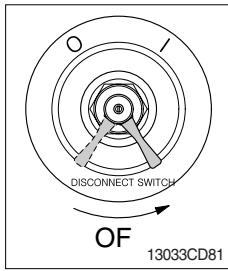


- (1) This switch is used to shut off the entire electrical system.
 - (2) I : The battery remains connected to the electrical system.
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O(OFF) with the engine running. Engine and electrical system damage could result.**

 3) ACCEL DIAL SWITCH

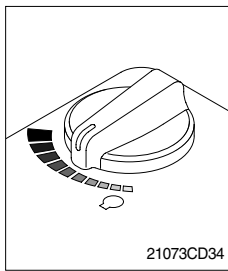


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
 - By rotating the accel dial to right : Engine speed increases
 - By rotating the accel dial to left : Engine speed decreases

 4) MAIN LIGHT SWITCH

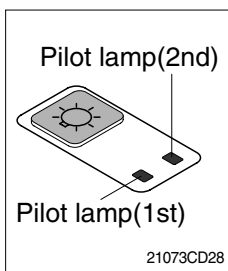


- (1) This switch is used to operate the head light and work light by two step.
 - First step : Head light comes ON.
 - Second step : Work light comes ON.

 5) WIPER SWITCH

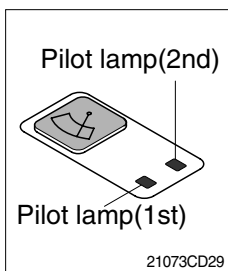


- (1) This switch is used to operate wiper and washer by two step.
 - First step : The wiper operates(Intermittent)
 - Second step : The wiper operates(Low speed)
- ※ **Wiper motor doesn't operate with front sliding door open.**
- ※ **If wiper does not operate with the switch in the ON position, turn the switch off immediately. Check the cause. If the switch remains ON, motor failure can result.**

 6) WASHER SWITCH

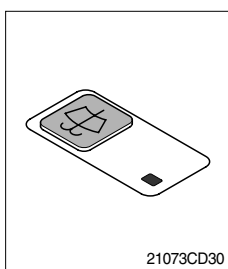


- (1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- (2) The indicator lamp is turned ON when operating this switch.

 7) PREHEAT SWITCH

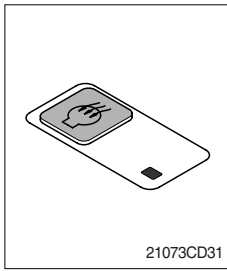


- (1) This switch is used for starting the engine in cold weather. If pressed, starting aid fluid injected to get easier engine starting.
 - ※ **Never hold the push button switch for more than 30 seconds, as this can damage the electric valve solenoid.**
- (2) The indicator lamp is turned ON when operating this switch.

 8) TRAVEL ALARM SWITCH

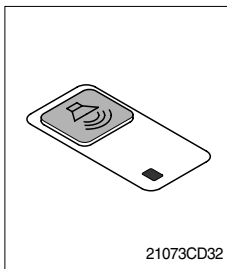


- (1) This switch is to activate travel alarm function surrounding when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

 9) CAB LIGHT SWITCH(Option)

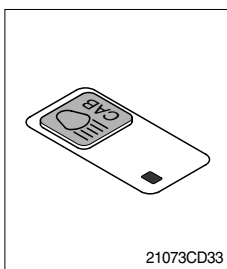


- (1) This switch turns ON the cab light on the cab.

 10) QUICK CLAMP SWITCH(Option)

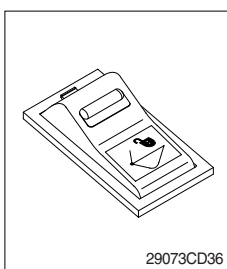


- (1) This switch is used to engage or disengage the moving hook on quick clamp.
 - ※ **Refer to the page 8-6 for details.**

 11) BREAKER SELECTION SWITCH(Option)

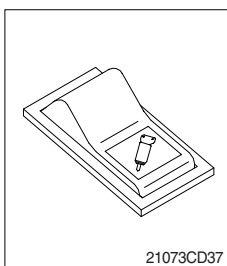


- (1) This switch is used to select breaker.
 - ※ **The breaker operates only when this switch is selected.**

 12) BEACON SWITCH (Option)

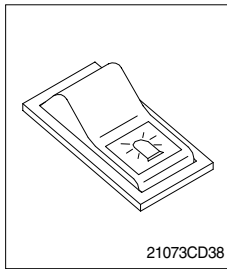


- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operating this switch.

 13) HORN SWITCH

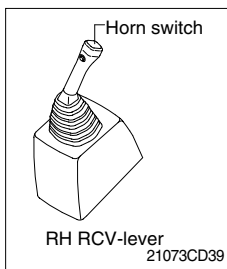


- (1) This switch is at the top of right side control lever. On pressing, the horn sounds.

 14) BREAKER OPERATION SWITCH

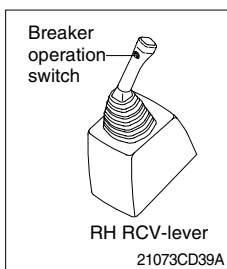


- (1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.

 15) ONE TOUCH DECEL SWITCH

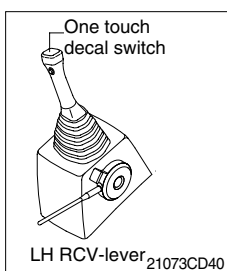

- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.

 16) POWER MAX SWITCH

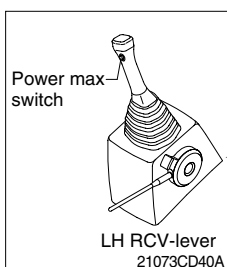

- (1) This switch activate power max function. When this switch is kept pressed, hydraulic power of work equipment will increased approx 110 percent during 8 seconds.
 - (2) After 8 seconds, function is cancelled automatically even switch is keep pressed.
- ※ **Don not use for craning purposes.**