

CONTENTS

Foreword -----	0-1	6. Traveling of the machine -----	4-13	
Before servicing this machine -----	0-2	7. Efficient working method -----	4-16	
EC regulation approved -----	0-3	8. Operation in the special work sites -----	4-20	
Table to enter S/No and distribution -----	0-4	9. Normal operation of excavator -----	4-22	
Safety labels -----	0-5	10. Attachment lowering -----	4-23	
Guide(Direction, S/No, Symbol) -----	0-14	11. Storage -----	4-24	
SAFETY HINTS		12. RCV lever operating pattern -----	4-26	
1. Before operating the machine -----	1-1	13. Switching hydraulic attachment circuit -----	4-27	
2. During operating the machine -----	1-6	TRANSPOTATION		
3. During maintenance -----	1-13	1. Preparation for transportation -----	5-1	
4. Parking -----	1-16	2. Dimension and weight -----	5-2	
SPECIFICATIONS		3. Loading the machine -----	5-4	
1. Major components -----	2-1	4. Fixing the machine -----	5-6	
2. Specifications -----	2-2	5. Loading and unloading by crane -----	5-7	
3. Working range -----	2-3	MAINTENANCE		
4. Weight -----	2-4	1. Instruction -----	6-1	
5. Lifting capacities -----	2-5	2. Tightening torque -----	6-6	
6. Bucket selection guide -----	2-8	3. Fuel, coolant and lubricants -----	6-9	
7. Undercarriage -----	2-10	4. Maintenance check list -----	6-11	
8. Specification for major components -----	2-12	5. Maintenance chart -----	6-16	
9. Recommended oils -----	2-16	6. Service instruction -----	6-18	
CONTROL DEVICES		7. Electrical system -----	6-43	
1. Cab devices -----	3-1	8. Air conditioner and heater -----	6-46	
2. Cluster -----	3-2	TROUBLESHOOTING GUIDE		
3. Switches -----	3-9	1. Engine -----	7-1	
4. Levers and pedals -----	3-14	2. Electrical system -----	7-2	
5. Air conditioner and heater -----	3-17	3. Others -----	7-3	
6. Others -----	3-20	HYDRAULIC BREAKER		
OPERATION		1. Selecting hydraulic breaker -----	8-1	
1. Suggestion for new machine -----	4-1	2. Circuit configuration -----	8-2	
2. Check before starting the engine -----	4-2	3. Maintenance -----	8-3	
3. Starting and stop the engine -----	4-3	4. Precautions while operating the breaker -----	8-4	
4. Mode selection system -----	4-6	INDEX -----		9-1
5. Operation of the working device -----	4-12			