


# 11. RCV LEVER OPERATING PATTERN

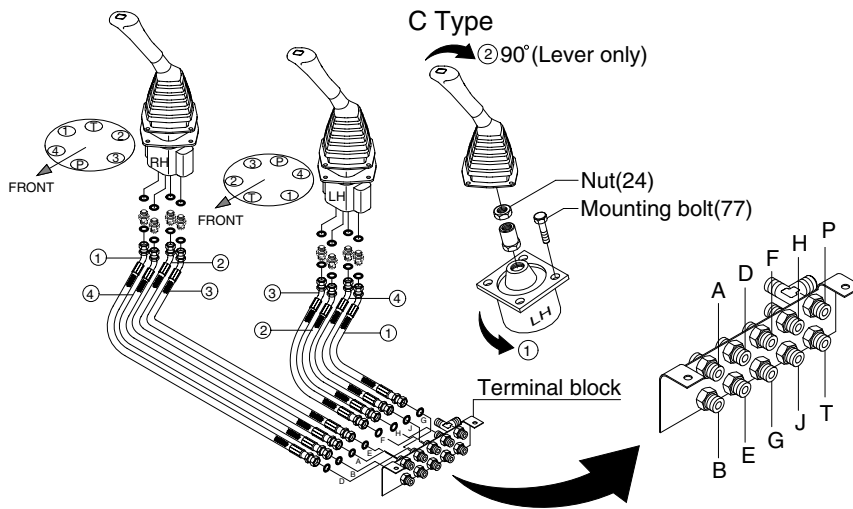

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

R35Z74OP43

Pattern	Operation		Control function	Hose connection(Port)				
	Left	Right		RCV lever	Change of MCV port			
					From	To		
ISO Type			Left	Arm out	②	H	-	
				Arm in	④	J	-	
				Swing right	③	F	-	
				Swing left	①	G	-	
	Hyundai			Right	Boom lower	④	B	-
					Boom raise	②	A	-
					Bucket out	①	D	-
A Type			Left	Boom lower	②	H	B	
				Boom raise	④	J	A	
				Swing right	③	F	-	
				Swing left	①	G	-	
	Hyundai			Right	Arm out	④	B	H
					Arm in	②	A	J
					Bucket out	①	D	-
B Type			Left	Boom lower	②	H	B	
				Boom raise	④	J	A	
				Bucket out	③	F	D	
				Bucket in	①	G	E	
	Hyundai			Right	Arm out	④	B	H
					Arm in	②	A	J
					Swing right	①	D	F
C Type			Left	① Loosen the RCV lever mounting bolt(77) and rotates lever assy 90° counterclockwise; then install.				
				② To put lever in correct position, disassemble nut(24) and rotates only lever 90° clockwise.				
				Right	Same as ISO type			