 
 


### 3. SWITCHES

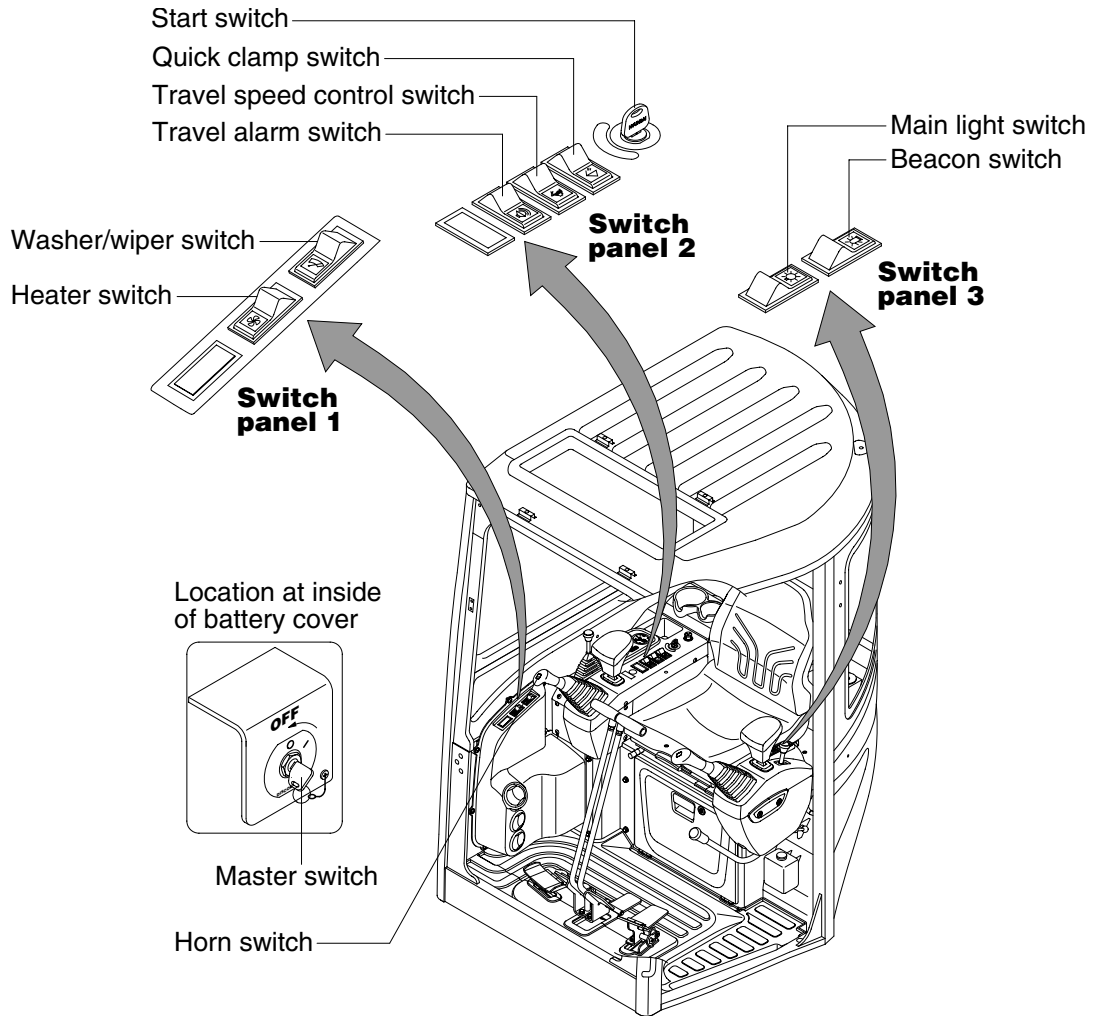

R35Z93CD13

#### 1) STARTING SWITCH

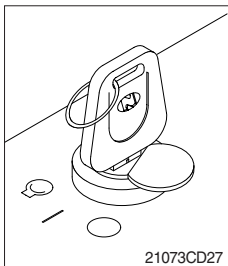


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- Ⓚ (START) : Use when starting the engine.

Release key immediately after starting.


※ **Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.**

## 2) MAIN LIGHT SWITCH

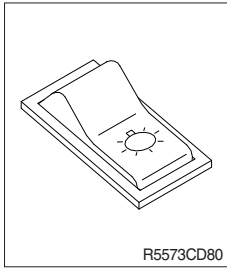


- (1) This switch use to operates the head light and work light by two step.
- First step : Head light and cluster illumination lamp comes ON.
  - Second step : Work light comes ON. Also, the below indicator lamp comes ON.

## 3) HEATER SWITCH

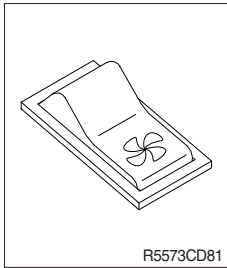 


- (1) This switch use to operates the heater by two step.
- First step : Low fan speed
  - Second step : High fan speed

## 4) WIPER AND WASHER SWITCH

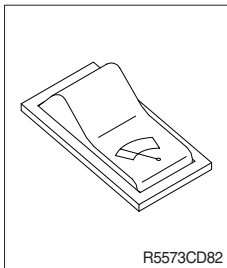 


- (1) The switch use to operates the wiper and washer by two step.
- First step : The wiper operates.
  - Second step : The washer liquid is sprayed and the wiper is operated only while pressing. If release the switch, return to the first step position.

## 5) TRAVEL ALARM SWITCH (option)

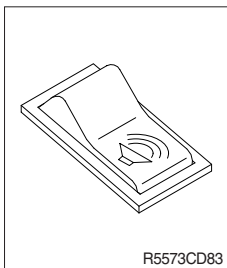 


- (1) This switch is the signal to alarm surroundings when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

## 6) TRAVEL SPEED CONTROL SWITCH

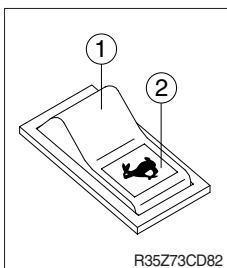 


- (1) This switch is used to control the travel speed.
- ① : Low speed
  - ② : High speed

### 7) BEACON SWITCH (option)

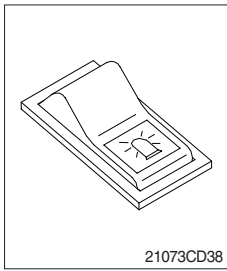 


- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operation this switch.

### 8) QUICK CLAMP SWITCH (option)

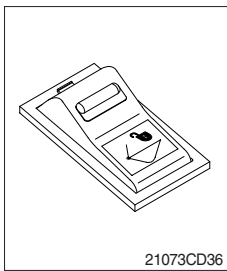 


- (1) This switch is used to engage or disengage the moving hook on quick clamp.
- ※ Refer to the page 8-6 for details.

### 9) MASTER SWITCH

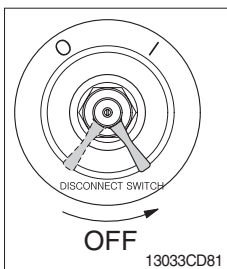 

- (1) This switch is used to shut off the entire electrical system.
- (2) I : The battery remains connected to the electrical system.  
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O (OFF) with the engine running. It could result in engine and electrical system damage.**

### 10) HORN SWITCH

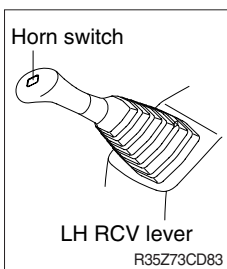 

- (1) This switch is at the top of left side control lever.  
On pressing, the horn sounds.