


## 8. HEATER

### 1) CLEAN AND REPLACE OF THE HEATER FILTER

※ **Always stop the engine before servicing.**


- (1) Remove the screw (1) and heater cover (2) on the right side of cabin.
- (2) Remove the heater filter (3).

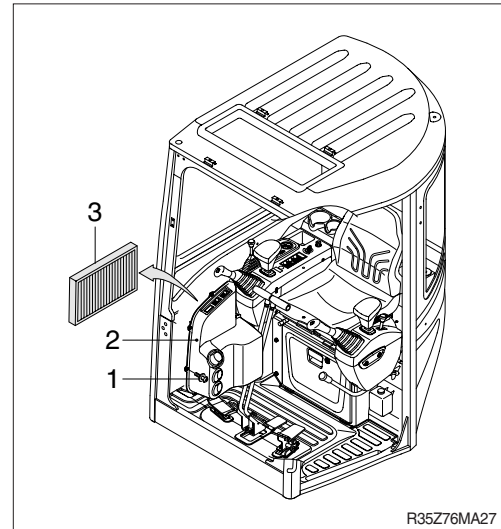

- (4) Clean the filter using a pressurized air (below 2 kgf/cm<sup>2</sup>, 28 psi).

△ **When using pressurized air, be sure to wear safety glasses.**

- (5) Inspect the filter after cleaning. If it is damaged or badly contaminated, use a new filter.

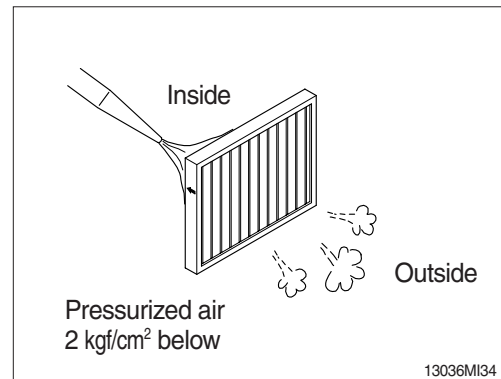

### 2) PRECAUTIONS FOR USING AIR CONDITIONER

- (1) When using the air conditioner for a long time, open the window once every one hour.
- (2) Be careful not to overcool the cab.
- (3) The cab is properly cooled if the operator feels cool when entering there from outside (about 5 °C lower than the outside temperature).
- (4) When cooling, change air occasionally.

### 3) CHECK DURING SEASON

Ask the service center for replenishment of refrigerant or other maintenance service so that the cooling performance is not damaged.

### 4) CHECK DURING OFF-SEASON

Operate the air conditioner 2 or 3 times a month (each for a few minutes) to avoid loss of oil film in the compressor.