

| | | | |
|---|------|------------------------------------|------------|
| A | | G | |
| Accel dial switch | 3-24 | Gauge | 3-3 |
| After engine start | 4-4 | H | |
| Air breather element | 6-32 | Handsfree | 3-37 |
| Air cleaner filter | 6-29 | Hydraulic breaker | 8-1 |
| Air conditioner & heater | 3-29 | Hydraulic oil changing | 6-30 |
| Air conditioner filter | 6-43 | Hydraulic oil filling | 6-30 |
| Alternate exit | 0-11 | Hydraulic oil level | 6-30 |
| Attachment lowering | 4-22 | L | |
| B | | LCD | 3-2 |
| Battery | 6-40 | Levers & pedals | 3-27 |
| Before starting engine | 4-2 | Lifting capacities | 2-9 |
| Boom lowering | 4-22 | Lubricant specification | 2-30 |
| Bucket clearance adjustment | 6-38 | M | |
| Bucket replacement | 6-36 | Maintenance check list | 6-11 |
| Bucket selection guide | 2-22 | Major component | 2-1 |
| Bucket tooth replacement | 6-37 | MCU (Machine Control Unit) | 3-47 |
| C | | Mode selection system | 4-6 |
| Cab air filter | 6-43 | Monitor panel | 3-2 |
| Cab device | 3-1 | Mounting and dismounting | 1-12 |
| Changing machine control pattern | 4-25 | N | |
| Cigar lighter | 3-36 | New machine operation | 4-1 |
| Cluster | 3-2 | O | |
| Coolant | 6-21 | Oil cooler | 6-25 |
| Cooling fan | 6-26 | Operating pattern | 4-25 |
| Corrosion resister | 6-20 | P | |
| D | | Pattern change valve | 4-26 |
| Drain filter | 6-32 | Pedals | 3-28 |
| E | | Periodical replacement parts | 6-5 |
| Emergency engine starting connector | 3-48 | Pilot filter | 6-32 |
| Engine oil filter | 6-18 | Pin & bushing lubrication | 6-39 |
| Engine oil level | 6-18 | Prefilter | 6-31 |
| Engine starting & stop | 4-3 | Pilot lamps | 3-7 |
| Engine starting by booster | 6-41 | Q | |
| Engine stop | 4-5 | Quick clamp | 8-6 |
| F | | R | |
| Fan belt | 6-26 | Radiator flushing | 6-22 |
| Fuel filter | 6-30 | Radio & CD/MP3 player | 3-41 |
| Fuel leakage | 6-31 | RCV lever lubricate | 6-35 |
| Fuel system bleeding | 6-30 | Recommended oils | 2-30, 6-10 |
| Fuel tank | 6-29 | | |
| Fuse & relay box | 3-47 | | |

| | |
|-----------------------------------|------|
| Relieving pressure | 6-3 |
| Remote controller | 3-39 |
| Return filter | 6-31 |
| RCV lever operating pattern | 4-25 |

S

| | |
|---|------------|
| Safety hints | 1-1 |
| Safety labels | 0-5 |
| Safety parts | 6-5 |
| Seat | 3-46 |
| Seat belt | 3-46 |
| Service meter | 3-48 |
| Service socket | 3-38, 3-48 |
| Specification for major component | 2-26 |
| Specification | 2-2 |
| Start switch | 3-23 |
| Storage | 4-24 |
| Suction strainer | 6-31 |
| Swing bearing grease | 6-33 |
| Swing gear & pinion grease | 6-34 |
| Swing reduction gear oil | 6-33 |
| Switch panel | 3-23 |
| Switches | 3-9, 3-23 |

T

| | |
|---------------------------------|------|
| Torques-major component | 6-8 |
| Torques-fastener | 6-6 |
| Towing machine | 4-14 |
| Track adjustment | 6-35 |
| Track shoe selection | 2-25 |
| Transportation | 5-1 |
| Travel reduction gear oil | 6-34 |
| Traveling machine | 4-12 |
| Troubleshooting guide | 7-1 |

U

| | |
|---------------------|------|
| Undercarriage | 2-24 |
| USB socket | 3-37 |

W

| | |
|--------------------------------|------|
| Warming up operation | 4-5 |
| Warning lamps | 3-4 |
| Water filter | 6-20 |
| Weight | 2-7 |
| Windshield | 3-49 |
| Working device operation | 4-11 |
| Working method | 4-15 |
| Working range | 2-5 |