

FOREWORD

This manual contains a number of instructions and safety recommendations regarding driving, handling, lubrication, maintenance, inspection and adjustment of the excavator.

The manual is to promote safety maintenance and enhance machine performance.

Keep this manual handy and have all personnel read it periodically.

If you sell the machine, be sure to give this manual to the new owners.

This machine complies with EC directive "2006/42/EC".

1. **Read** and **understand** this manual before operating the machine.

This operator's manual may contain attachments and optional equipment that are not available in your area. Please consult your local Hyundai distributor for those items you require.

Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.

Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.

The procedures and precautions given in this manual apply only to intended uses of the machine.

If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses of actions as described in this manual.

2. **Inspect** the jobsite and **follow** the safety recommendations in the **safety hints** section before operating the machine.

3. Use **genuine Hyundai spare parts** for the replacement of parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulting from non-genuine parts or non workmanlike repair.

In such cases Hyundai cannot assume liability for any damage.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Hyundai or your Hyundai distributor for the latest available information for your machine or for questions regarding information in this manual.

BEFORE SERVICING THIS MACHINE

It is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury by keeping this machine properly maintained.

It also is the responsibility of the owner and all service and maintenance personnel to avoid accidents and serious injury while servicing the machine.

No one should service or attempt to repair this machine without proper training and supervision.

All service and maintenance personnel should be thoroughly familiar with the procedures and precautions contained in this manual.

All personnel also must be aware of any federal, state, provincial or local laws or regulations covering the use and service of construction equipment.

The procedures in this manual do not supersede any requirements imposed by federal, state, provincial or local laws.

Hyundai can not anticipate every possible circumstance or environment in which this machine may be used and serviced.

All personnel must remain alert to potential hazards.

Work within your level of training and skill.

Ask your supervisor if you are uncertain about a particular task. Do not try to do too much too fast.

Use your common sense.

EC REGULATION APPROVED

- Noise level (EN474-1 : 2006 and 2000/14/EC) are as followings.
LWA : 106 dB (EU only)
LPA : 73 dB
- The value of vibrations transmitted by the operator's seat are lower than standard value of (EN474-1 : 2006 and 2002/44/EC)

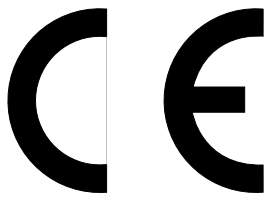 



TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine Serial No.	
Engine Serial No.	
Manufacturing year	
Manufacturer Address	Hyundai Heavy Industries co., Ltd. 1, Jeonha-Dong, Dong-Ku, Ulsan 682-792, Korea
Distributor for U.S.A Address	Hyundai Heavy Industries U.S.A, Inc 955 Estes Avenue EIK Grove village IL, 60001 U.S.A
Distributor for Europe Address	Hyundai Heavy Industries Europe N. V. Vossendal 11 2240 Geel Belgium
Dealer Address	

SAFETY LABELS

1. LOCATION

 Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

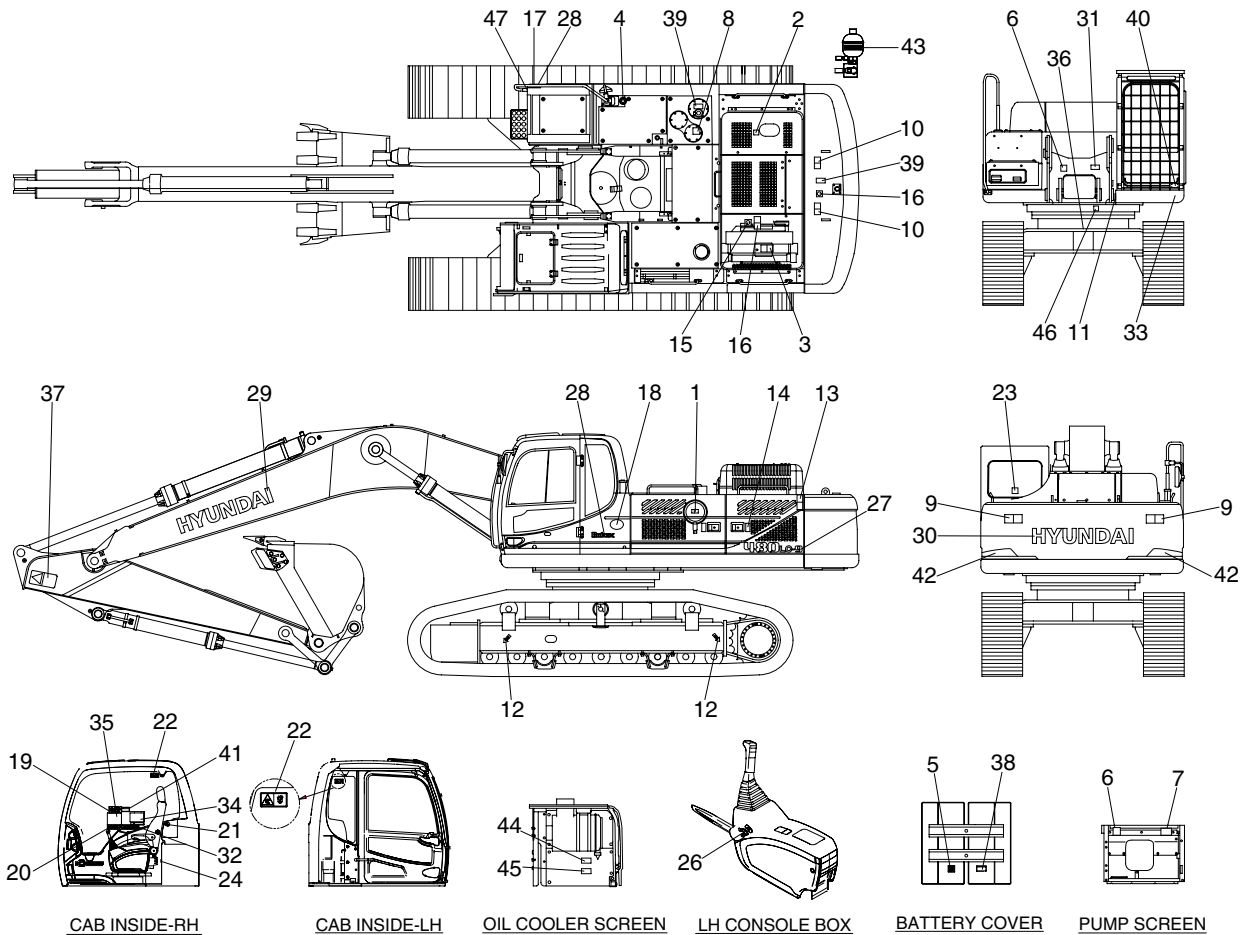

- | | | | | | |
|----|----------------------|----|-----------------------------------|----|-------------------------|
| 1 | Air cleaner filter | 17 | Transporting | 34 | Service instruction |
| 2 | Turbocharger cover | 18 | Low emission engine | 35 | Lifting chart |
| 3 | Radiator cap | 19 | Control ideogram | 36 | Tie |
| 4 | Fueling | 20 | Ref operator manual-Cab RH pillar | 37 | Keep clear-Boom/arm |
| 5 | Battery accident | 21 | Hammer | 38 | ECU connector |
| 6 | High pressure hose | 22 | Safety front window | 39 | Falling |
| 7 | Hydraulic oil level | 23 | Alternate exit | 40 | FOPS FOG plate |
| 8 | Hydraulic oil lub | 24 | Air conditioner filter | 41 | Turbocharger |
| 9 | Keep clear-rear | 26 | Safety lever | 42 | Reflecting |
| 10 | Lifting eye | 27 | Model name | 43 | Accumulator |
| 11 | Name plate | 28 | Logo (ROBEX) | 44 | RCV lever pattern |
| 12 | Slinging ideogram | 29 | Trade mark (boom) | 45 | Machine control pattern |
| 13 | Keep clear-side | 30 | Trade mark (CWT) | 46 | Swing grease |
| 14 | Stay fix | 31 | Reduction gear grease | 47 | Battery position |
| 15 | Shearing-engine hood | 32 | Locking-clamp | | |
| 16 | No step | 33 | Noise level LWA | | |

48090SL01

2. DESCRIPTION

 
There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

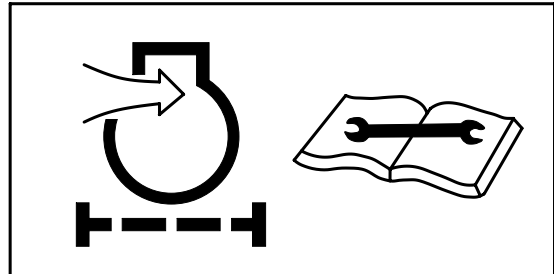

21070FW01

2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the turbocharger cover.

- ▲ **Do not touch turbocharger or it may cause severe burn.**



21070FW02

3) RADIATOR CAP (item 3)

This warning label is positioned on the radiator.

- ▲ **Never open the filler cap while engine running or at high coolant temperature.**

 


14070FW03

4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ▲ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

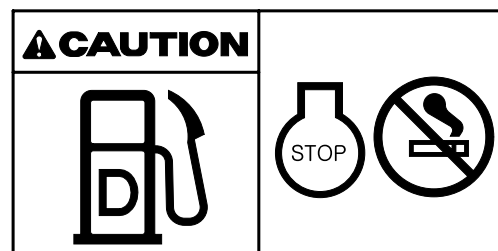


21070FW04

5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

 - ▲ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**
With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ▲ **Extinguish all smoking materials and open flames before checking the battery.**
- ▲ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ▲ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ▲ **For safety from electric shock, do not battery terminal with a wet hand.**

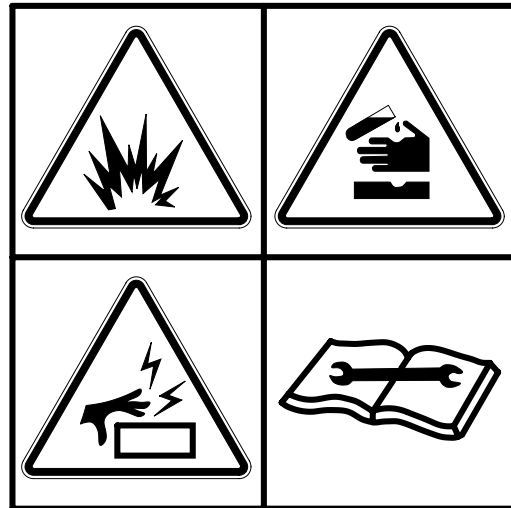

36070FW05

6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the screen plate.

- ▲ **Escaping fluid under pressure can penetrate the skin causing serious injury.**
- ※ **Study the service manual before service job.**

 


14070FW29

7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the screen plate.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

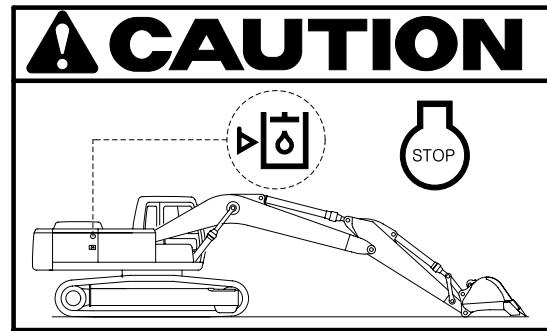

21070FW07

8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.

 


14070FW08

9) KEEP CLEAR (item 9)

This warning label is positioned on the rear of counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

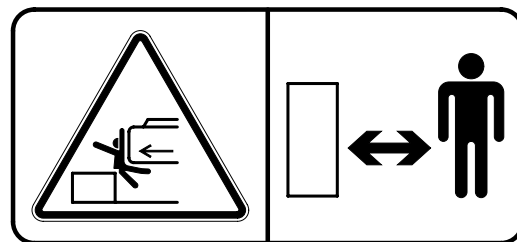


21090FW09

10) LIFTING EYE (item 10)

This warning label is positioned on the counterweight.

 - ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-9 for proper lifting method of the machine.

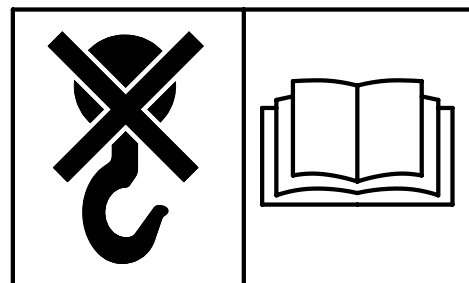


21070FW10

11) **SIDE KEEP CLEAR** (item 13)

This warning label is positioned on the side of LH rear side cover.

 - ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

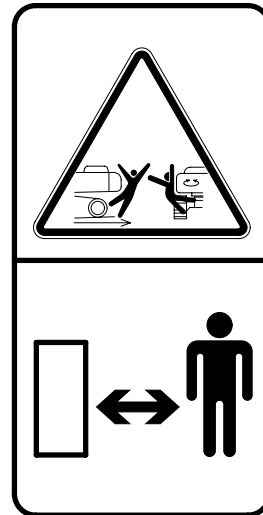

21070FW13

12) **STAY FIX** (item 14)

This warning label is positioned on the side cover.

- ▲ Be sure to support the stay when the door needs to be opened.
- ▲ Be careful that the opened door may be closed by the external or natural force like strong wind.

 


21070FW14

13) **SHEARING-ENGINE HOOD** (item 15)

This warning label is positioned on the engine hood.

- ▲ Don't open the engine hood during the engine's running.
- ▲ Don't touch exhaust pipe or it may cause severe burn.

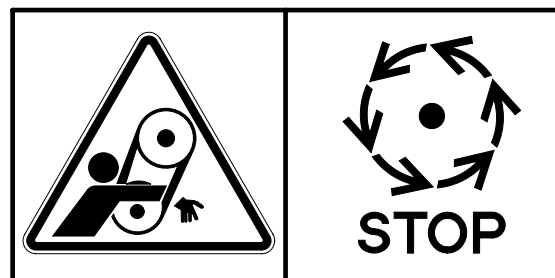


21070FW15

14) **NO STEP** (item 16)

This warning label is positioned on the engine hood and counterweight.

 - △ **Don't step on the engine hood and counterweight.**

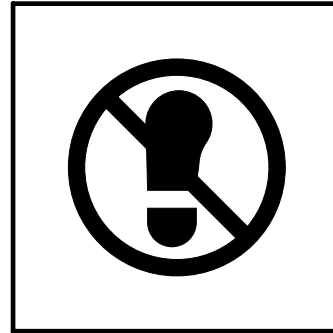


21070FW16

15) **TRANSPORTING** (item 17)

This warning label is positioned right side of upper frame.

 - ▲ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**
See page 5-10 for details.

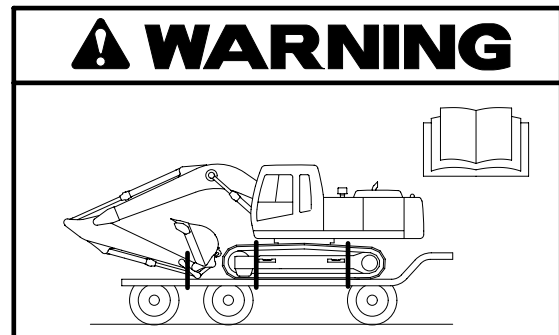


14070FW17

16) **CONTROL IDEOGRAM** (item 19)

This warning label is positioned in right window of the cab.

 - ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**
- ▲ **Failure to do so could result in injury or death.**
See page 4-11 for details.

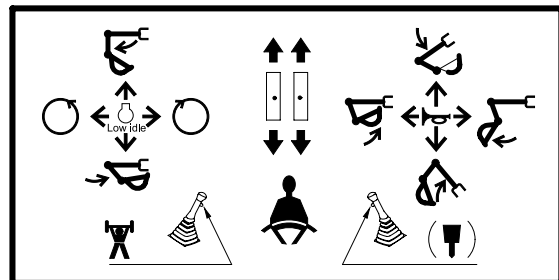


36070FW19

17) **REF OPERATOR MANUAL** (item 20)

This warning label is positioned on the right side window of the cab.

 - ▲ **Study the operator's manual before starting and operating machine.**

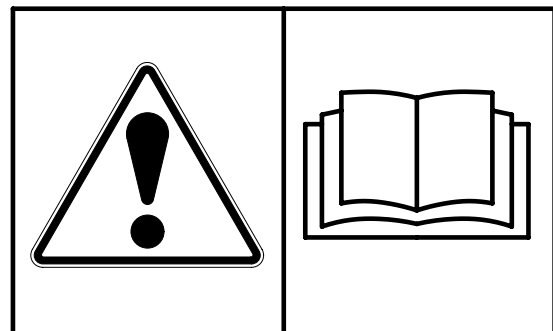


21070FW22

18) MAX HEIGHT (item 20)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

 An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

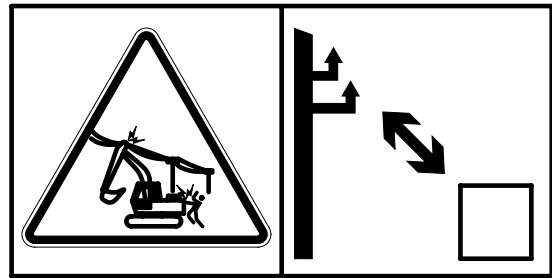


21070FW23

19) INTERFERENCE (item 20)

This warning label is positioned on the right side window of the cab.

 - ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- ⚠ **Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.**

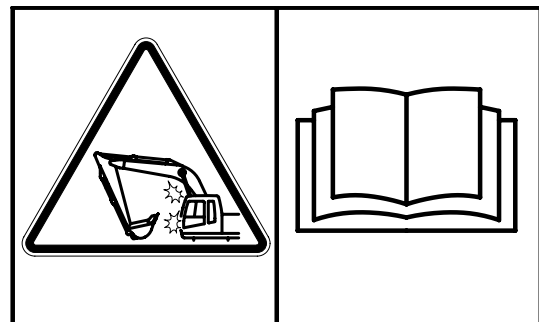


29090FW01

20) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both side window of the cab.

 - ⚠ **Be careful that the front window may be promptly closed.**

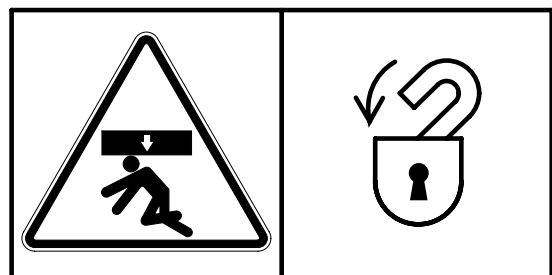


21070FW24

21) ALTERNATE EXIT (item 23)

This warning label is positioned on the inside of rear window.

 - ※ **The rear window serves us an alternate exit.**
- ※ **To remove rear window, pull the ring and push out the glass.**

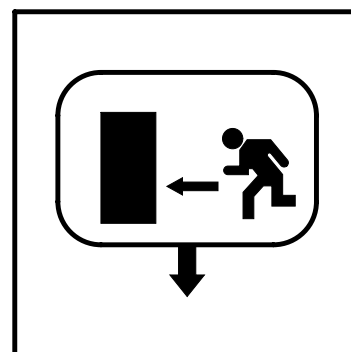


21070FW25

22) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

 - ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

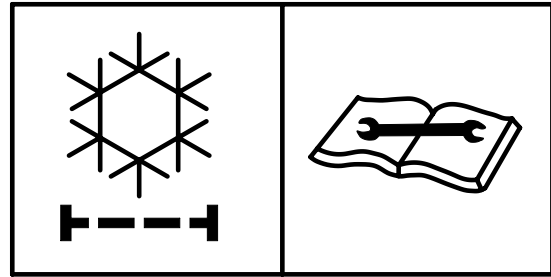


21070FW26

23) SAFETY LEVER (item 26)

This warning label is positioned on the cover of the safety lever.

 - ▲ **Before you get off the machine be sure to place the safety lever LOCKED position.**

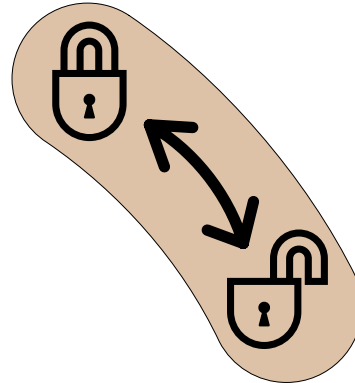


30007A1FW07A

24) REDUCTION GEAR GREASE (item 31)

This warning label is positioned in the front of upper frame.

 - ▲ **Grease is under high pressure. Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.**

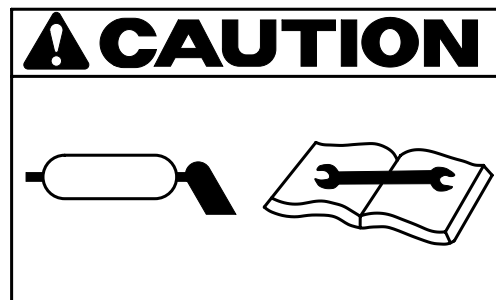


21070FW35

25) CLAMP-LOCKING (item 32)

This warning label is positioned on the right side window of cab.

 - ▲ **Serious injury or death can result from dropping bucket.**
- ▲ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

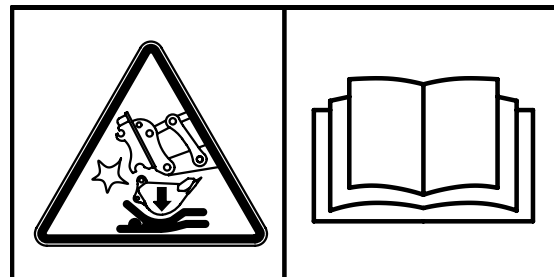


14070FW60

26) TIE (item 36)

This warning label is positioned on the lower frame.

 - ▲ **Never tow the machine using tie hole, because this may break.**
- ▲ **See page 4-14 for detail.**

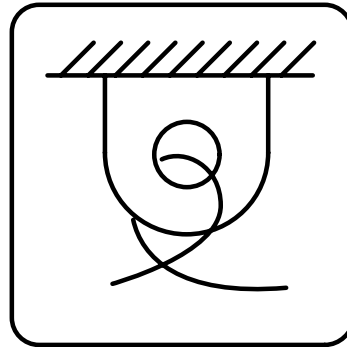


4507A0FW02

27) KEEP CLEAR-BOOM/ARM (item 37)

This warning label is positioned on both side of the arm.

 - ▲ **Serious injury or death can result from falling of the attachment.**
- ▲ **To prevent serious injury or death, keep clear the underneath of attachment.**

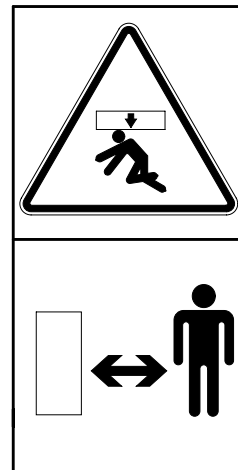


14070FW31

28) ECU CONNECTOR (item 38)

This warning label is positioned on the battery cover.

 - ▲ **Before carrying out any electric welding on this machine, follow the below procedure.**
 - Pull the connector out of all electric control units.
 - Connector the ground lead of the welding equipment as close to the welding point as possible.
- ※ **See page 6-43 for detail.**

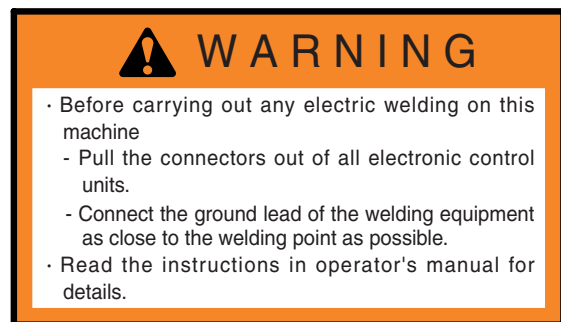


7807AFW20

29) FALLING (item 39)

This warning label is positioned on the top of the hydraulic tank.

 - ▲ **Falling is one of the major cause of personal injury.**
- ▲ **Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.**

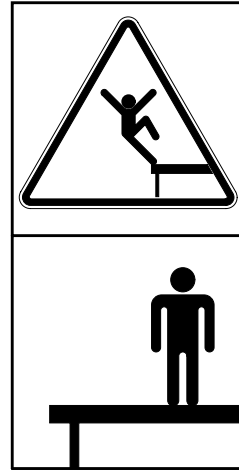


14070FW30

30) TURBOCHARGER (item 41)

This warning label is positioned on the right window of the cab.

 - ▲ **In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.**

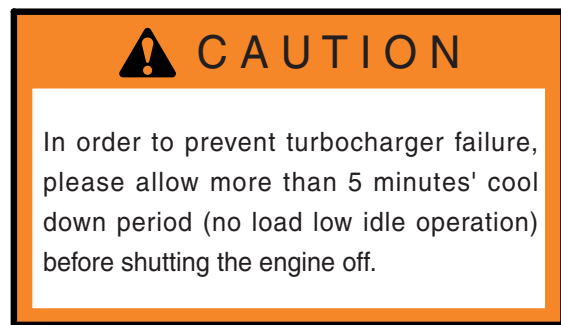


7807AFW20

31) REFLECTING (item 42)

This warning label is positioned on the rear of counterweight.

 - ▲ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ▲ **Do not deface or remove this label from the machine.**




21090FW70

32) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

 - ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.

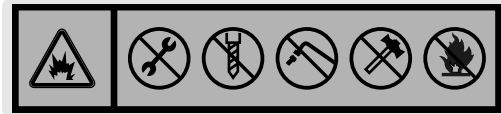

1107A0FW46


33) RCV lever pattern (item 44)


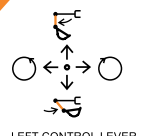
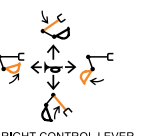

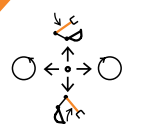
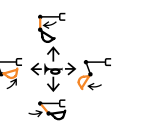

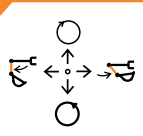
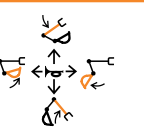

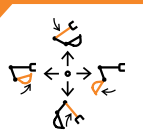
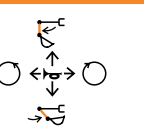
This warning label is positioned on the LH support.

- ▲ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ▲ Failure to do so could result in injury or death.
- ※ See page 4-11 for details.

▲ WARNING

- THE MACHINE CONTROL PATTERN CAN EASILY BE CHANGED TO THE 'ISO TYPE', 'A TYPE', 'C TYPE' OR 'D TYPE' BY CHANGING THE POSITION OF THE LEVER-PATTERN.
- BEFORE STARTING THIS MACHINE, CHECK THE LEVER PATTERN VALVE.
- HOW TO USE :
1. LOOSEN THE BOLT.
2. MOVE LEVER TO THE 'ISO', 'A', 'C' OR 'D' POSITION.
3. AFTER SETTING THE PATTERN, TIGHTEN THE BOLT.
- REFER TO OPERATOR'S MANUAL FOR DETAILS.

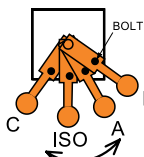

ISO TYPE
<p>POSITION OF LEVER-PATTERN :</p>  <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  LEFT CONTROL LEVER </div> <div style="text-align: center;">  RIGHT CONTROL LEVER </div> </div>
A TYPE
<p>POSITION OF LEVER-PATTERN :</p>  <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  LEFT CONTROL LEVER </div> <div style="text-align: center;">  RIGHT CONTROL LEVER </div> </div>
C TYPE
<p>POSITION OF LEVER-PATTERN :</p>  <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  LEFT CONTROL LEVER </div> <div style="text-align: center;">  RIGHT CONTROL LEVER </div> </div>
D TYPE
<p>POSITION OF LEVER-PATTERN :</p>  <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  LEFT CONTROL LEVER </div> <div style="text-align: center;">  RIGHT CONTROL LEVER </div> </div>

21090FW21


34) Machine control pattern (item 45)

This warning label is positioned on the oil cooler screen.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.

⚠ WARNING

- THE MACHINE CONTROL PATTERN CAN EASILY BE CHANGED TO THE "ISO TYPE" "OR TO THE "A TYPE" BY CHANGING THE POSITION OF THE LEVER-PATTERN.
- BEFORE STARTING THIS MACHINE, CHECK THE LEVER PATTERN VALVE.

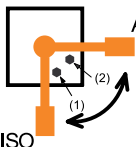


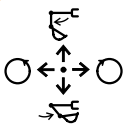
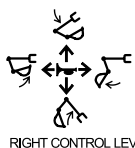

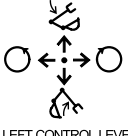

• HOW TO USE:

1. LOOSEN BOLT(1) OR BOLT(2).
2. MOVE LEVER TO THE "ISO" OR "A" POSITION.
3. AFTER SETTING THE PATTERN, TIGHTEN BOLT TO SECURE LEVER.

- BOLT(1) FOR "ISO" PATTERN
- BOLT(2) FOR "A" PATTERN

ISO

• REFER TO OPERATOR'S MANUAL FOR DETAILS.


ISO TYPE	
POSITION OF LEVER-PATTERN: 	 LEFT CONTROL LEVER  RIGHT CONTROL LEVER
A TYPE	
POSITION OF LEVER-PATTERN: 	 LEFT CONTROL LEVER  RIGHT CONTROL LEVER

38090FW01A

35) Swing grease (item 46)

This warning label is positioned in the front of swing ring gear.

 
- ※ See page 6-34 for details.

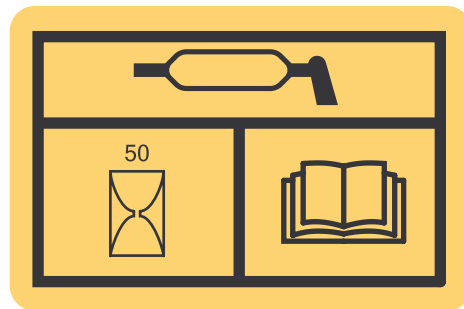

38090FW02


36) Battery position (item 47)

 This warning label is positioned right side of tool box.

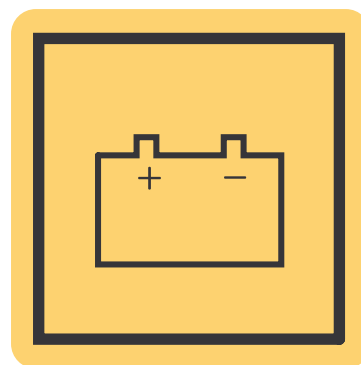

38090FW03

 MACHINE DATA PLATE

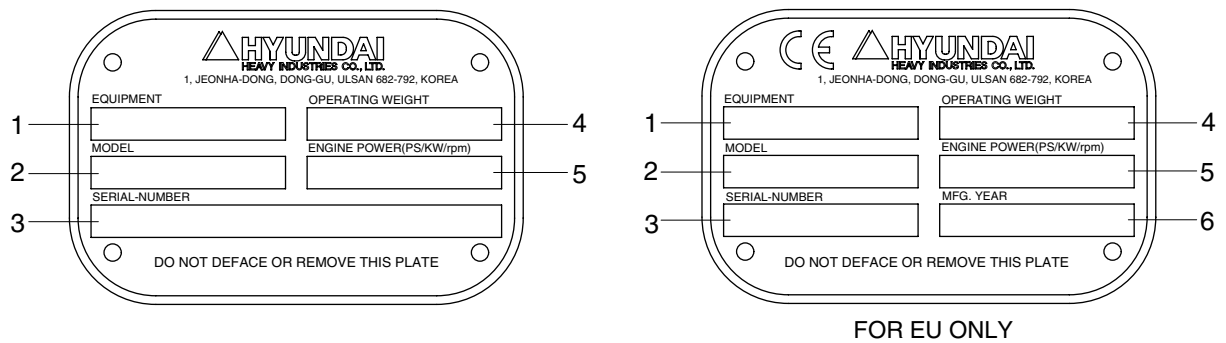

21090FW10


- | | | | | | |
|---|------------|---|------------------|---|--------------------|
| 1 | Equipment | 3 | Serial number | 5 | Engine power |
| 2 | Model name | 4 | Operating weight | 6 | Manufacturing year |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.

GUIDE

1. DIRECTION

 The direction of this manual indicate forward, backward, right and left on the standard of operator when the travel motor is in the rear and machine is on the traveling direction.

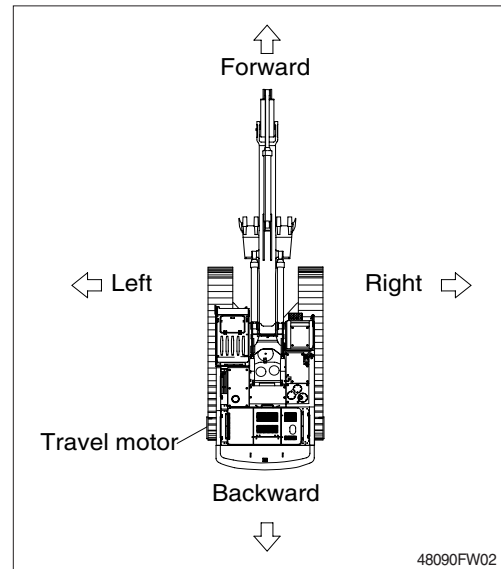


2. SERIAL NUMBER

Inform following when you order parts or the machine is out of order.


1) MACHINE SERIAL NUMBER

 The numbers are located below the right window of the operator's cab.

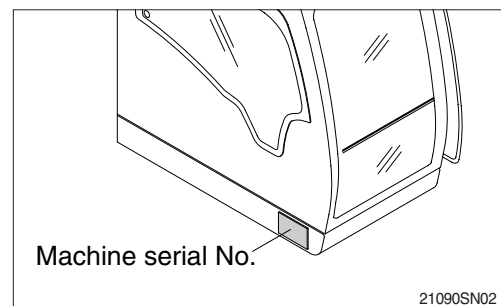

2) ENGINE SERIAL NUMBER

 The numbers are located on the engine name plate.

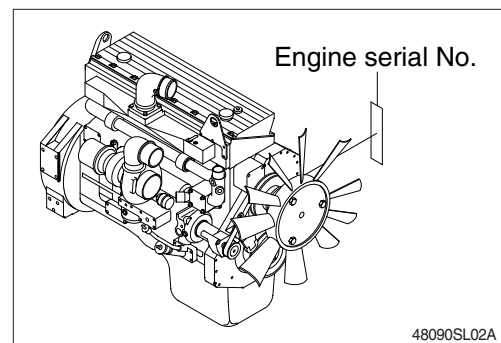

3. INTENDED USE

This machine is designed to be used mainly for the following work.

- Digging work
- Loading work
- Smoothing work
- Ditching work

※ Please refer to the section 4 (efficient working method) further details.

4. SYMBOLS

▲ Important safety hint.

△ It indicates matters which can cause the great loss on the machine or the surroundings.

※ It indicates the useful information for operator.