


5. MAINTENANCE CHART

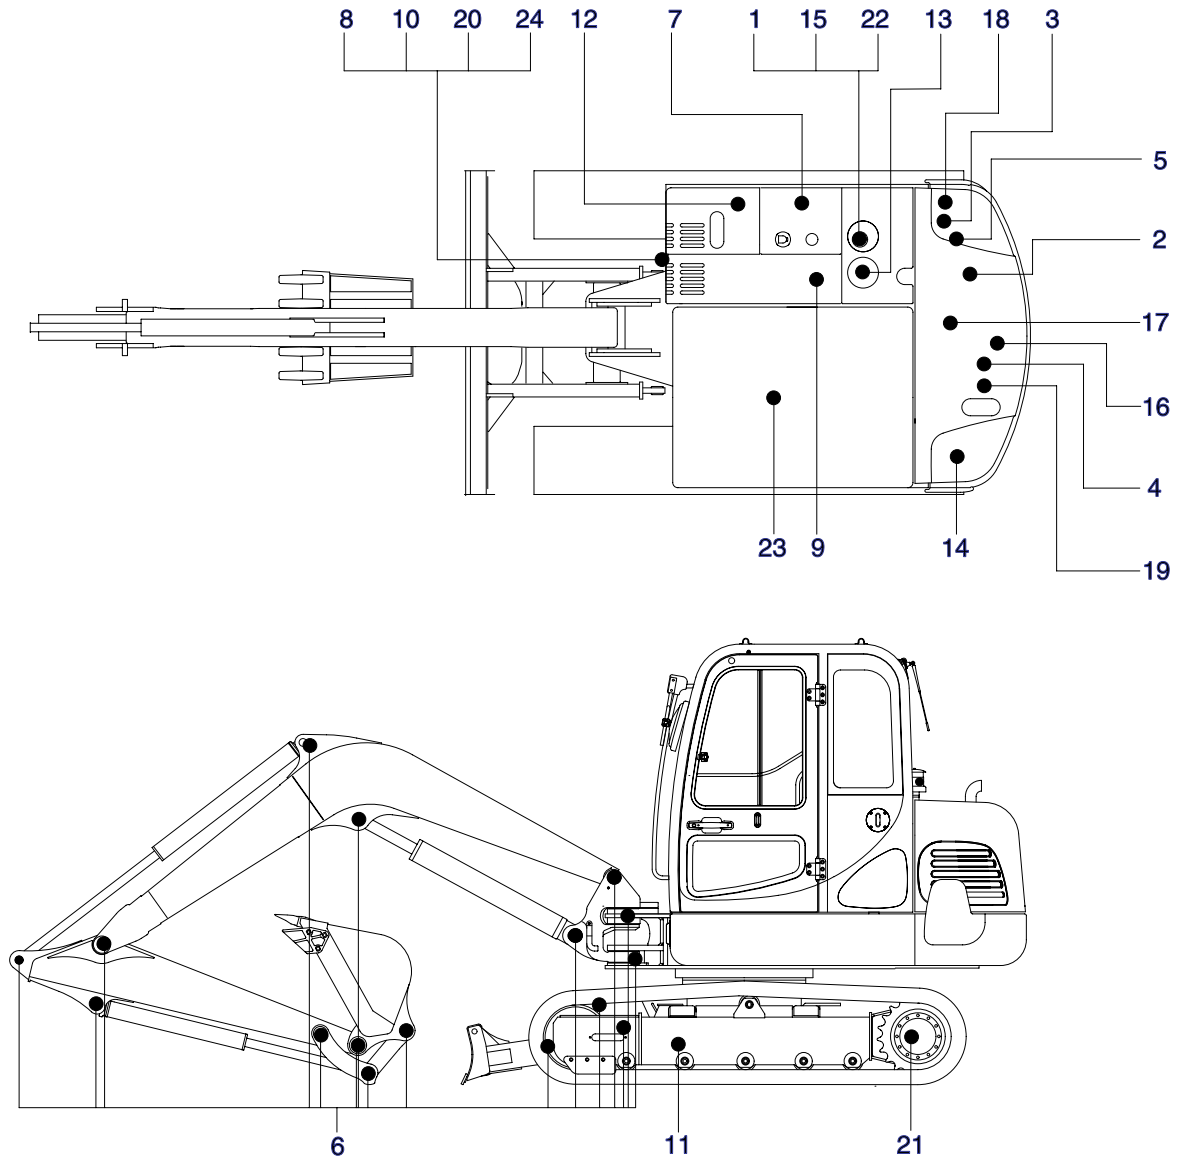

R5576MA05A

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	70(18.5)	1
	2	Engine oil level	Check, Add	EO	9.2(2.4)	1
	3	Radiator coolant	Check, Add	C	10(2.6)	1
	4	Water separator	Check, Drain	-	-	1
	5	Fan belt tension and damage	Check, Adjust	-	-	1
50 Hours or weekly	6	Attachment pins	Check, Add	PGL	-	16
	7	Fuel tank strainer and drain	Check, Clean	-	-	1
	8	Swing bearing	Lubricate	PGL	-	1
	9	Swing drive gear case(Gear oil)	Check, Add	GO	1.5(0.4)	1
	10	Swing drive gear case(Grease)	Check, Add	PGL	0.2(0.05)	1
	11	Track tension	Check, Adjust	PGL	-	2
	20	Swing gear and pinion	Check, Add	PGL	-	1
24	Boom swing cylinder	Lubricate	PGL	-	1	
250 Hours	2	Engine oil level	Change	EO	9.2(2.4)	1
	12	Battery(Electrolyte)	Check, Add	-	-	1
	13	Hydraulic oil return filter	Replace	-	-	1
	14	Line filter element	Replace	-	-	1
	15	Air breather element	Replace	-	-	1
	16	Engine oil filter	Replace	-	-	1
500 Hours	17	Air cleaner element(Outside)	Clean	-	-	1
	18	Radiator and cooler fin	Check, Clean	-	-	2
	19	Fuel filter element	Replace	-	-	1
1000 Hours	9	Swing drive gear case	Change	GO	1.5(0.4)	1
	21	Final drive gear case	Change	GO	1.2(0.3)	2
2000 Hours	1	Hydraulic oil level	Change	HO	70(18.5)	1
	3	Radiator coolant	Change	C	10(2.6)	1
	22	Hydraulic oil suction strainer	Check, Clean	-	-	1
As required	17	Air cleaner element(Inside/Outside)	Check, Clean	-	-	2
	23	Air conditioner filters	Check, Clean	-	-	1

※ **Oil symbol**

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil

HO : Hydraulic oil

C : Coolant

PGL : Grease

EO : Engine oil