 
 


### 3. SWITCHES

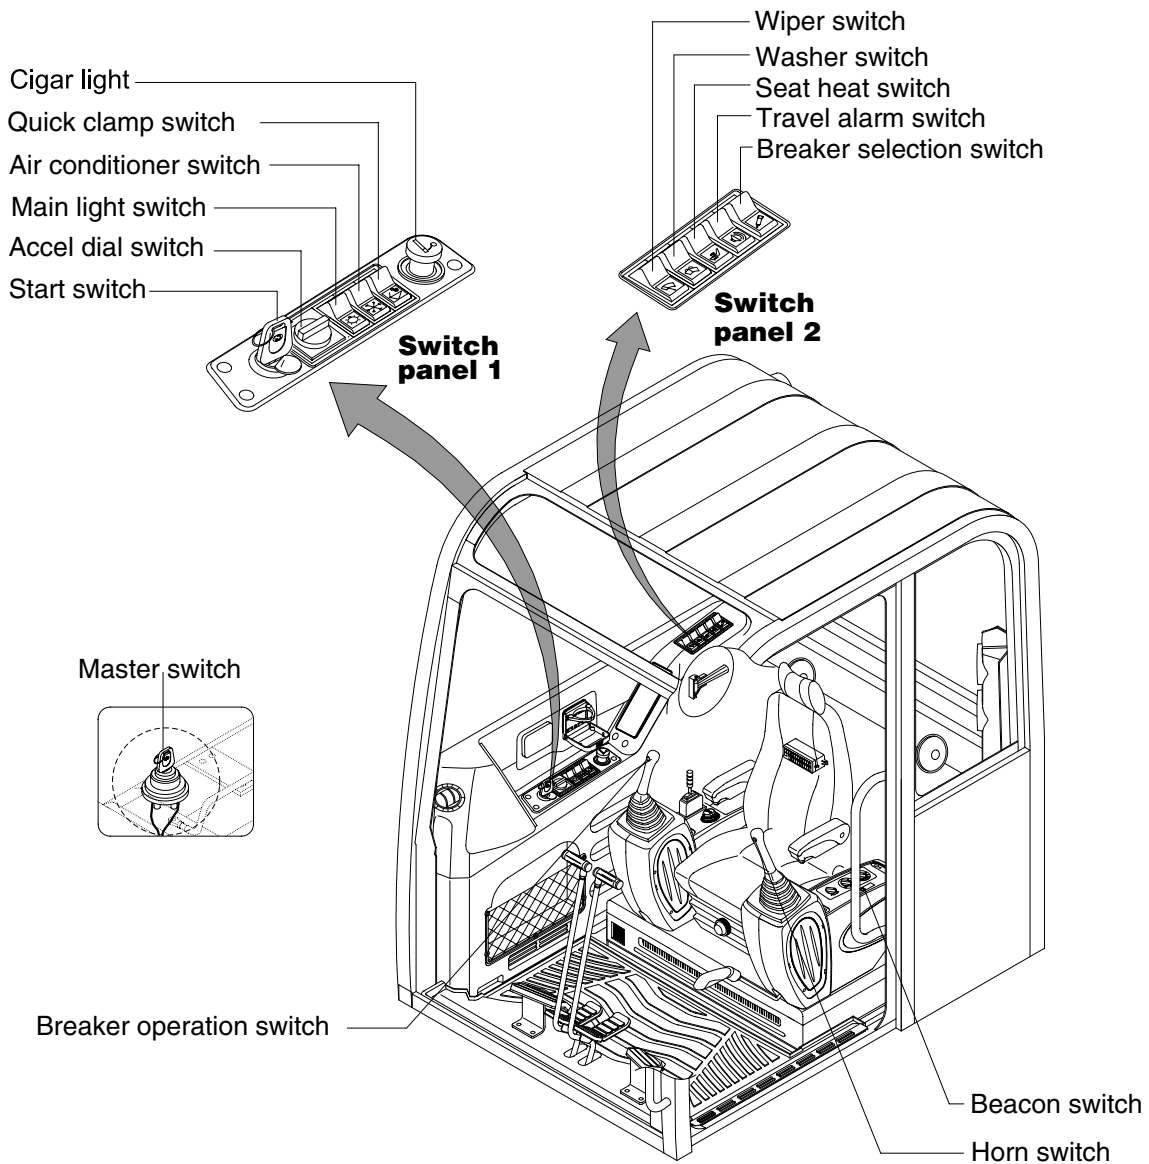

R557A3CD30A

#### 1) STARTING SWITCH

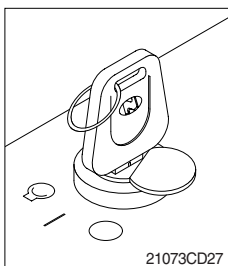 


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ◉ (START) : Use when starting the engine. Release key immediately after starting.


※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.

## 2) ACCEL DIAL

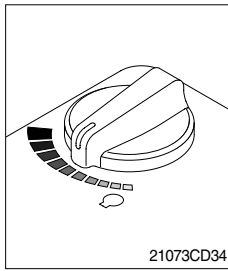


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
  - By rotating the accel dial to right : Engine speed increased.
  - By rotating the accel dial to left : Engine speed decreased.

## 3) MAIN LIGHT SWITCH

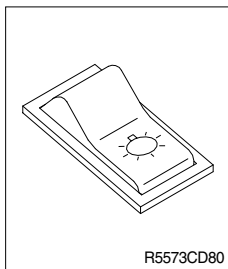 


- (1) This switch use to operates the head light and work light by two step.
  - First step : Head light and cluster illumination lamp comes ON.
  - Second step : Work light comes ON. Also, the below indicator lamp comes ON.

## 4) AIRCON SWITCH

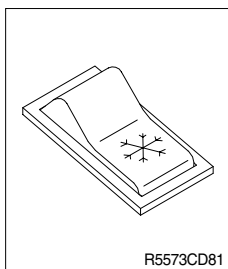 


- (1) This switch use to operates the air conditioner.
- (2) Refer to the air conditioner and heater for detail operation.

## 5) WIPER SWITCH

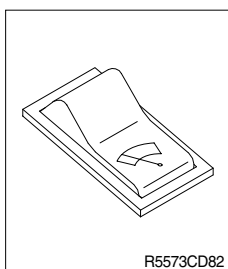 


- (1) The switch use to operates the wiper.  
The wiper operates.

## 6) WASHER SWITCH

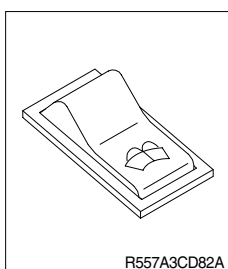 


- (1) This switch use to operates the washer.
  - The washer liquid is sprayed and the wiper is operated only while pressing this switch. If release the switch, return to the first position.

### 7) TRAVEL ALARM SWITCH(Optional)

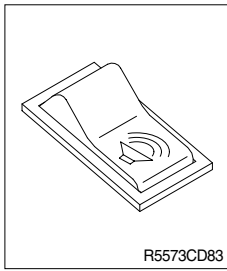 


- (1) This switch is the signal to alarm surroundings when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

### 8) BREAKER SELECTION SWITCH(Optional)

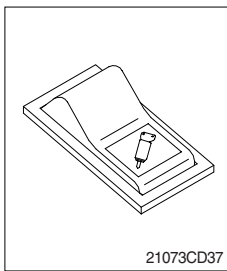 


- (1) This switch is used to operate breaker.
- ※ The breaker operates only when this switch is pressed.

### 9) BEACON SWITCH(Optional)

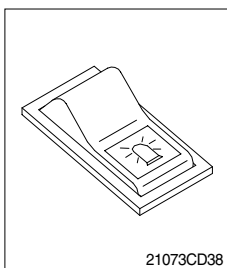 


- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operation this switch.

### 10) QUICK CLAMP SWITCH(Optional)

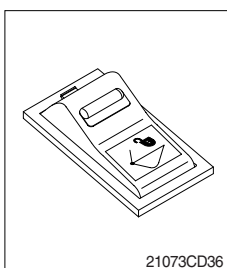 


- (1) This switch is used to engage or disengage the moving hook on quick clamp.
- ※ Refer to the page 8-6 for details.

### 11) MASTER SWITCH

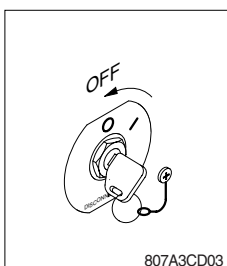 


- (1) This switch is used to shut off the entire electrical system.
  - (2) I : The battery remains connected to the electrical system.  
O : The battery is disconnected to the electrical system.
- ※ Never turn the master switch to O(OFF) with the engine running. It could result in engine and electrical system damage.

## 12) HORN SWITCH

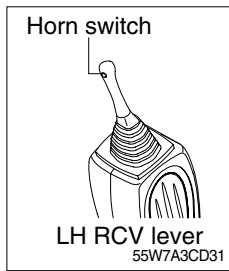 

- (1) This switch is at the top of left side control lever.  
On pressing, the horn sounds.

## 13) BREAKER OPERATION SWITCH

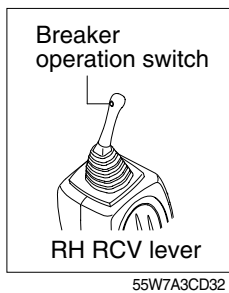 

- (1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.