



## 4. LEVERS AND PEDALS

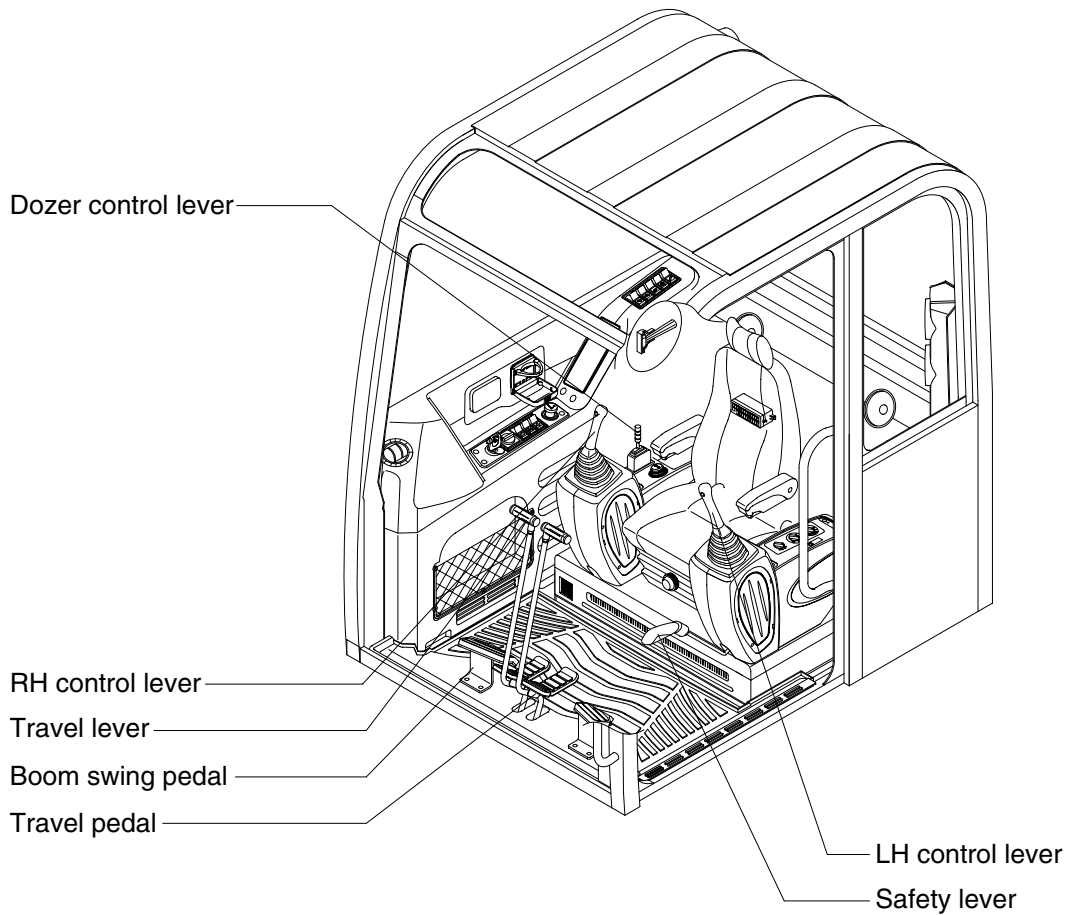


R557A3CD33A

### 1) LH CONTROL LEVER

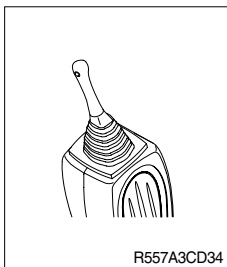


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to **operation of working device** in chapter 4 for details.

### 2) RH CONTROL LEVER

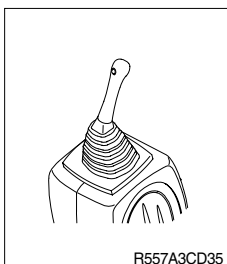


- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to **operation of working device** in chapter 4 for details.

### 3) SAFETY LEVER

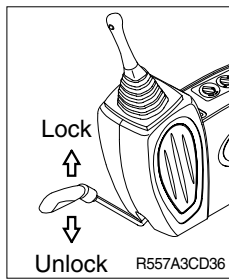


- (1) LH, RH control levers and dozer control lever are disabled from operation by locating the lever to lock position as shown.
    - ※ **Be sure to raise the lever to LOCK position when leaving from operator's seat.**
  - (2) By pushing lever to UNLOCK position, machine is operational.
    - ※ **Do not use the safety lever for handle when getting on or off the machine.**
- ▲ **The machine is able to travel even when the safety lever is in the LOCK position.**

### 4) TRAVEL LEVER

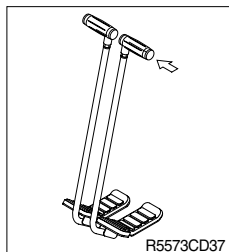


- (1) This lever is mounted on travel pedal and used for traveling by hand. The operation principle is same as the travel pedal.
- (2) Refer to **traveling of the machine** in chapter 4 for details.

### 5) TRAVEL PEDAL

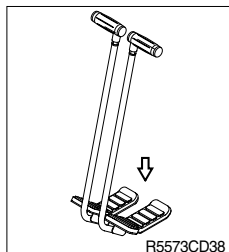


- (1) This pedal is used to move the machine forward or backward.
- (2) If left side pedal is pressed, left track will move.  
If right side pedal is pressed, right track will move.
- (3) Refer to **traveling of machine** in chapter 4 for details.

### 6) SEAT AND CONSOLE BOX ADJUST LEVER

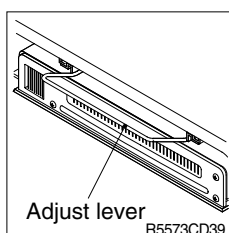


- (1) This lever is used to move the seat and console box to fit the contours of the operator's body.
- (2) Pull the lever to adjust forward or backward over 90mm(3.5").

### 7) DOZER CONTROL LEVER

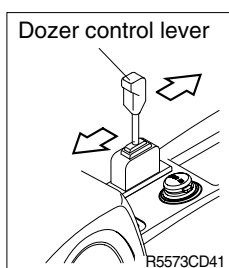

- (1) This lever is used to operate the dozer blade.
- (2) If the lever is pushed forward, the dozer blade will be going down.  
If the lever is pulled back, the dozer blade will be going up.

## 8) BOOM SWING PEDAL

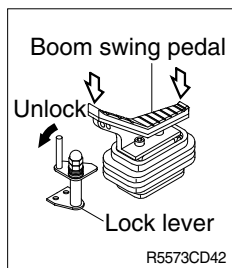

- (1) This pedal is used to swing the boom to the right and left direction.
  - (2) Move the lock lever to unlock position by foot.
  - (3) The pedal is pressed to front side, boom will move to the left direction.  
The pedal is pressed to rear side, boom will move to the right direction.
- ※ **Move the lock lever to LOCK position When leaving from operator's seat.**