


5. MAINTENANCE CHART

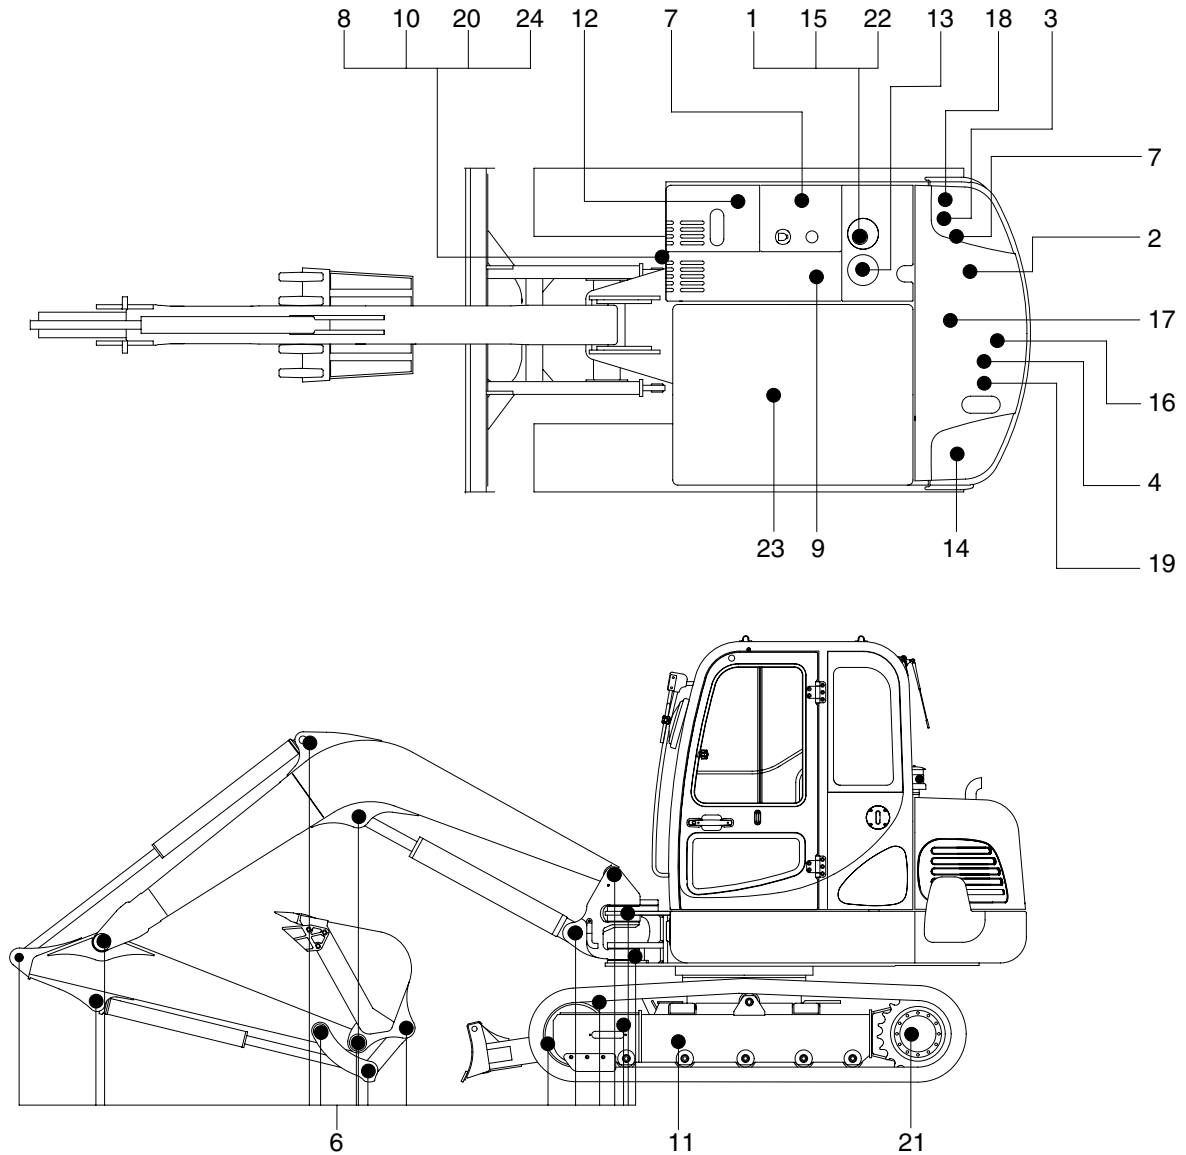

R5576MA05A

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	70(18.5)	1
	2	Engine oil level	Check, Add	EO	9.2(2.4)	1
	3	Radiator coolant	Check, Add	C	10(2.6)	1
	4	Water separator	Check, Drain	-	-	1
	5	Fan belt tension and damage	Check, Adjust	-	-	1
50 Hours or weekly	6	Attachment pins	Check, Add	PGL	-	16
	7	Fuel tank strainer and drain	Check, Clean	-	-	1
	8	Swing bearing	Lubricate	PGL	-	1
	9	Swing drive gear case(Gear oil)	Check, Add	GO	1.5(0.4)	1
	10	Swing drive gear case(Grease)	Check, Add	PGL	0.2(0.05)	1
	11	Track tension	Check, Adjust	PGL	-	2
	20	Swing gear and pinion	Check, Add	PGL	-	1
250 Hours	24	Boom swing cylinder	Lubricate	PGL	-	1
	12	Battery(Electrolyte)	Check, Add	-	-	1
500 Hours	15	Air breather element	Replace	-	-	1
	2	Engine oil	Change	EO	11.6(3.1)	1
	16	Engine oil filter	Replace	-	-	1
	17	Air cleaner element(Outside)	Clean	-	-	1
	18	Radiator and cooler fin	Check, Clean	-	-	2
1000 Hours	19	Fuel filter & fuel prefilter element	Replace	-	-	1
	9	Swing drive gear case	Change	GO	1.5(0.4)	1
	13	Hydraulic oil return filter	Replace	-	-	1
	14	Line filter element	Replace	-	-	1
2000 Hours	21	Final drive gear case	Change	GO	1.2(0.3)	2
	1	Hydraulic oil	Change	HO	70(18.5)	1
	3	Radiator coolant	Change	C	10(2.6)	1
As required	22	Hydraulic oil suction strainer	Check, Clean	-	-	1
	17	Air cleaner element(Inside/Outside)	Check, Clean	-	-	2
	23	Air conditioner filters	Check, Clean	-	-	1

※ **Oil symbol**

Please refer to the recommended lubricants for specification.

DF : Diesel fuel GO : Gear oil
HO : Hydraulic oil C : Coolant
PGL : Grease EO : Engine oil