 
 


## 4. LEVERS

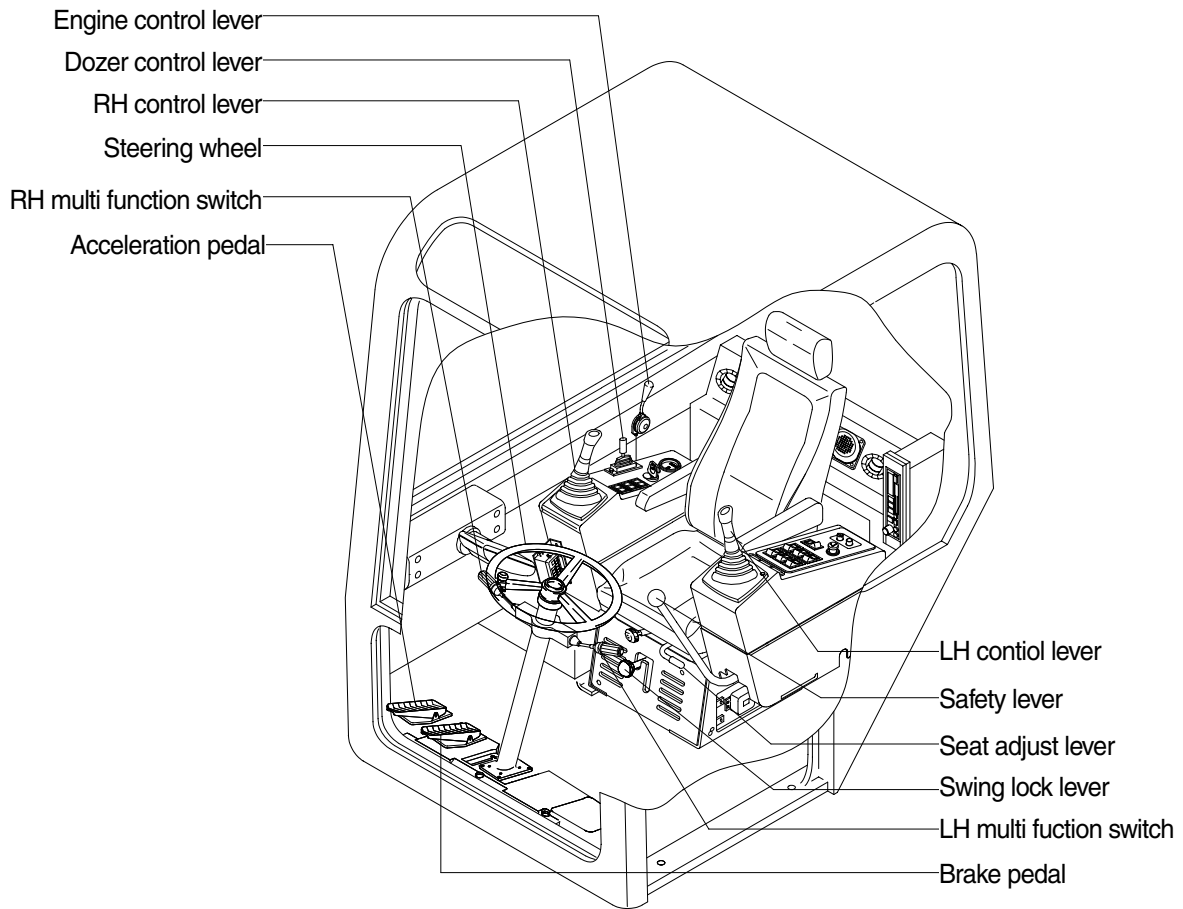

55WM3CD06

 
### 1) LH CONTROL LEVER

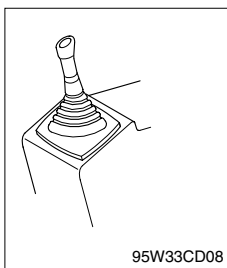

(1) This joystick is used to control the swing and the arm.  
Also, joystick is used to control the boom swing by boom offset switch setting.

(2) Refer to **operation of working device** in chapter 4 for details.


### 2) RH CONTROL LEVER

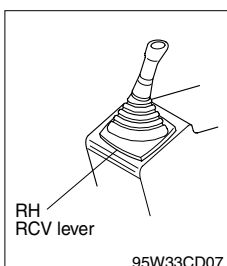

(1) This joystick is used to control the boom and the bucket.


(2) Refer to **operation of working device** in chapter 4 for details.

### 3) STEERING WHEEL

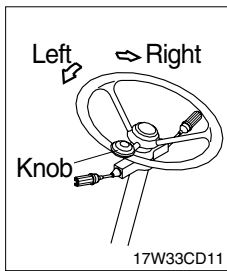 

- (1) If the steering wheel is turned to left, the machine will move to the left and turn it to the right, the machine will move to the right.
- (2) As the handle is equipped with a knob, it is convenient to operate with one hand or quickly.


### 4) ACCELATOR PEDAL

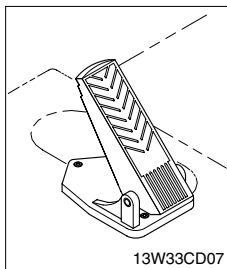 

- (1) When this pedal is stepped, the rotation speed of engine runs from low speed to high speed and the machine starts traveling.


**▲ Before starting the machine with stepping on the pedal, check if the underframe is certainly in the traveling direction.**
 
### 5) BRAKE PEDAL

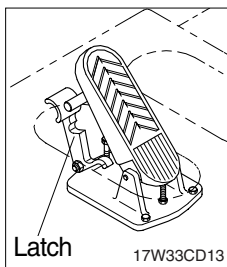


- (1) As the machine is equipped with the hydraulic power brake, slight stepping on the pedal gets powerful brake force. So abruptness should be avoid except emergency.
- (2) For smooth traveling, the foot should be off from the pedal when the brake is not in use.
- (3) Do not stepping on the pedal frequently, it makes the brake inefficient.

### 6) SWING LOCK LEVER

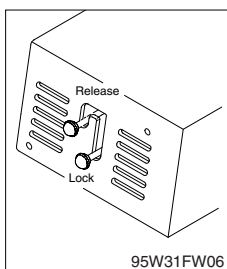 


- (1) This is the system to lock the swing by connecting the upper swing part and the lower frame mechanically.
  - (2) The swing is locked when the lever is down and released when the lever is up.
- ※ **Before operating the machine, be sure to release the swing lock device.**

## 7) SAFETY LEVER

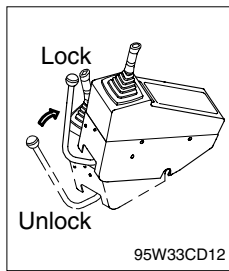 

- (1) All control levers and pedals are disabled from operation by pulling the lever as shown.
  - ※ **Be sure to raise the lever to LOCK position when leaving from operator's seat.**
- (2) By pushing lever to UNLOCK position, machine is operational.
  - ※ **Do not use the safety lever for handle when getting on or off the machine.**

## 8) SEAT AND ADJUST LEVER

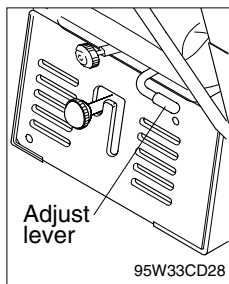 

- (1) This lever is used to move the seat to fit the contours of the operator's body.
- (2) Pull the lever to adjust forward or backward over 220mm(8.7").