 



5. OTHERS

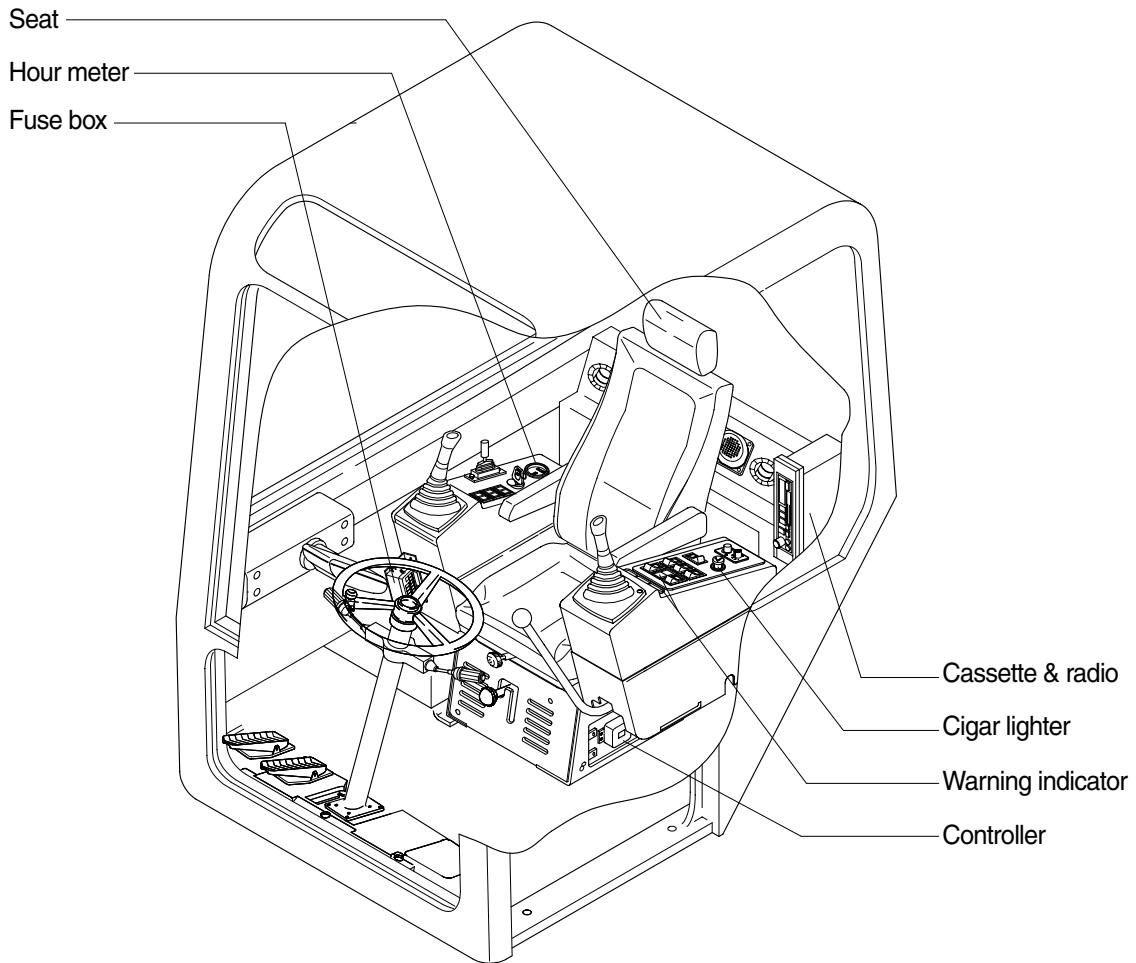

55WM3CD07


1) RADIO AND CASSETTE(up to #0037)

 High performance audio system is equipped for pleasant operation.

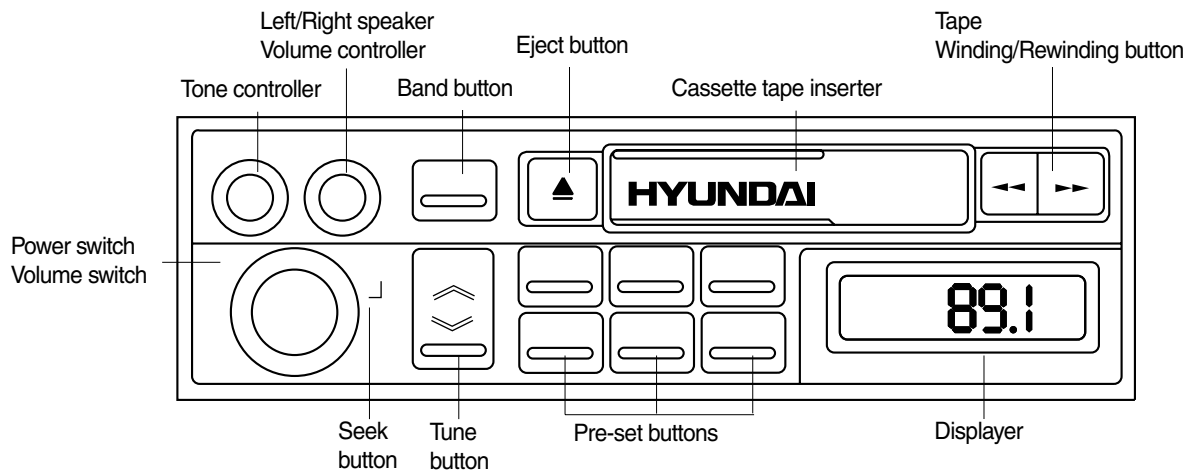


13033CD57

 (1) Power and volume switch

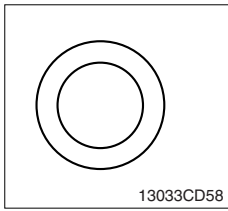


- ① This switch is turned to right, power will be turned ON and the sound is increased.
- ② If it is turned to left, volume will be decreased and power will be turned OFF.

 (2) Seek button

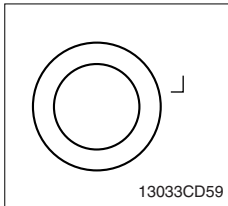


- ① If this seek button is pressed, the radio automatically stops at the next frequency of broadcasting for your listening.

 (3) Tune button

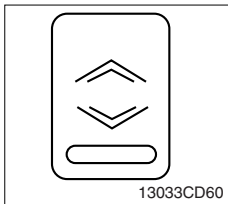


- ① Whenever you press " \wedge " button, higher channels are selected.
- ② Whenever you press " \vee " button, lower channels are selected.
- ③ **America**
AM band : Frequency changes in 10KHz between 530 to 1710KHz.
FM band : Frequency changes in 0.2MHz between 87.9 to 107.9MHz.
- ④ **Europe**
AM band : Frequency changes in 9KHz between 531 to 1600KHz.
FM band : Frequency changes in 0.1MHz between 87.9 to 107.9MHz.

 (4) Pre - set button

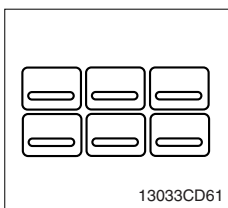


- ① You can immediately listen to the station by pressing pre-set button for which broadcasting station is pre-set.
- ② How to set broadcasting in memory.
 - You can pre-set 6 stations each AM/FM band.
 - When you want the station to be set in memory, press selected pre-set button for more than 2 seconds.

 (5) Displayer

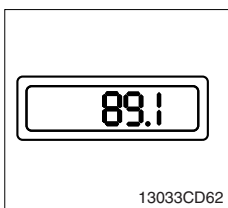


- ① When radio is turned ON, stereo, AM, FM and reception frequency are displayed.
- ② When cassette tape is played, indicator arrow (\leftarrow | , \rightarrow) are displayed.

 (6) Tone button

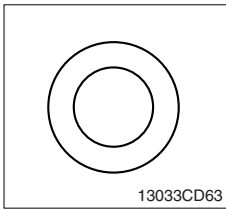


- ① If tone button is pressed, it will spring out.
If it is turned to right, high tone is increased, and if it is turned to left, low tone is increased.
- ② It will be fixed by pressing again after adjustment.

 (7) Left/Right speaker volume button

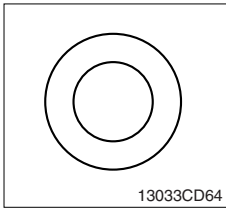


- ① If balance button is pressed, it will spring out.
Volume of right and left speakers will be adjusted by turning the button to right or left.
- ② It will be fixed by pressing again after adjustment.

 (8) Band button

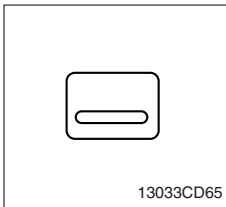

- ① You can listen to broadcasting on AM or FM band by pressing this band selection button.

 
(9) Tape winding / Rewinding button

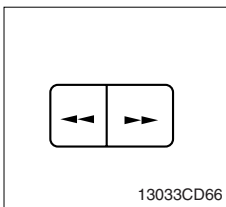

- ① If you press this button once while the tape is playing the direction will be reversed.
- ② If you press one of these buttons the tape will be winding fast or rewinding, and if you press another button on a certain point, the tape will be played.


2) CASSETTE AND RADIO(#0034 and up)

 High performance audio system is equipped for pleasant operation.

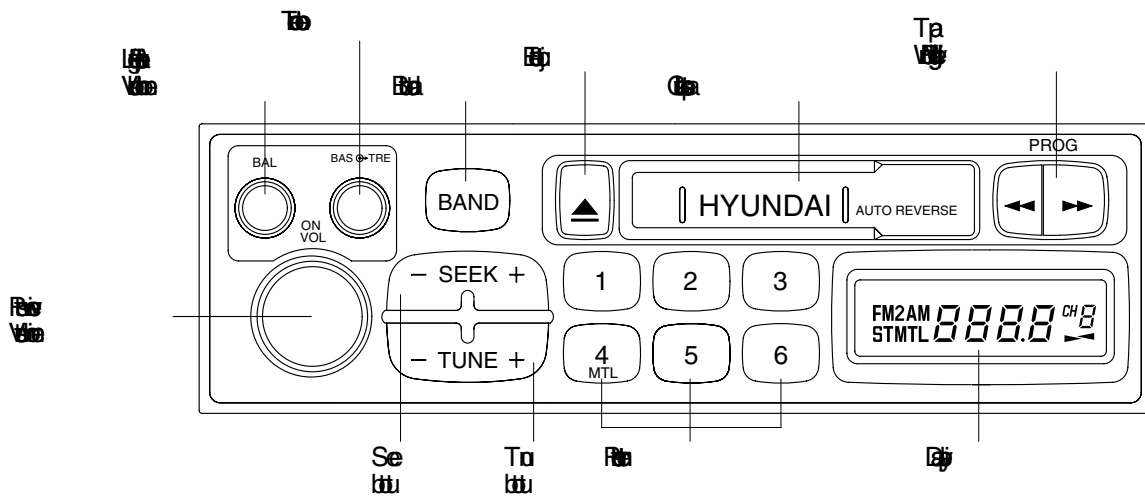


20W03CD08

 (1) Power and volume switch

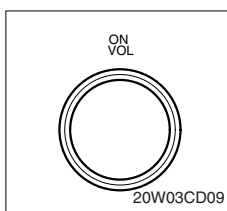


- ① This switch is turned to right, power will be turned ON and the sound is increased.
 - ② If it is turned to left, volume will be decreased and power will be turned OFF.
- ※ The volume controller of the cassette radio does not operate when turning ON the remote controller power.

 (2) Seek button

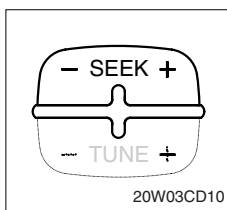


- ① If this seek button is pressed, the radio automatically stops at the next frequency of broadcasting for your listening.

 (3) Tune button

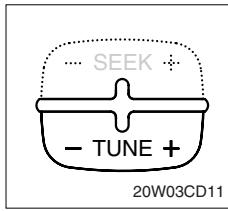


- ① Whenever you press " + " button, higher channels are selected.
- ② Whenever you press " - " button, lower channels are selected.
- ③ **General**
AM band : Frequency changes in 9kHz between 531 to 1602kHz.
FM band : Frequency changes in 0.1MHz between 87.5 to 108.0MHz.
- ④ **America**
AM band : Frequency changes in 10kHz between 530 to 1710kHz.
FM band : Frequency changes in 0.2MHz between 87.9 to 107.9MHz.
- ⑤ **Europe**
LW band : Frequency changes in 9kHz between 153 to 279kHz.
MW band : Frequency changes in 9kHz between 522 to 1620kHz.
FM band : Frequency changes in 0.05MHz between 87.5 to 108.0MHz.

 (4) Pre - set button

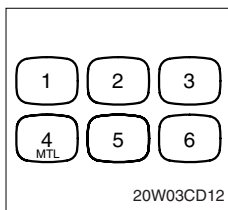


- ① You can immediately listen to the station by pressing pre-set button for which broadcasting station is pre-set.
- ② How to set broadcasting in memory.
 - You can pre-set 6 stations each AM/FM band.
 - When you want the station to be set in memory, press selected pre-set button for more than 2 seconds.

 (5) Displayer

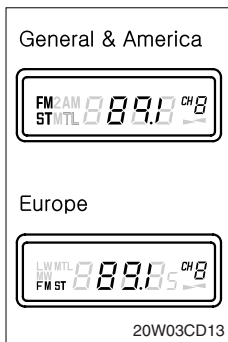


- ① **General and America**
 - When radio is turned ON, stereo, AM, FM, FM2, MTL and reception frequency are displayed.
- ② **Europe**
 - When radio is turned ON, stereo, LW, MW, FM, FM2, MTL and reception frequency are displayed.
- ③ When cassette tape is played, indicator arrow(◀ , ▶) are displayed.

 (6) Left/Right speaker volume button

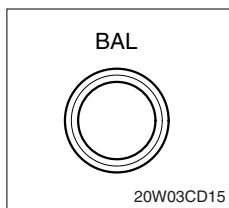

- ① If balance button is pressed, it will spring out.
Volume of right and left speakers will be adjusted by turning the button to right or left.
- ② It will be fixed by pressing again after adjustment.

 (7) Tone button

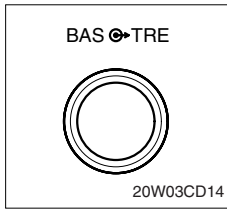

① BASS tone

If tone button is pressed, it will spring out.

If it is turned to right, BASS tone is increased, and if it is turned to left, BASS tone is decreased.

 
② TREBLE tone

You can adjust the TREBLE tone by pull out the button.

If it is turned to right, TREBLE tone is increased, and if it is turned to left, TREBLE tone is decreased.


③ It will be fixed by pressing again after adjustment.

(8) Band button

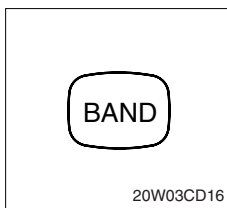

① You can listen to broadcasting on AM or FM band by pressing this band selection button.

 (9) Tape winding/Rewinding button

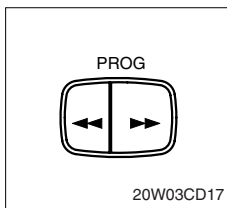


① If you press this button once while the tape is playing the direction will be reversed.

② If you press one of these buttons the tape will be winding fast or rewinding, and if you press another button on a certain point, the tape will be played.

3) SEAT

 The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

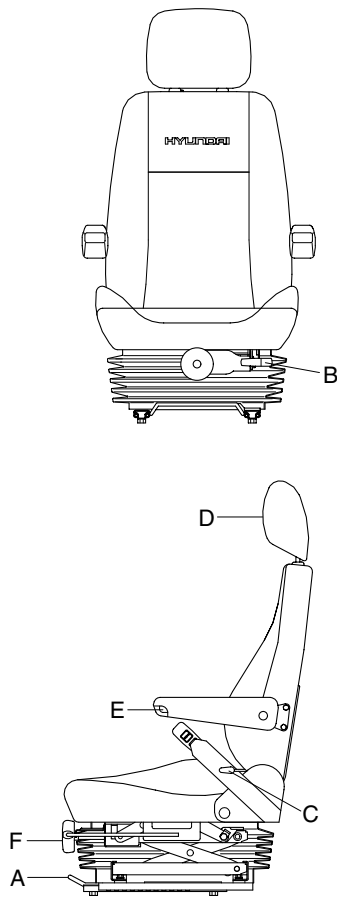

95W33CD16

(1) Forward/Backward adjustment

- ① Pull lever A to adjust seat forward or backward.
- ② The seat can be moved forward and backward over 180mm(7.1in)in 9 steps.

(2) Upward/Downward adjustment

- ① Pull lever B to adjust seat upward or downward.
- ② Forward or backward side adjustment only can be made, tilting to one side, by moving lever B, respectively.

(3) Reclining adjustment

Pull lever C to adjust seat back rest.

(4) Arm rest adjustment

This can be adjusted by turning the handle E to right and left.

 
(5) Head rest adjustment(D)

This is adjustable vertically to fit operator's requirements.

(6) Cushion adjustment(F)(Option)

adjust the handle to the operator's weight.

4) CIGAR LIGHTER

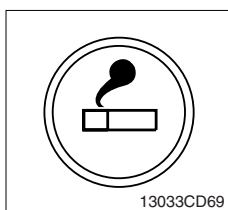


- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

※ Service socket

Use cigar lighter socket when you need emergency power.

Do not use the lighter exceeding 12V, 100W.

 5) FUSE BOX

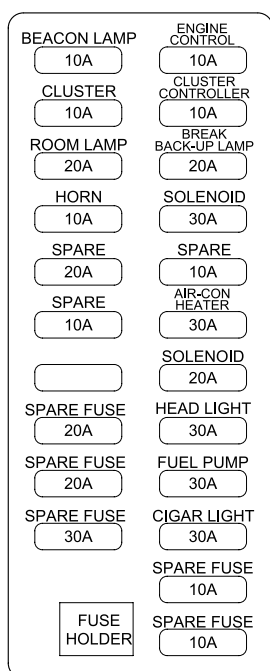

R55NW3CD08

 
- (1) This can be used when the engine starting switch is ON.
- (2) The lighter can be used when it springs out in a short while after being pressed down.

※ **Service socket**

Use cigar lighter socket when you need emergency power.


Do not use the lighter exceeding 12V, 100W.

6) CONTROLLER

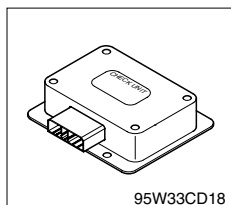


- (1) This controller, provided with signal from electric monitor button, handles each electric devices, also provided with signal from engine & hydraulic input sensor, informs operator of machine status through lamp lighting of electric monitor.

 7) HOUR METER

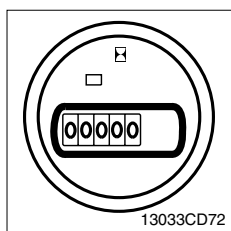


- (1) This meter shows the total operation hours of the machine.
- (2) Always ensure the operating condition for the meter during the machine operation. Inspect and service the machine based on hours as indicated in chapter 6, **Maintenance**.

 8) WARNING INDICATOR

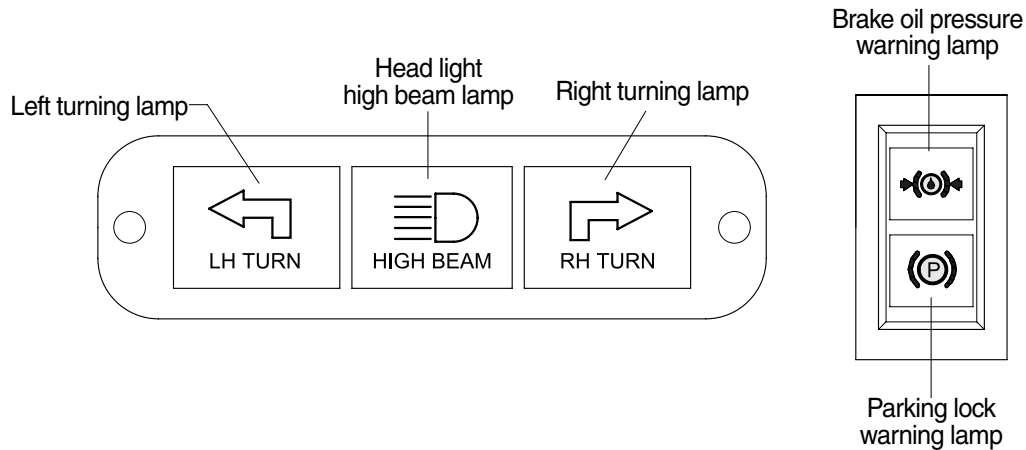


55WM3CD09

 (1) Left turning pilot lamp

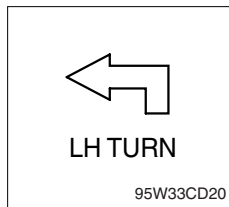


- ① This lamp flashes with sound when the RH multifunction switch is move to forward position.

 (2) Right turning pilot lamp

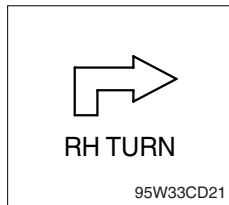


- ① This lamp flashes with sound when the RH multifunction switch is move to backward position.

 (3) Head light high beam pilot lamp

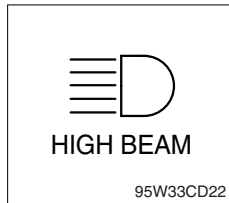


- ① This lamp is ON when the head light switch is high beam position or passing function.
- ② When passing other machines ahead, this lamp must be used for a few seconds to give other machines warning for a few seconds.

 (4) Brake oil pressure warning lamp

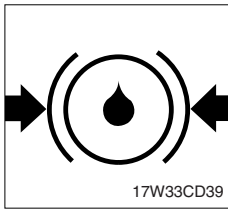

- ① The lamp lights ON when the oil pressure of service brake drops below the normal range.
 - ② When the lamp is ON, stop the engine and check for its cause.
- ※ **Do not operate until any problems are corrected.**

 (5) Parking lock warning lamp

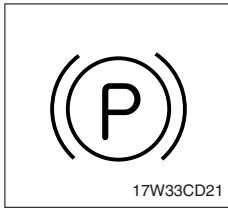

- ① When the parking brake is actuated, the lamp lights ON.
- ※ **Check the lamp is OFF before driving.**