

5. TRANSPORTATION

1. LOAD TRAVELING

As this machine can run at the maximum speed of 20~27km/h, it is not necessary to transport the machine on trailer in a short distance.

But the transportation by the trailer is convenient in a long distance.

If it is necessary to travel on a road, observe the followings.

- 1) Comply with regulations regarding this machine for the sake of safety.
- 2) Perform daily inspection before starting the machine.
- 3) Cross the bridge after checking that it will safely support the machine weight. If the bridge can not support, a detour must be prepared or the bridge must be reinforced.
- 4) When traveling for a long distance, stop every hour to allow tires and other components to cool down and check any abnormality.
- 5) Drive with the bucket empty.

