


2. INSTRUMENTS AND CONTROLS

1) STOP VALVE

This valve stops the flow of hydraulic oil.

- ① Free : The hydraulic oil flows.
- ② Lock : The Hydraulic oil is stopped.
- ※ **Before installing or removing an attachment, turn this valve to lock.**

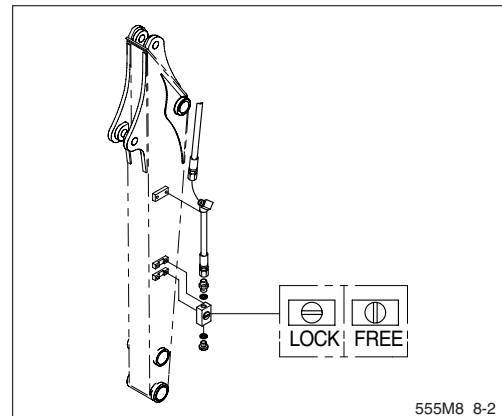

2) CONTROL SWITCH ON LEVER

- (1) This switch on lever is used to control the attachment.

