

CONTENTS

Foreword	0-1	8. Normal operation of excavator	4-21
Before servicing this machine	0-2	9. Attachment lowering	4-22
Table to enter S/No and distribution	0-3	10. Storage	4-23
EC regulation approved	0-4		
Safety labels	0-5	5. TRANSPORTATION	
Guide(Direction, S/No, Symbol)	0-7	1. Load travelling	5-1
		2. Preparation for transportation	5-2
1. SAFETY HINTS		3. Loading the machine	5-3
1. Before operating the machine	1-1	4. Fixing the machine	5-5
2. During operating the machine	1-6		
3. During maintenance	1-13	6. MAINTENANCE	
4. Parking	1-16	1. Instruction	6-1
		2. Tightening torque	6-6
2. SPECIFICATIONS		3. Fuel, coolant and lubricants	6-9
1. Major components	2-1	4. Maintenance check list	6-11
2. Specifications	2-2	5. Maintenance chart	6-15
3. Working range	2-3	6. Service instruction	6-17
4. Weight	2-4	7. Electrical system	6-38
5. Lifting capacities	2-5		
6. Bucket selection guide	2-6	7. TROUBLESHOOTING GUIDE	
7. Specification for major components	2-7	1. Engine	7-1
8. Recommended oils	2-11	2. Electrical system	7-2
		3 Others	7-3
3. CONTROL DEVICES			
1. Cab devices	3-1	8. HYDRAULIC BREAKER	
2. Cluster	3-2	1. Selecting hydraulic breaker	8-1
3. Switches	3-8	2. Instruments and controls	8-2
4. Levers and pedals	3-13	3. Circuit configuration	8-3
5. Others	3-16	4. Precaution when operating the breaker	8-4
		5. Quick clamp	8-6
4. OPERATION			
1. Suggestion for new machine	4-1		
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3		
4. Operation of the working device	4-7		
5. Traveling of the machine	4-8		
6. Efficient working method	4-14		
7. Operation in the special work sites	4-19		