

## A

After engine start .....	4-4
Air breather element .....	6-28
Air cleaner filter .....	6-23
Air conditioner & heater .....	3-17
Air conditioner filter .....	6-41
Alternate exit .....	0-9
Attachment lowering .....	4-22
Axle gear oil .....	6-33

## B

Battery .....	6-38
Before starting engine .....	4-2
Boom lowering .....	4-22
Bucket clearance adjustment .....	6-35
Bucket replacement .....	6-35
Bucket selection guide .....	2-6
Bucket tooth replacement .....	6-36

## C

Cab air filter .....	6-41
Cab device .....	3-1
Cassette & radio .....	3-19
Changing machine control pattern .....	4-25
Cigar lighter .....	3-26
Cluster .....	3-2
Coolant .....	6-19
Cooling fan .....	6-23

## D

Drive shaft lubricate .....	6-30
-----------------------------	------

## E

Engine oil filter .....	6-18
Engine oil level .....	6-17
Engine speed control lever .....	6-16
Engine starting & stop .....	4-3
Engine starting by booster .....	6-39
Engine stop .....	4-6

## F

Fan belt .....	6-22
Fuel filter .....	6-25
Fuel leakage .....	6-25

Fuel tank .....	6-24
Fuse box .....	3-23

## H

Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-26
Hydraulic oil filling .....	6-26
Hydraulic oil level .....	6-26

## L

Levers & pedals .....	3-14
Lifting capacities .....	2-5
Lubricant specification .....	6-9

## M

Maintenance check list .....	6-11
Major components .....	2-1
Monitor display .....	4-5
Mounting and dismounting .....	1-12

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-22
Operating pattern .....	4-25

## P

Pedals .....	3-14
Periodical replacement parts .....	6-5
Prefilter .....	6-24
Pilot line filter .....	6-28
Pin & bushing adjustment .....	6-37

## R

Radiator flushing .....	6-20
Radio .....	3-19
RCV lever lubricate .....	6-30
Recommended oils .....	2-10, 6-10
Relieving pressure .....	6-3
Return filter .....	6-27

## Q

Quick clamp .....	8-6
-------------------	-----

## S

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-26
Service meter .....	3-3
Speciation for major component .....	2-7
Specifications .....	2-2
Start switch .....	3-8
Storage .....	4-23
Suction strainer .....	6-27
Swing bearing grease .....	6-29
Swing gear .....	6-29
Swing reduction gear oil .....	6-28
Switch panel .....	3-7
Switches .....	3-7

## T

Tires air pressure .....	6-31
Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-11
Transportation .....	5-2
Gear box oil .....	6-34
Travelling machine .....	4-10
Troubleshooting guide .....	7-1
Turning pilot lamp .....	3-13

## W

Warming up operation .....	4-5
Warning lamps .....	3-4,5,6
Weight .....	2-4
Working device operation .....	4-7
Working method .....	4-14
Working range .....	2-3