



4. LEVERS AND PEDALS

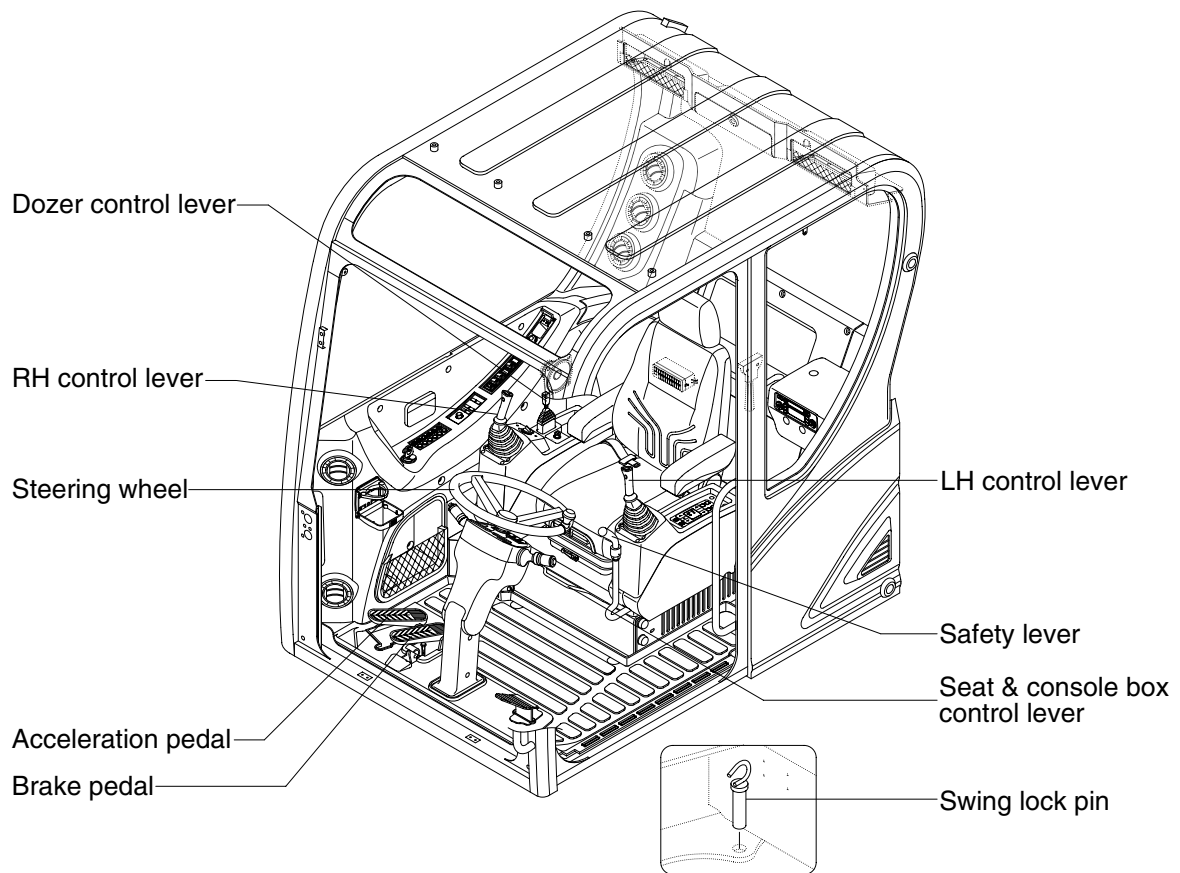


55W93CD04

1) LH CONTROL LEVER

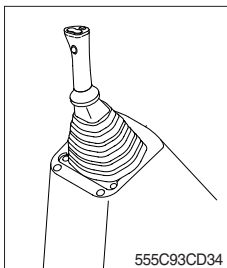


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to **operation of working device** in chapter 4 for details.

2) RH CONTROL LEVER

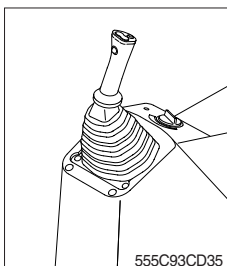


- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to **operation of working device** in chapter 4 for details.

3) SAFETY LEVER

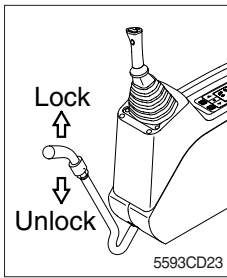


- (1) All control levers and pedals are disabled from operation by locating the lever to lock position as shown.
 - ※ **Be sure to raise the lever to LOCK position and tilt LH console box when leaving from operator's seat.**
- (2) By pushing lever to UNLOCK position, machine is operational.
 - ※ **Do not use the safety lever for handle when getting on or off the machine.**

4) ACCELATION PEDAL

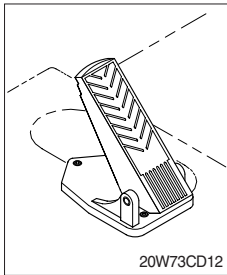


- (1) When this pedal is stepped, the machine starts traveling.
 - ▲ **Before starting the machine with stepping on the pedal, check if the underframe is certainly in the traveling direction.**

5) BRAKE PEDAL

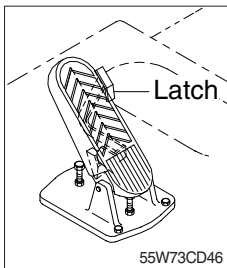


- (1) Pedal and latch provide two kinds of service brake function.
- (2) To operate service brake, push pedal with latch by foot.
 - ▲ **Push pedal and latch at once to avoid unexpected locking of pedal in traveling condition.**
 - ▲ **During travel, do not push pedal only in full stroke. It is dangerous due to the locking of service brake.**
- (3) If you want to choose working brake, just push pedal in full stroke without latch then the latch locks pedal and service brake is working continuously until you push the latch to release the pedal.
- (4) Push latch to release working brake.

6) SEAT AND CONSOLE BOX ADJUST LEVER

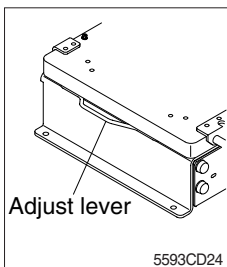


- (1) This lever is used to move the seat and console box to fit the contours of the operator's body.
- (2) Pull the lever to adjust forward or backward over 90 mm (3.5").

7) DOZER CONTROL LEVER

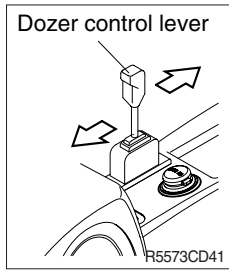


- (1) This lever is used to operate the dozer blade.
- (2) If the lever is pushed forward, the dozer blade will be going down.
If the lever is pulled back, the dozer blade will be going up.

8) STEERING WHEEL

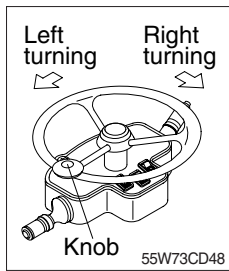

- (1) If the steering wheel is turned to left, the machine will move to the left and turn it to the right, the machine will move to the right.
- (2) As the handle is equipped with a knob, it is convenient to operate with one hand or quickly.

9) SWING LOCK PIN

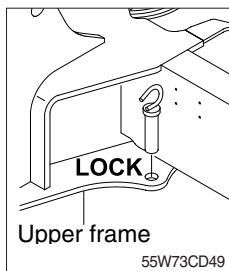

- (1) This is the system to lock the swing by connecting the upper swing part and the lower frame mechanically.
 - (2) The swing is locked when the lever is down and released when the lever is up.
- ※ **Before operating the machine, be sure to release the swing lock device.**