

4. MAINTENANCE CHECK LIST

1) DAILY SERVICE BEFORE STARTING

Check items	Service	Page
Visual check		
Fuel tank	Check, Refill	6-25
Hydraulic oil level	Check, Add	6-28
Engine oil level	Check, Add	6-18
Coolant level	Check, Add	6-20
Control panel & pilot lamp	Check, Clean	6-38
Fuel prefilter	Check, Clean	6-26
Fan belt tension and damage	Check, Adjust	6-24

2) EVERY 50 HOURS SERVICE

Check items	Service	Page
Fuel tank	Drain	6-25
Track tension	Check, Adjust	6-33
Swing bearing grease	Lubricate	6-31
Swing reduction gear oil	Check, Add	6-31
Lubricate pin and bushing	Lubricate	6-37
· Boom cylinder tube end		
· Boom foot		
· Boom cylinder rod end		
· Arm cylinder tube end		
· Arm cylinder rod end		
· Boom + Arm connecting		
· Bucket cylinder tube end		
· Bucket cylinder rod end		
· Arm + Bucket connecting		
· Arm + Link, Bucket control		
· Bucket control rod		

3) INITIAL 50 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-18, 19
Engine oil filter	Replace	6-18, 19
Fuel filter element	Replace	6-26
Bolts & Nuts	Check, Tight	6-8
<ul style="list-style-type: none"> · Sprocket mounting bolts · Travel motor mounting bolts · Swing motor mounting bolts · Swing bearing mounting bolts · Engine mounting bolts · Counterweight mounting bolts · Turning joint locating bolts · Track shoe mounting bolts and nuts · Hydraulic pump mounting bolts 		

Service the above items only for the new machine, and thereafter keep the normal service interval.

4) EVERY 100 HOURS SERVICE

Check items	Service	Page
★ Element in hydraulic tank breather	Replace	6-30

★ Replace filter for continuous hydraulic breaker operation only.

5) INITIAL 250 HOURS SERVICE

Check items	Service	Page
Swing reduction gear case	Change	6-31
Hydraulic oil return filter	Replace	6-29
Pilot line filter	Replace	6-30

6) EVERY 250 HOURS SERVICE

Check items	Service	Page
Battery (Electrolyte, voltage)	Check, Add	6-38
Element in hydraulic tank breather	Replace	6-30
Bolts & Nuts	Check, Tight	6-8
· Sprocket mounting bolts		
· Travel motor mounting bolts		
· Swing motor mounting bolts		
· Swing bearing mounting bolts		
· Engine mounting bolts		
· Counterweight mounting bolts		
· Turning joint locating bolts		
· Track shoe mounting bolts and nuts		
· Hydraulic pump mounting bolts		

7) INITIAL 500 HOURS SERVICE

Check items	Service	Page
Travel reduction gear case	Replace	6-32

8) EVERY 500 HOURS SERVICE

Check items	Service	Page
★Engine oil	Change	6-18, 19
★Engine oil filter	Replace	6-18, 19
Radiator and oil cooler	Check, Clean	6-23
☆ Air cleaner element(Primary)	Inspect, Clean	6-25
Fuel filter element	Replace	6-27
Fuel prefilter	Replace	6-26
◆Hydraulic return filter	Replace	6-29
◆Pilot line filter	Replace	6-30

★ If you use high sulfur containing fuel above than 0.5% or use low grade of engine oil reduce change interval.

☆ Replace primary element and safety element after 4 times cleanings of primary element.

◆ Replace 2 filters for continuous hydraulic breaker operation only.

9) EVERY 1000 HOURS SERVICE

Check items	Service	Page
Travel motor reduction gear oil	Change	6-32
Swing reduction gear oil	Change	6-31
Grease in swing gear and pinion	Change	6-32
Hydraulic oil return filter	Replace	6-29
Pilot line filter	Replace	6-30

10) EVERY 2000 HOURS SERVICE

Check items	Service	Page
Hydraulic tank		
★ · Oil	Change	6-28
· Suction strainer	Check, Clean	6-29
Coolant	Change	6-20, 21, 22, 23

★Change oil every 600 hours of continuous hydraulic breaker operation.

9) WHEN REQUIRED

Whenever you have trouble in the machine, you must perform the service of related items, system by system.

Check items	Service	Page
Fuel system		
· Fuel tank	Drain or Clean	6-25
· Prefilter	Drain or Replace	6-26
· Fuel filter element	Replace	6-27
Engine lubrication system		
· Engine oil	Change	6-18, 19
· Engine oil filter	Replace	6-18, 19
Engine cooling system		
· Coolant	Add or Change	6-20, 21, 22, 23
· Radiator	Clean or Flush	6-20, 21, 22, 23
Engine air system		
· Air cleaner element(Primary, safety)	Replace	6-25
Hydraulic system		
· Hydraulic oil	Add or Change	6-28
· Return filter	Replace	6-29
· Drain line filter	Replace	6-30
· Pilot line filter	Replace	6-30
· Element of breather	Replace	6-30
· Suction strainer	Clean	6-29
Under carriage		
· Track tension	Check, Adjust	6-33
Bucket		
· Tooth	Replace	6-35
· Side cutter	Replace	6-35
· Linkage	Adjust	6-34
· Bucket assy	Replace	6-34
Air conditioner and heater		
· Fresh filter	Clean, Replace	6-41
· Recirculation filter	Clean	6-41, 42