

A	
Air cleaner	6-23
Air conditioner & heater	3-24
Air conditioner filter	6-45
Axle oil	6-34
B	
Battery	6-42
Before starting engine	4-2
Belt	6-21
Belt tensioner	6-21
Boom kick out	4-20
Brake line filter	6-28
Bucket leveler	4-21
C	
Cab device	3-1
Charge air cooler	6-21
Cigar lighter	3-27
Cluster	3-2
Control device	3-21
Coolant level	6-17
E	
Engine control module(ECM)	3-29
Engine oil filter	6-15
Engine oil level	6-15
F	
Fault codes	3-11
Fuel filter	6-24
Fuse box	3-29
G	
Gear selector lever	3-22
H	
Hydraulic oil changing	6-26
Hydraulic oil filling	6-26
Hydraulic oil level	6-26
Hydraulic safety lock lever	3-23
L	
LCD	3-8
Loading and unloading	5-6
Lubrication	6-37
M	
Machine control unit(MCU)	3-29
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-28
P	
Pilot line filter	6-27
Prefilter	6-24
R	
Radiator and oil cooler	6-20
Recommended lubricants	6-9
Return filter	6-27
Radio and cassette	3-30
S	
Safety hints	1-1
Safety labels	0-5
Seat	3-28
Specifications	2-2
Storage	4-24
Switchs	3-14
T	
Tightening torque	6-7
Tire	6-29
Towing the machine	5-7
Transmission cold starting	4-5
Transmission control unit (TCU)	3-29
Transmission oil filter	6-32
Transmission oil level	6-32
Transportation	5-1
Travelling machine	4-8
Troubleshooting guide	7-1
W	
Warming up operation	4-6
Weight	2-6
Working method	4-13