

## 4. MAINTENANCE CHECK LIST

Scheduled maintenance is the normal maintenance necessary to provide proper and efficient machine operation. To protect your investment and prolong the service life of your machine, follow the scheduled maintenance list below.

### 1) EVERY 10 HOURS SERVICE

Check items	Service	Page
Fuel level (Fuel tank)	Check, Refill	6-23
Hydraulic oil level	Check, Add	6-26, 27
Engine oil level	Check, Add	6-16, 17
Transmission oil level	Check, Add	6-34, 35
Radiator coolant level	Check, Add	6-18, 19, 20
Air cleaner element	Check, Clean	6-23
Tire (Air)	Check, Add	6-30, 31
Battery (Electrolyte)	Check, Add	6-45
Warning lamps	Check, Clean	6-45
Air tank	Drain	6-26

### 2) INITIAL 50 HOURS SERVICE

Check items	Service	Page
Engine oil	Change	6-16, 17
Tire (Wheel hub bolt)	Check, Tight	6-33
Attachment pins	Check, Lubricate	6-43
Center pivot pins	Check, Lubricate	6-40
Steering cylinder pin	Check, Lubricate	6-39, 40
Engine oil filter element	Replace	6-16, 17
Rear axle pivot pin	Lubricate	6-39

### 3) EVERY 50 HOURS SERVICE

Check items	Service	Page
Attachment pins	Lubricate	6-43
Drive shaft	Lubricate	6-39, 40
Air conditioner and heater outer filter	Check, Clean	6-48

#### 4) INITIAL 100 HOURS SERVICE

Check items	Service	Page
Transmission oil	Change	6-34, 35

#### 5) EVERY 100 HOURS SERVICE

Check items	Service	Page
Axle oil level	Check, Add	6-36, 37
Steering cylinder pins	Lubricate	6-39, 40
Center pivot pin	Lubricate	6-40
Rear axle pivot pin	Lubricate	6-39

#### 6) INITIAL 200 HOURS SERVICE

Check items	Service	Page
Axle oil	Change	6-37, 38

#### 7) EVERY 250 HOURS SERVICE

Check items	Service	Page
Fuel tank(Water, sediment)	Drain	6-23
Engine oil	Change	6-16, 17
Air cleaner element	Replace	6-23
Tire(Wheel hub bolt)	Check, Tight	6-33
Air breather element	Replace	6-28
Fan belt tension	Check, Clean	6-21
Engine oil filter	Replace	6-16, 17
Hydraulic return oil filter	Replace	6-27
Pilot line filter	Replace	6-28
Brake line filter	Check, Clean	6-28
Fuel filter element	Replace	6-24
Corrosion resistor	Replace	6-25

#### 8) EVERY 500 HOURS SERVICE

Check items	Service	Page
Transmission oil filter	Replace	6-34, 35
Radiator fin	Check, Clean	6-21

**9) EVERY 1000 HOURS SERVICE**

Check items	Service	Page
Transmission oil	Change	6-34, 35
Axle oil	Change	6-37, 38
Air conditioner and heater outer filter	Replace	6-48
Transmission air breather	Check, Clean	6-36

**10) EVERY 2000 HOURS SERVICE**

Check items	Service	Page
Hydraulic oil	Change	6-27
Radiator coolant	Change	6-18, 19, 20

**11) WHEN REQUIRED**

Check items	Service	Page
Air cleaner element	Check, Clean, Replace	6-23
Radiator fin	Clean	6-21
Bucket tooth and cutting edge	Replace	6-41, 42
Tire	Check, Replace	6-31, 32, 33
Remote control valve	Lubricate	6-29
Air conditioner and heater		
· Outer filter	Check, Clean, Replace	6-48
· Inner filter	Check, Clean, Replace	6-48, 49