

A	
Air cleaner	6-23
Air conditioner & heater	3-22
Air conditioner filter	6-46
Axle oil	6-36
B	
Battery	6-43
Before starting engine	4-2
Belt tensioner	6-21
Boom kick out	4-20
Brake line filter	6-28
Bucket leveler	4-21
C	
Cab device	3-1
Charge air cooler	6-20
Cigar lighter	3-25
Cluster	3-2
Control device	3-19
Controller	3-27
Coolant level	6-17
Corrosion resistor	6-25
E	
Engine control module(CCM)	3-27
Engine oil filter	6-15
Engine oil level	6-15
F	
Fan belt	6-21
Fault codes	3-11
Fuel filter	6-24
Fuel water separator	6-24
Fuse box	3-27
G	
Gear selector lever	3-20
H	
Hydraulic oil changing	6-27
Hydraulic oil filling	6-27
Hydraulic oil level	6-27
Hydraulic safety lock lever	3-21
L	
LCD	3-8
Loading and unloading	5-6
Lubrication	6-39
M	
Maintenance control unit(MCU)	3-27
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-26
P	
Pilot line filter	6-28
R	
Radiator and oil cooler	6-20
Recommended lubricants	6-9
Return filter	6-28
Radio and cassette	3-28
S	
Safety hints	1-1
Safety labels	0-5
Seat	3-26
Specifications	2-2
Storage	4-24
Switchs	3-14
T	
Tightening torque	6-5
Tire	6-30
Towing the machine	5-7
Transmission cold starting	4-5
Transmission control unit(TCU)	3-27
Transmission oil filter	6-33
Transmission oil level	6-33
Transportation	5-1
Travelling machine	4-8
Troubleshooting guide	7-1
W	
Warming up operation	4-6
Weight	2-5
Working method	4-13