


SECTION 5 ELECTRICAL SYSTEM


GROUP 1 COMPONENT LOCATION

1. LOCATION 1

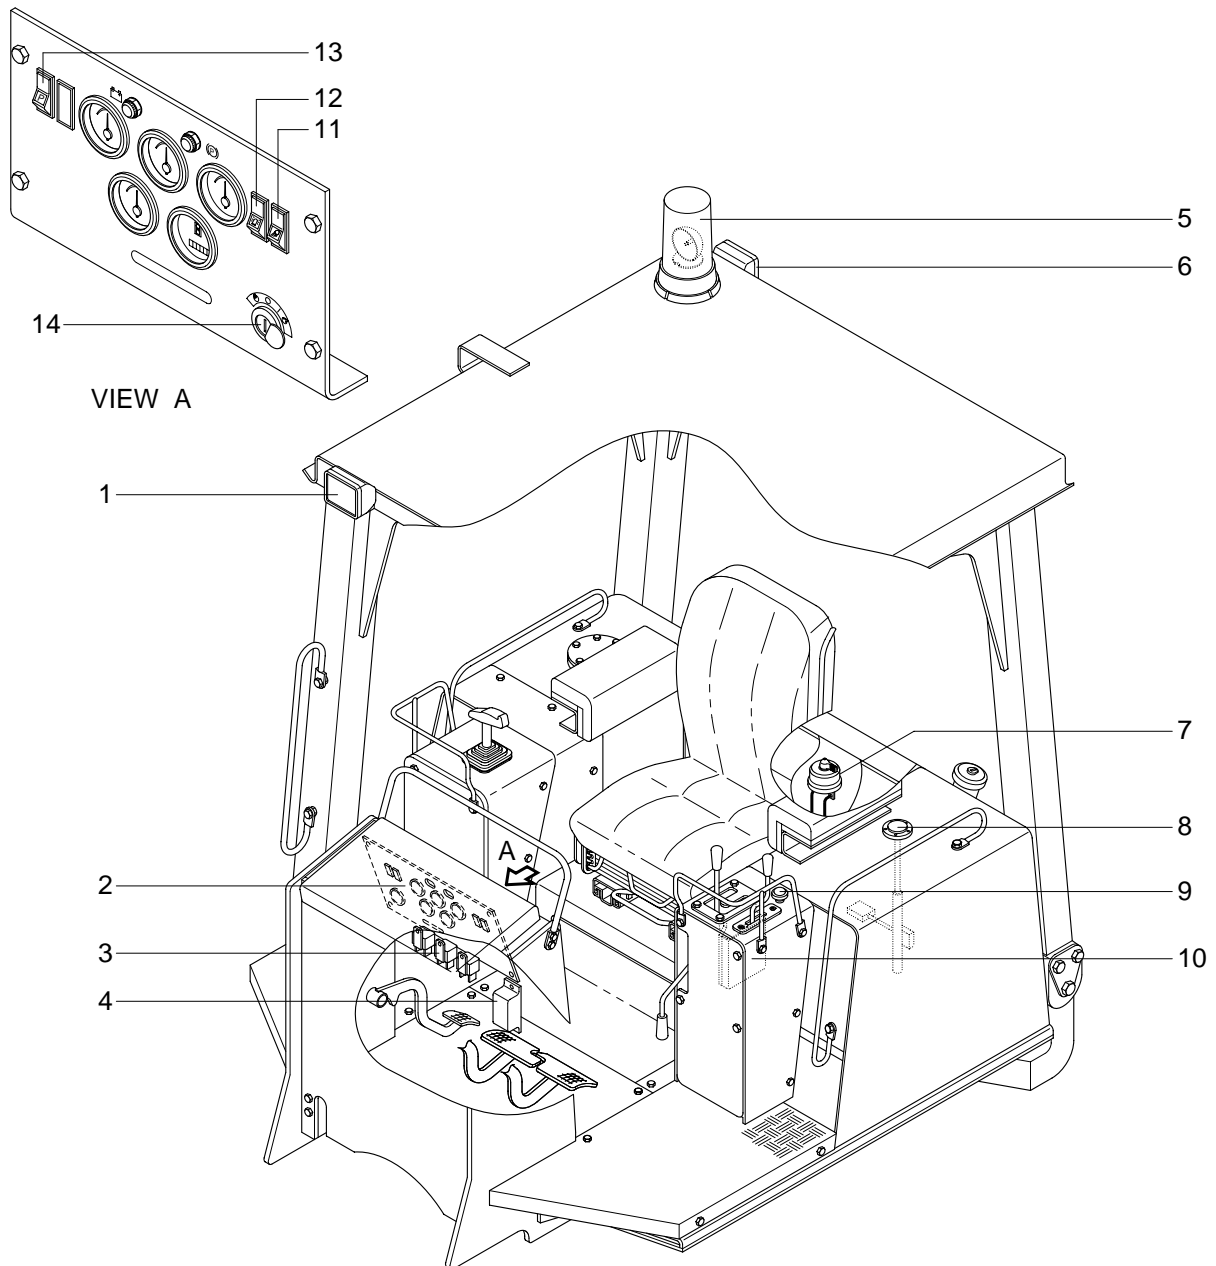

- | | | |
|-------------------------|----------------------------|----------------------------|
| 1 Front work lamp | 6 Rear work lamp | 11 Light switch |
| 2 Cluster | 7 Master switch | 12 Beacon switch(Optional) |
| 3 Relay | 8 Fuel sender | 13 Parking brake switch |
| 4 Fuse box | 9 Horn switch | 14 Starting switch |
| 5 Beacon lamp(Optional) | 10 Transmission controller | 15 Hour meter |

LOCATION 2

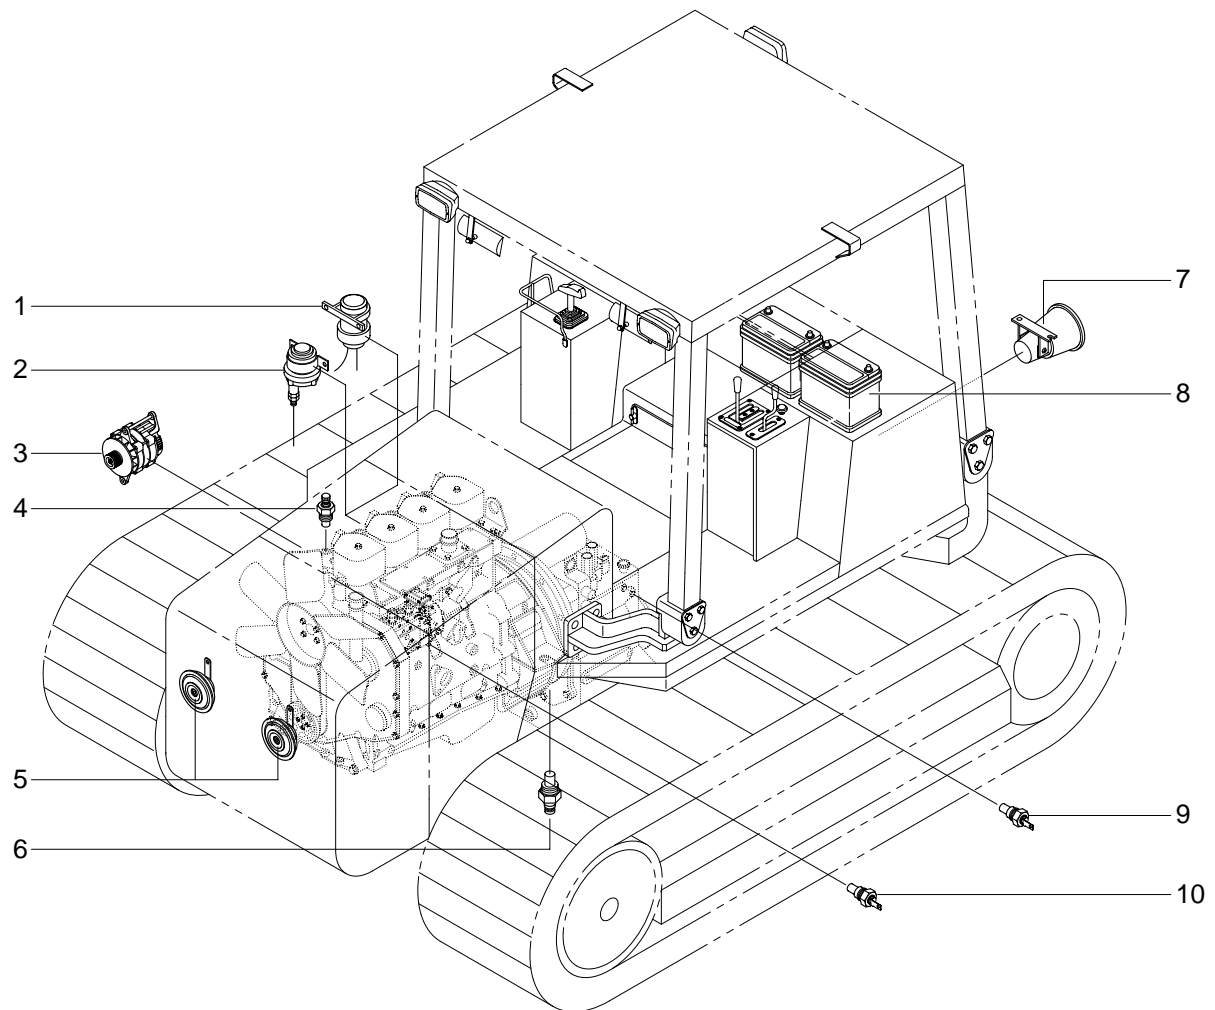

- | | | | | | |
|---|----------------------------|---|---------------------------------|----|------------------------------|
| 1 | Heater relay | 5 | Horn | 9 | Travel alarm pressure switch |
| 2 | Start relay | 6 | Transmission temperature sender | 10 | Engine oil pressure switch |
| 3 | Alternator | 7 | Back up alarm | | |
| 4 | Coolant temperature sender | 8 | Battery | | |