

## GROUP 3 TESTS AND ADJUSTMENTS

### 1. CHECKING THE FOOT BRAKE FLUID LEVEL

**▲ Faulty brakes can kill. Do not use the machine until the fault has been put right.**

- 1) Park the machine on firm level ground, engage the park brake and set the FNR lever to neutral.
- 2) Lower the loader arms and the backhoe to the ground. Switch OFF the engine and remove the starter key.
- 3) Pull the handle and open the engine cover.
- 4) Visually check the level, MAX level is marked on the reservoir D.
- 5) Add fluid if necessary.  
※ If the level has fallen a long way below the MAX mark, get the system checked by your Hyundai dealer.
- 6) Refit the reservoir cap. Wipe up any spillage.

