


GROUP 4 DISASSEMBLY AND ASSEMBLY

1. STEERING PUMP

1) STRUCTURE

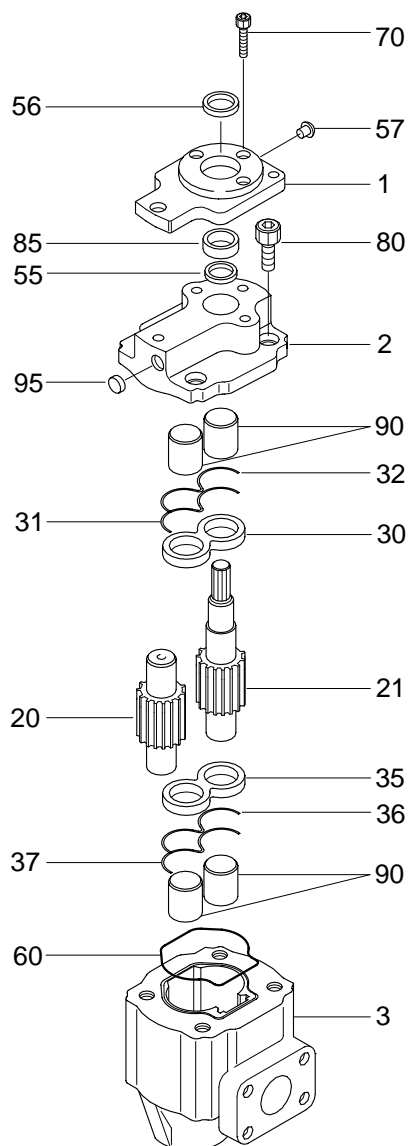

1 Mounting flange
2 Front cover
3 Body
20 Drive gear
21 Drive gear
30 Wear plate
31 Moulded seal

32 Back up seal
35 Wear plate
36 Moulded seal
37 Back up seal
55 Shaft seal
56 Shaft seal
57 Multistep push clip

60 O-ring
70 Cap screw
80 Cap screw
85 Location sleeve
90 Bearing
95 Seal

2) GENERAL INSTRUCTION

(1) Cleanliness

- ① Cleanliness is the primary means of assuring satisfactory hydraulic pump life. Components such as flanges and covers are best cleaned in soap and hot water, then air dried. Gears should be washed in solvent, air dried, and oiled immediately.

▲ Certain cleaning solvents are flammable. Do not allow sources of ignition in the area when using cleaning solvents.

- ② Protect all exposed surfaces and open cavities from damage and foreign material.

※ **Gear journals and gear faces are super finished. Take care not to touch these surfaces after oil and solvent have been removed.**

(2) Lubrication of moving parts

During assembly, all running surfaces(Bearing and wear plate) must be lightly lubricated with a clean oil or aerosol lubricant.

(3) Tools required for assembly

- ① Torque wrench (0~50kgf · m, 0~360lbf · ft)
- ② Open end wrenches
- ③ Seal installation tools (Inner and outer)
- ④ Shaft bullet (Seal protector)
- ⑤ Installation plate

(4) Tightening torque

Item	Torque	
	kgf · m	lbf · ft
Screw(70)	16.5	119
Screw(80)	78.2	569

3) DISASSEMBLY


- ※ Plug all ports prior to cleaning and disassembling pump to prevent ingress of debris or contamination.

Clean the pump thoroughly with a solvent, ensuring no loose debris or contamination remains on the unit.


Dry pump using compressed air or clean lint-free cloths.

- (1) Remove the cap screw(70).

Remove the mounting flange(1). Under no circumstances attempt to prise mounting flange from cover as such action could damage the machine interface. If necessary use of a soft faced mallet to remove mounting flange is recommended.

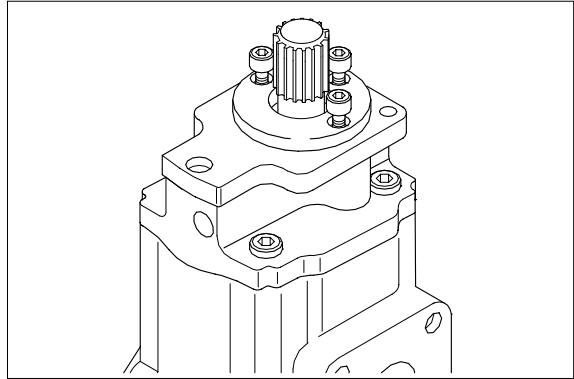


- (2) Remove the cap screws(80) securing the cover(2) to body(3).

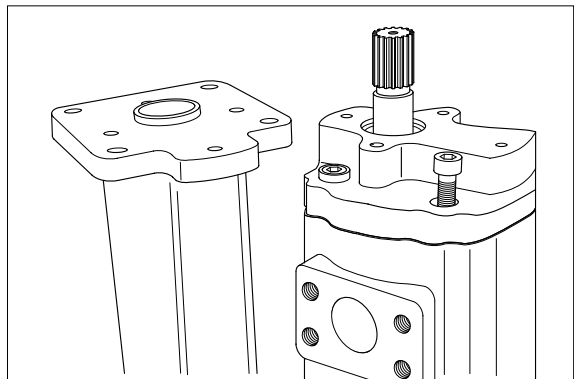


- (3) Refit the mounting flange(1) to cover(2) with two cap screws(70) and detach the cover(2) complete with the mounting flange from the body(3) using a pulling tool centered on the drive shaft.


- ※ Under NO circumstances attempt to prise or chisel cover from body as such action could damage the machined sealing faces.

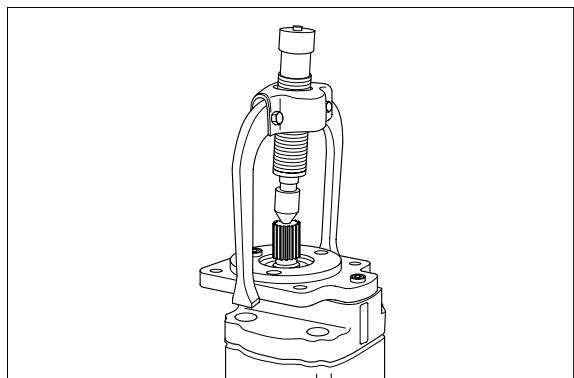



Remove the shaft seal(55) from cover(2) making sure that no damage is sustained to the surface of the seal bore in the cover.

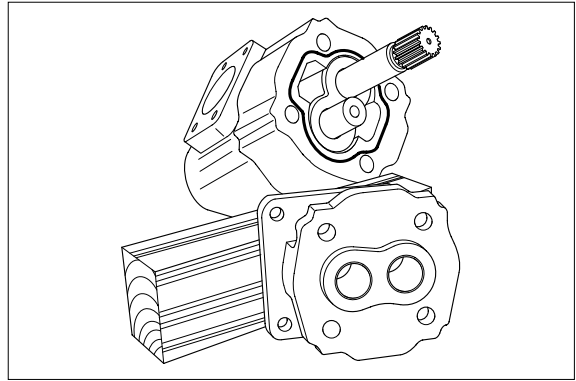

- (4) Before removing wear plate(30) from the body(3) mark it using a soft pencil or a felt-tip pen to ensure correct reassembly. Remove wear plate(30) complete with wear plate seal and back up seal.

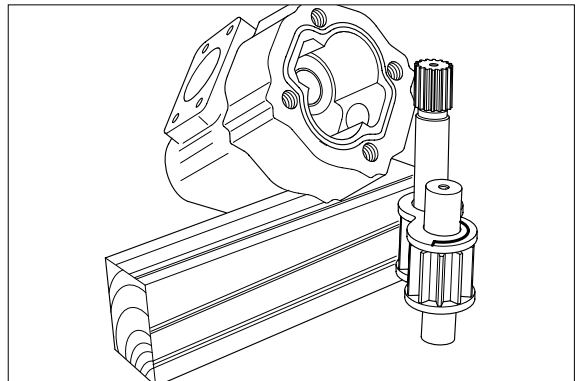

- ※ Mark the gears using a soft pencil or felt-tip pen to ensure reassembly in the same relative position, then withdraw the drive shaft/gear and driven gear separately to prevent jamming. Again, to ensure correct reassembly, mark remaining wear plate(35) using a soft pencil a felt-tip pen. Remove wear plate(35) from body(3) complete with wear plate seal and back up seal.

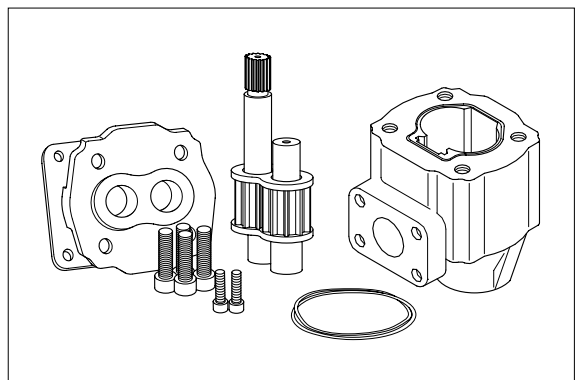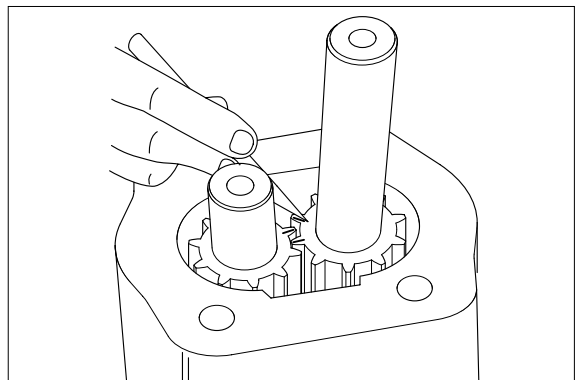

4) MANDATORY REPLACEMENT PARTS

Discard all seals including interface seals, shaft seals, wear plate seals and back up seals. Fit new seals on reassembly.

5) HANDLING / STORAGE

While disassembling pump, ensure no surfaces are scored or marked in any way. A rubber surfaced table will be beneficial. All components must be placed in a clean, dry and safe area. Leakage will be created by scratches on components. If parts are to be left for any period ensure they are not exposed to dirt, dust and corrosion. Keep gears separate from each other in cardboard boxes.

6) INSPECTION OF PARTS

Wash all parts in a solvent and dry using compressed air or clean, lint-free cloths.

(1) Mounting flange, housing and cover

The pump must be replaced if the damage listed is present.

Feature	Damage
Surfaces	Corrosion, nicks or burrs(Slight burrs can be removed using and india stone)
Machined sealing Interfaces	Scores or cracks
Bearing bores	Incorrect diameter, grooves or distorted
Bearing	Loose



(2) Gears

The pump must be replaced if the damage listed is present.

Feature	Damage
Surfaces	Corrosion, nicks or burrs(Slight burrs can be removed using an India stone). Wear due to seal(s)
Journals	Pitting, wear, sufficient wear to change outside diameter
Gears	Cracks or heavy scoring or chipped
Splines/keyways	Distortion of wear

(3) Floating wear plates

The pump must be replaced if the damage listed is present.

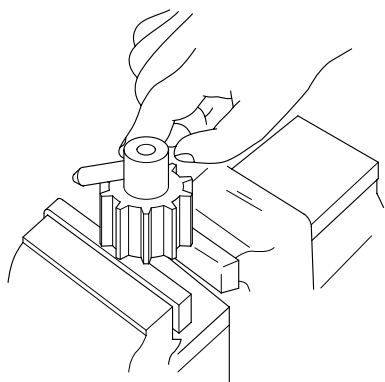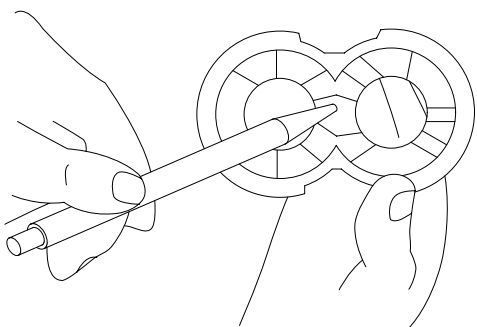Feature	Damage
Surfaces	Corrosion, nicks or burrs, amounts of scoring, erosion or any cracks, discoloration caused by overheating
	
Removing burrs or minor scoring from end faces and teeth of the gears.	Scoring of wear plate.

(4) Bolts/Studs

These must be replaced if the damage listed is present.

Feature	Damage
Surfaces	Corrosion, nicks or burrs(Slight burrs can be removed using an India stone), cracks or scoring, distortion or damage to thread form

(5) Plain bearings

The pump must be replaced if the damage listed is present.

Feature	Damage
Surfaces	Cracks or scoring
PTEF Coating	Worn
Bearing	Loosen in mating component

(6) Coupling

This must be replaced if damage listed is present.

Feature	Damage
Surfaces	Corrosion, nicks or burrs, erosion, cracks or pitting
Splines	Distorted or badly worn

7) WEAR PLATES, SEALS AND BACK UP SEAL, SUB-ASSEMBLY


Refer to illustration on assembly drawing for the correct fitment of the wear plate seal and back up seal in the groove of the wear plates(30, 35).

It is critical that the wear plates are assembled into the pump with regard to the following :


- (1) The seal side of the wear plate must be adjacent to the cover(2) or body(3).
- (2) The high pressure side of the wear plate must be adjacent to the outlet port. Refer to assembly drawing.

8) ASSEMBLY

(1) Lightly oil surfaces with clean hydraulic oil.

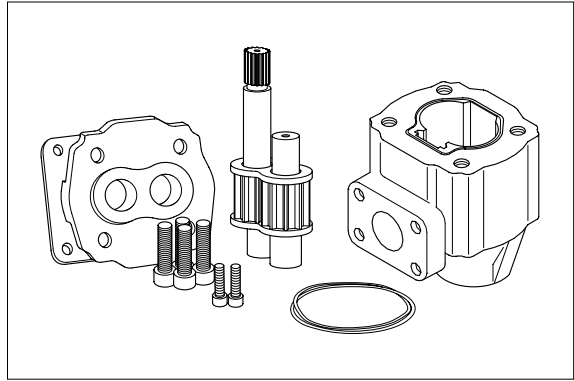

(2) Place body(3) vertically with front section gear pockets upper most.

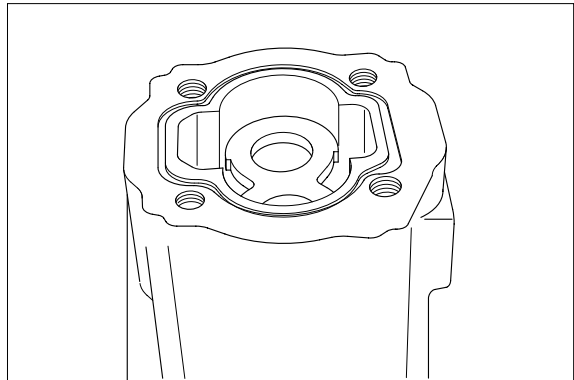


Side wear plate(35) complete with seal and back up seal down through the housing to the bottom of the gear pockets.

※ Be sure to refit the wear plate you have marked from this position.


Fit the gears within the housing taking care to replace as marked, with the teeth reassembled to their original related position.

Fit the wear plate(30) complete with seal and back up seal.

※ Be sure to refit the wear plate you have marked from this position.

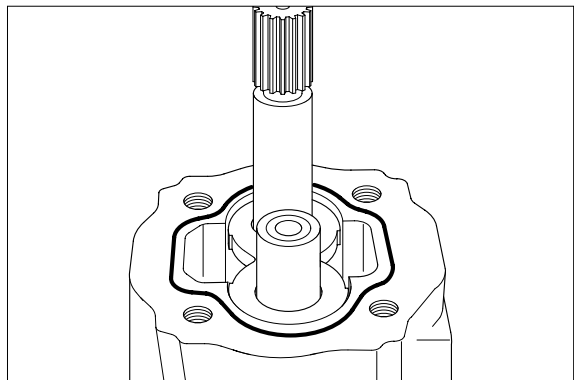


(3) Fit new O-ring(60) into groove in body(3).
Fit front cover(2) over the drive gear and secure with cap screws(70).
Tighten cap screws(80) to half torque and then full torque in diagonal sequence to figure as per assembly drawing.

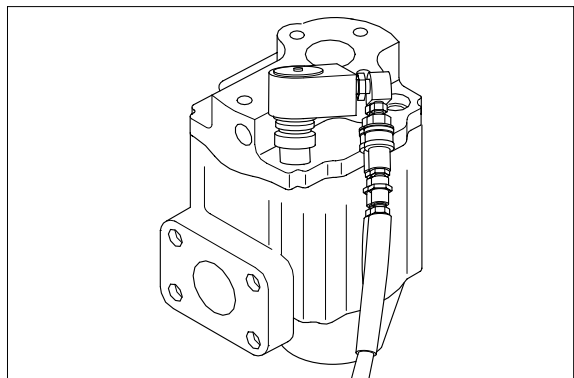


(4) Fit shaft seal(55) using appropriate tooling as per assembly drawing, in correct position and direction.


※ Molybdenum disulphide grease should be sparingly applied to the lip of the shaft seal.

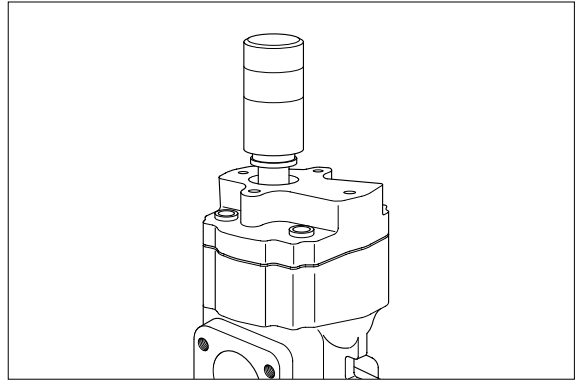

(5) Apply a small ring of loctite low strength gasket eliminator to the interface of mounting flange(1) and fit to front cover(2), ensure that location sleeve(85) is in place and correctly positioned.

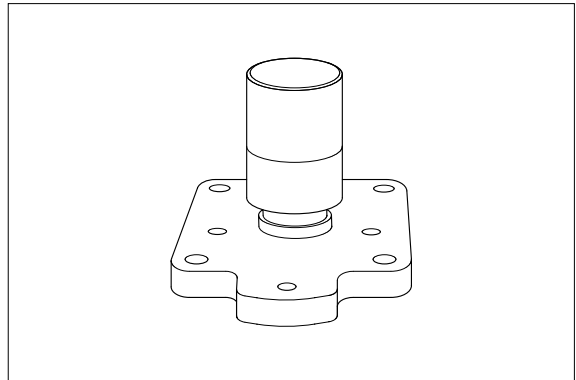


(6) Secure mounting flange(1) with cap screws(70) and tighten to half torque and then full torque in a diagonal sequence to figure as per assembly drawing.

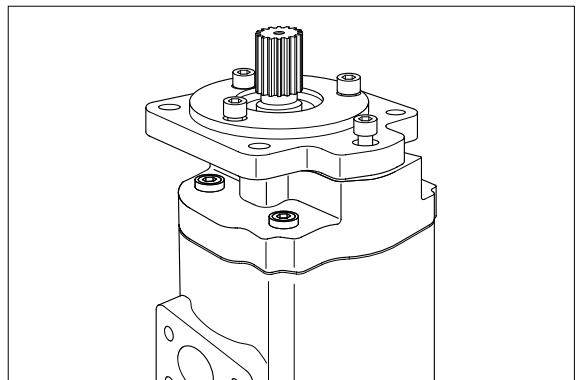

2. FLOW AMPLIFIER


1) STRUCTURE

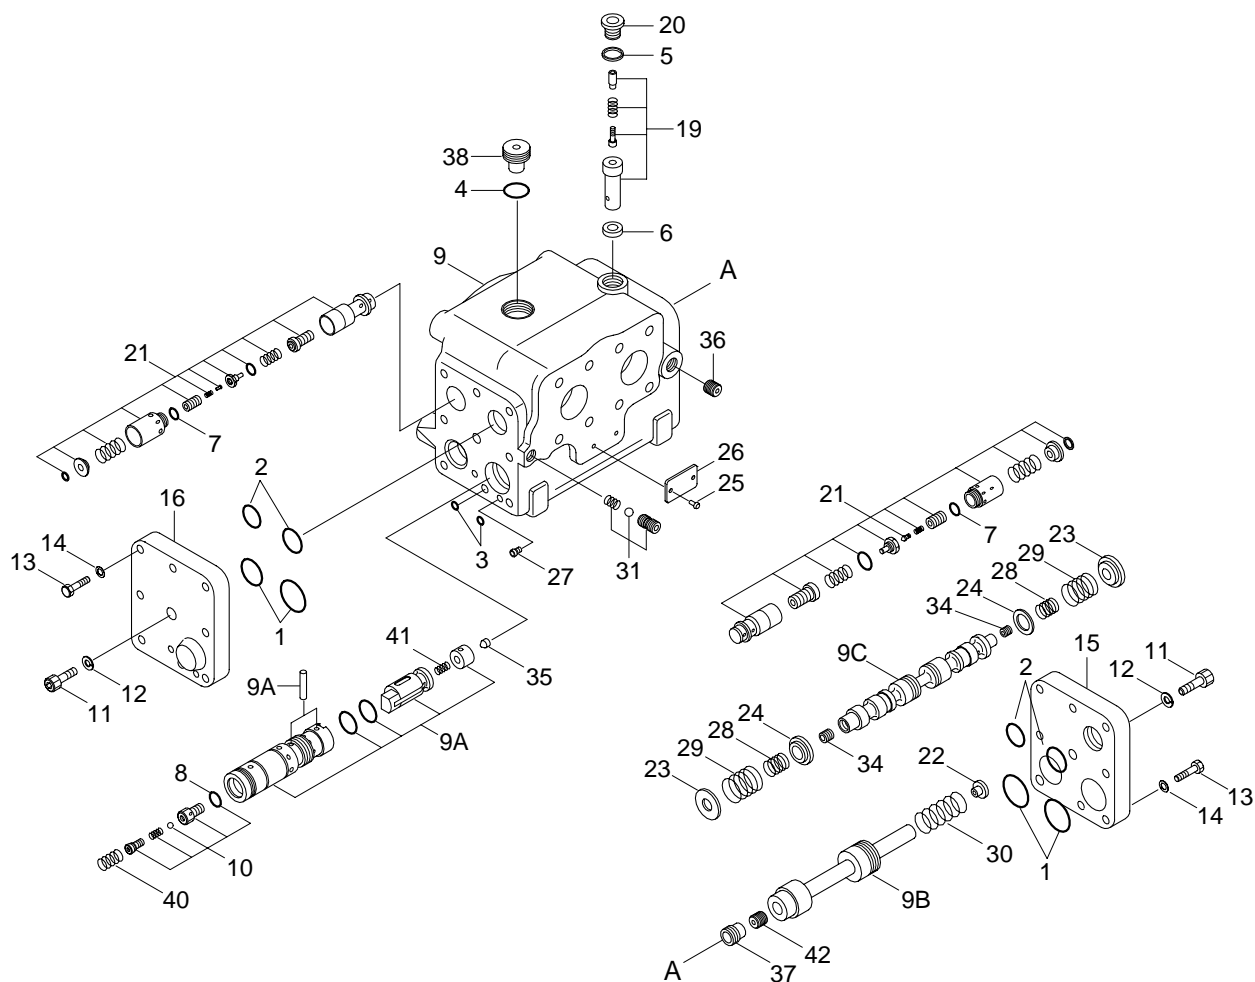


1	O-ring	12	Spring washer	28	Spring
2	O-ring	13	Screw	29	Spring
3	O-ring	14	Spring washer	30	Spring
4	O-ring	15	End cover	31	Throttle check valve
5	Washer	16	End cover	34	Orifice
6	Washer	19	Relief valve	35	Orifice
7	O-ring	20	Plug	36	Orifice
8	O-ring	21	Shock, suction valve	37	Plug
9	Housing	22	Spring seat	38	Plug
9A	Amplifier valve	23	Spring seat	40	Spring
9B	Priority valve	24	Spring seat	41	Spring
9C	Directional valve	25	Drive screw	42	Orifice
10	Check valve	26	Name plate		
11	Screw	27	Orifice		

2) TOOLS

- Guide screws : M8 × 1.0
- Hook : Wire

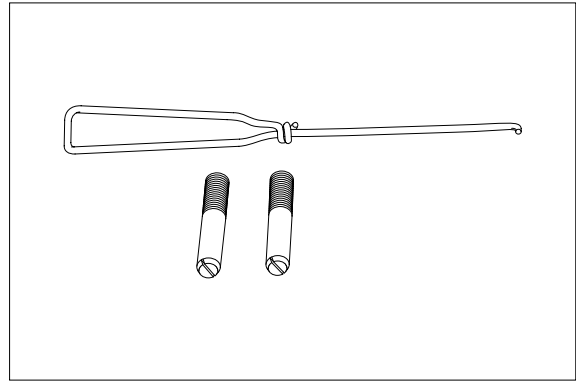


- Hexagon keys : 4, 5, 6, 8 and 10mm
- Ratchet for socket spanners
- Hex socket for external : 13, 17 & 19mm
- Hex socket for internal : 8 & 10mm
- Multigrip pliers
- Ring spanner : 13mm
- Screwdrivers : 3 and 10mm
- Steel Mandrels : 3, 5 and 8mm
- Torque wrench : 12.2kgf · m(88lbf · ft)
- Magnetic rod

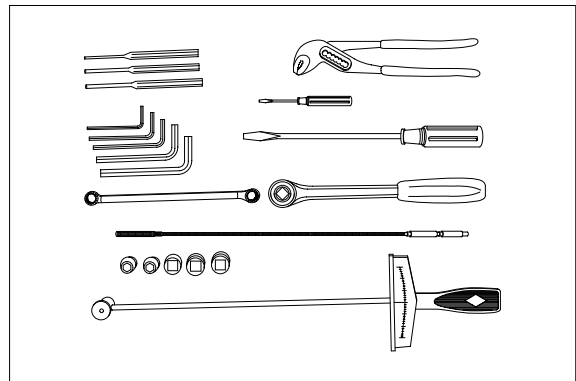


3) DISASSEMBLY

(1) Removing pressure relief valve


- ① Unscrew plug with washer (Hexagon socket for 8mm internal hexagon).

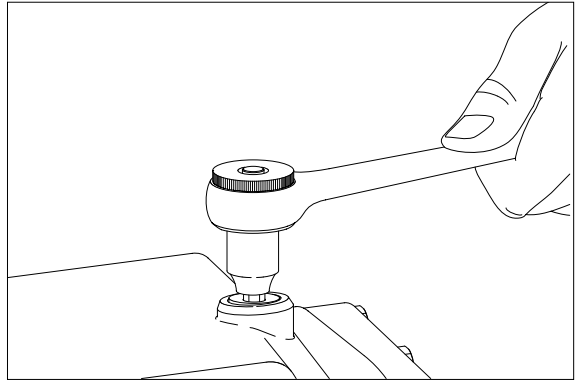

- ② Screw pressure relief valve out (10mm hexagon key).

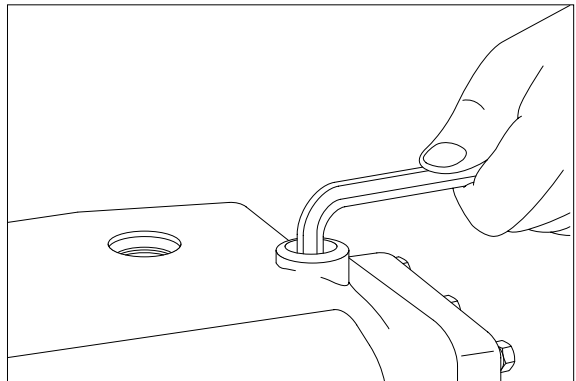


- ③ Take out washer (Magnetic rod).

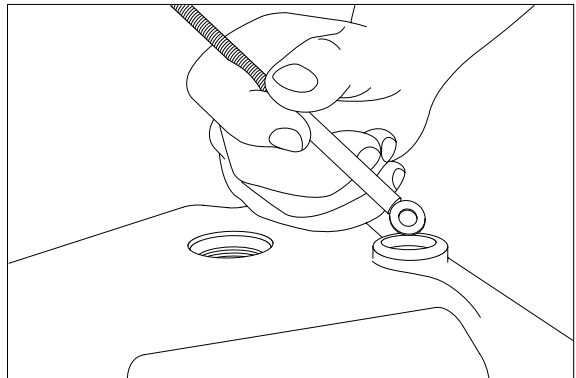


(2) Disassembly pressure relief valve

- ① Hold cartridge (Multigrip pliers) and screw the adjustment screw out (5mm hexagon key).

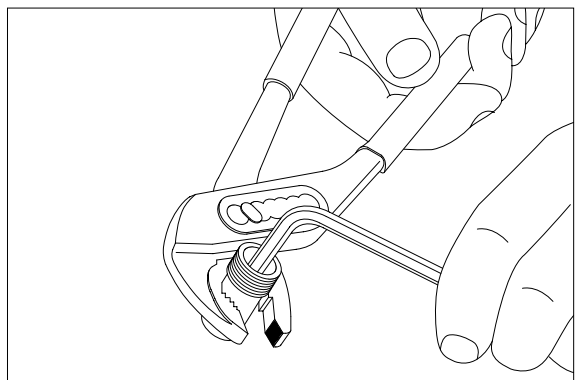


② Pressure relief valve shown disassembled.

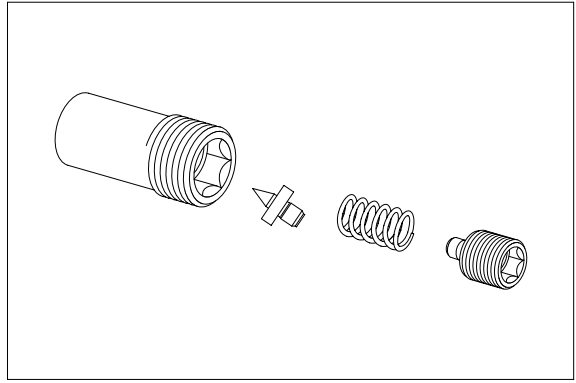


(3) Removing end cover at PP-connection


① Unscrew screws with spring washer using hexagon socket for 13mm external hexagon and 10mm internal hexagon.

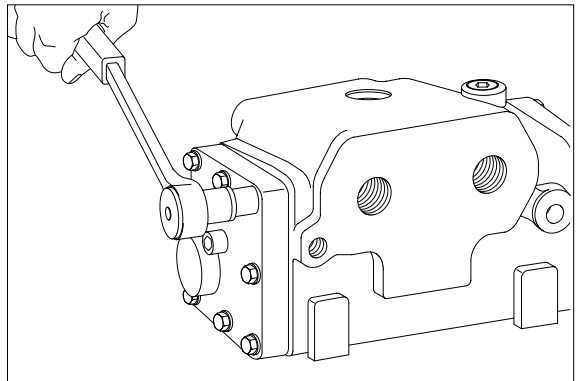


② Remove end cover.

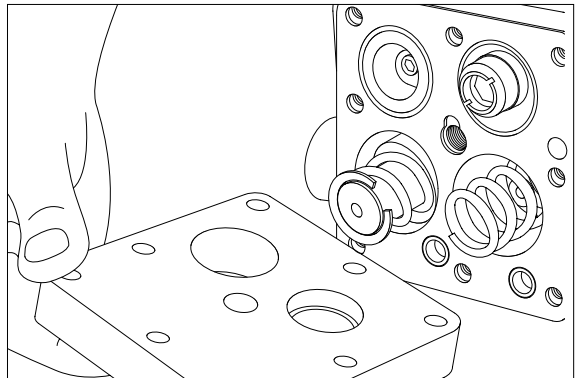


③ Remove stop and 2 springs.

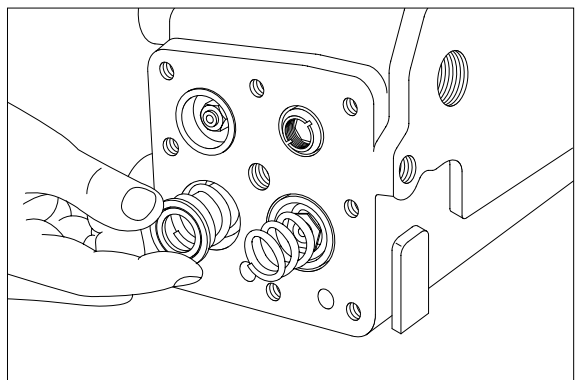


④ Remove spring.

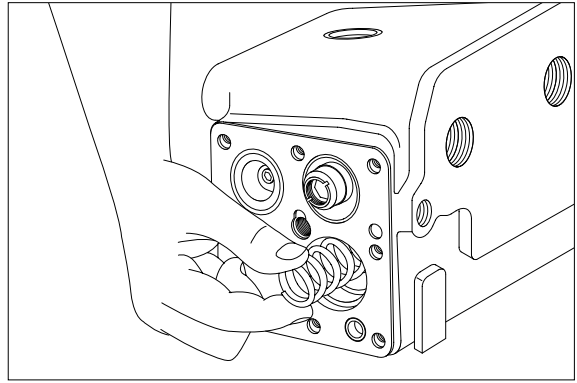

⑤ Remove plate and 6 O-rings.

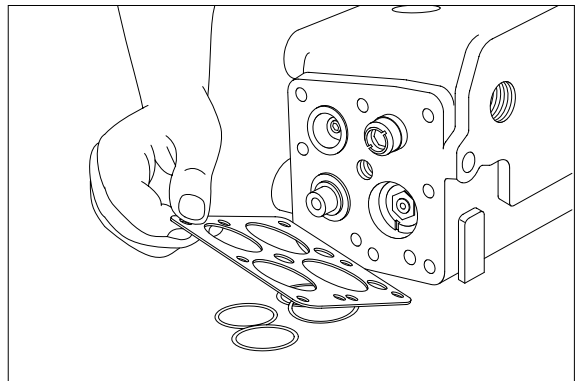


⑥ Remove spring guide.

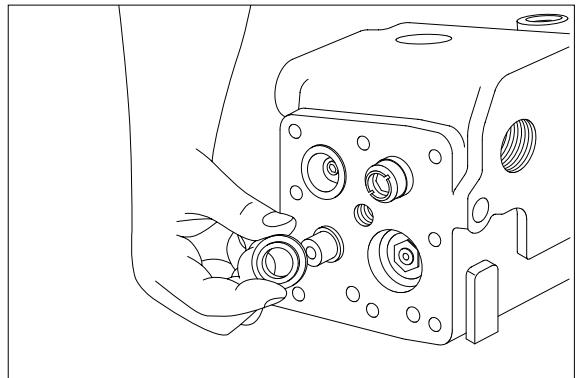


(4) Removing end cover at LS-connection


① Unscrew screws with spring washer using hexagon socket for 13mm external hexagon and 10mm internal hexagon.

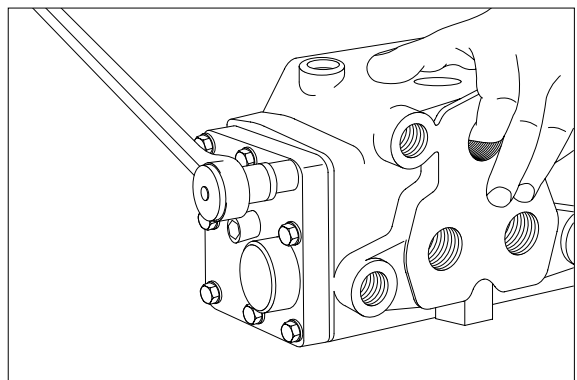


② Remove end cover.

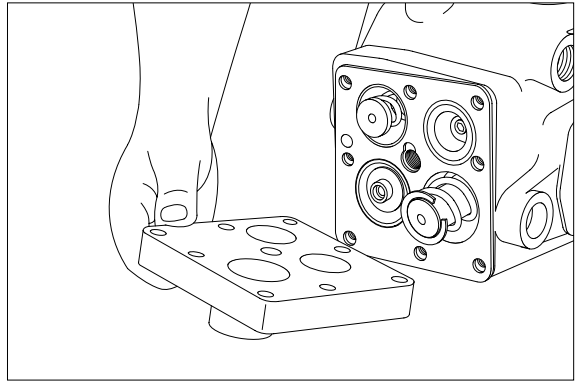


③ Remove stop and 2 springs.

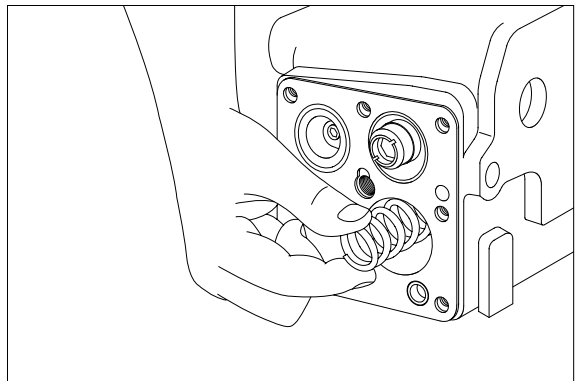


④ Remove stop and spring.

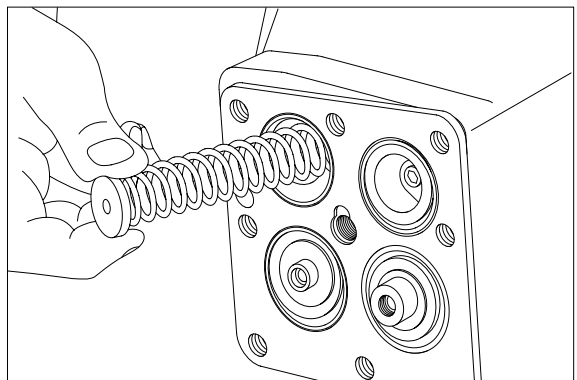

⑤ Remove plate and 4 O-rings.

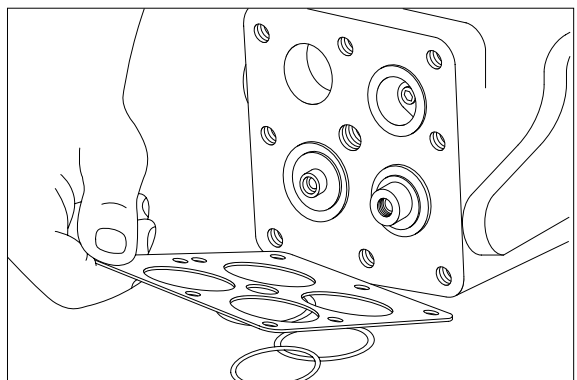


⑥ Remove spring guide.

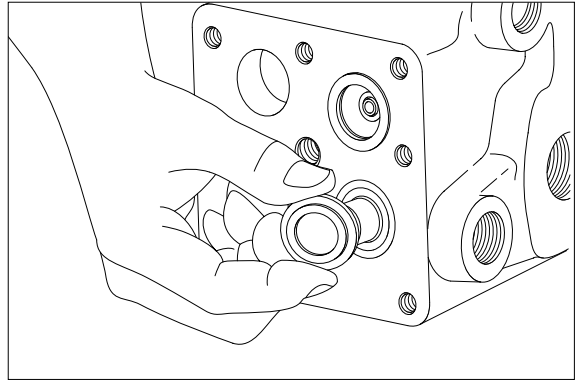


(5) Removing spools


① Remove directional spool.

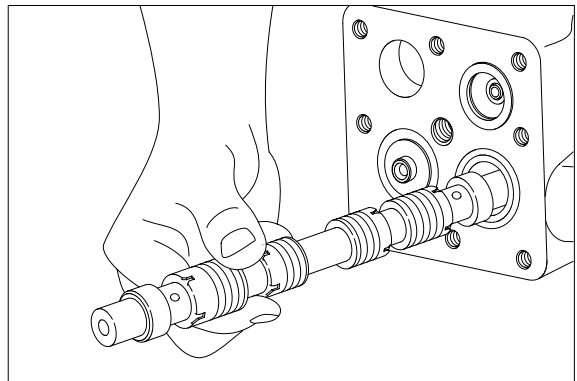

② Remove amplifier spool.

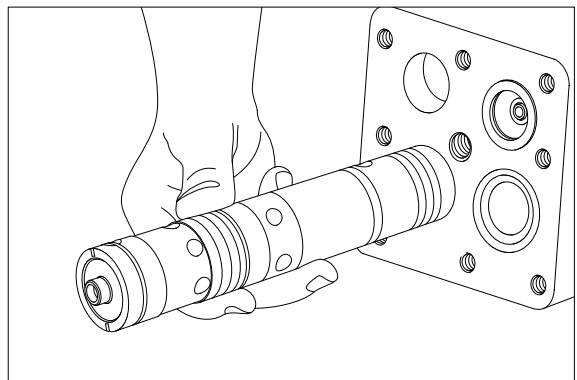


③ Remove priority valve spool.

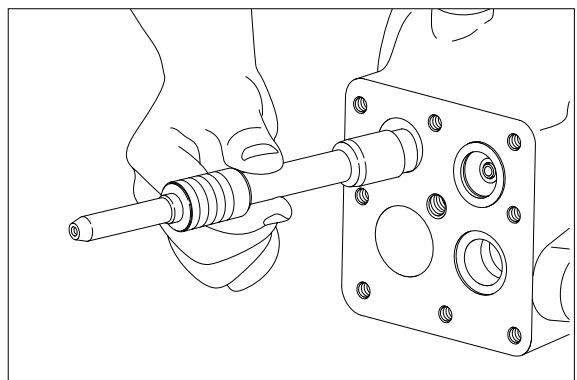


(6) Removing orifices and throttle check valve


- ① Unscrew orifice in LS-connection with 6mm hexagon key.

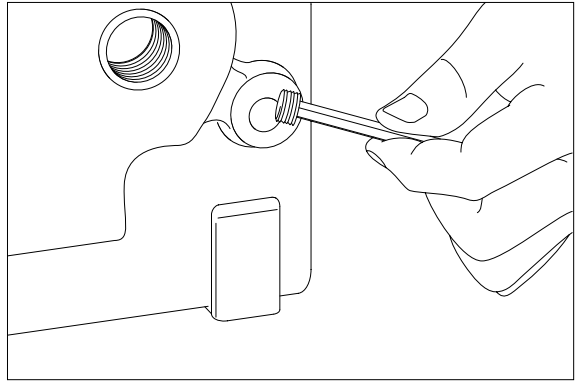

- ② Unscrew throttle check valve in PP-connection with 6mm hexagon key.

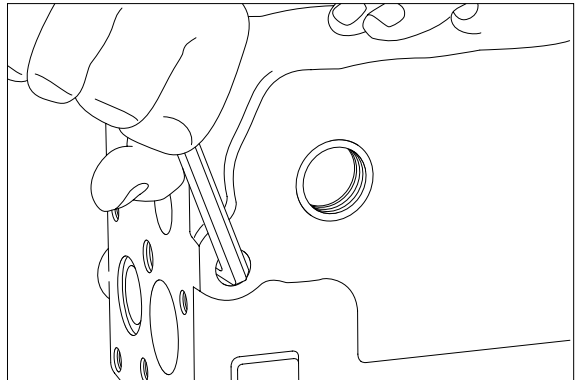


- ③ Unscrew orifice in housing with 4mm hexagon key.

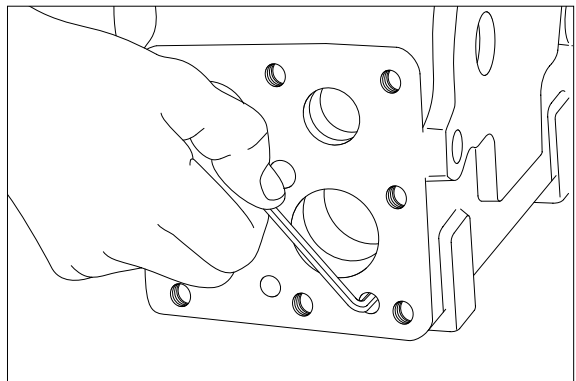


(7) Removing shock valves

- ① Remove shock valve with screwdriver and hexagon key.

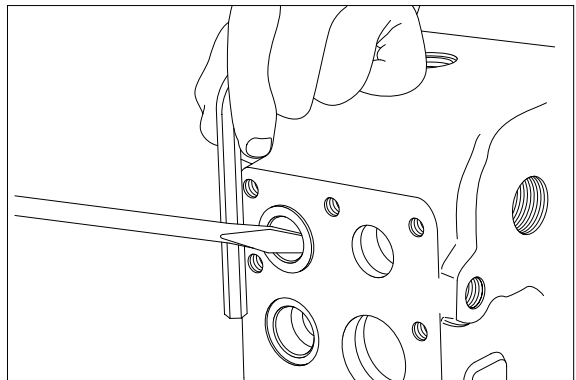


(8) Overview of disassembled parts

① Housing and end cover with accessories.

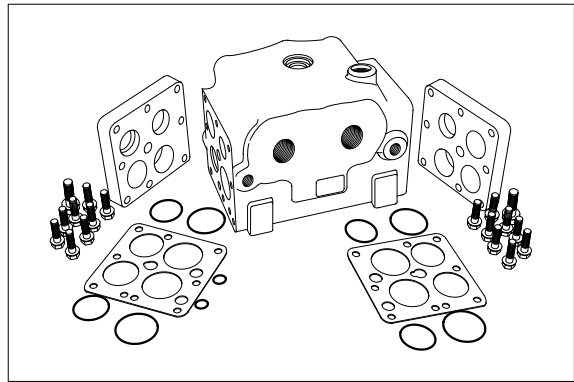


② Spool with accessories.

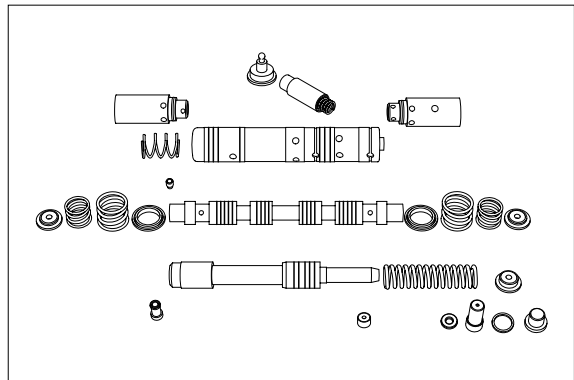


(9) Disassembly of directional spool

① Unscrew orifice with 4mm hexagon key.
Use a mandrel.

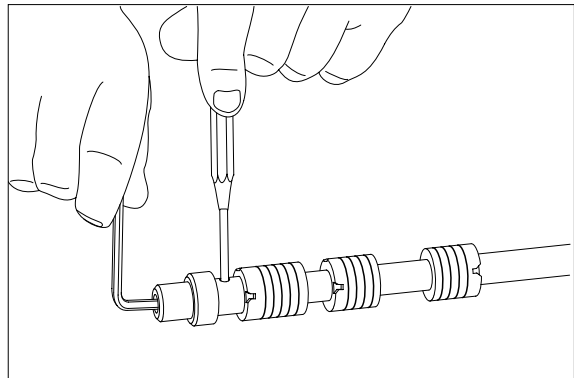


② Directional spool shown disassembled.

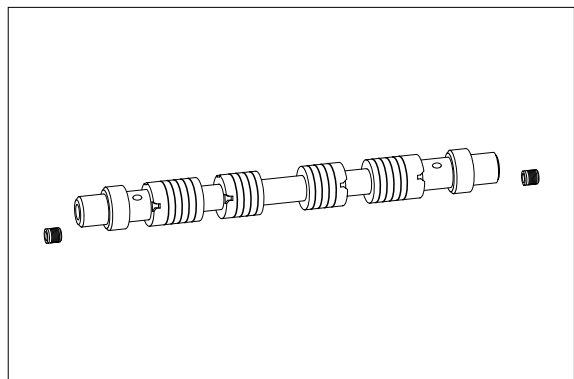


(10) Disassembly of priority valve spool


- ① Unscrew plug or throttle check valve with 8mm hexagon key.

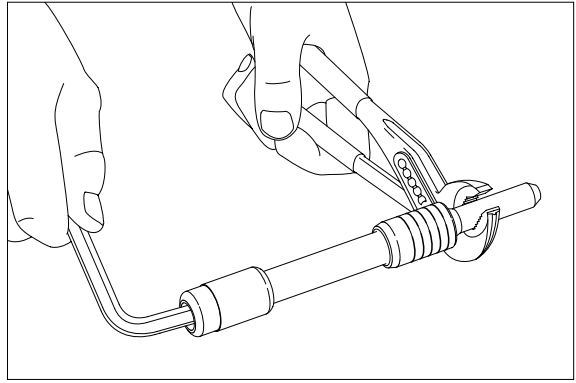

- ② Priority valve spool with plug for external PP shown disassembled.

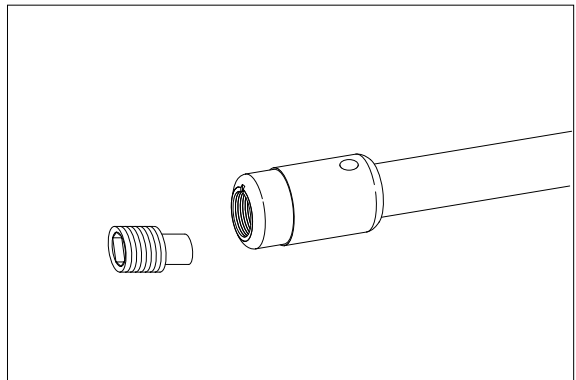


- ③ Priority valve spool with throttle check valve for internal PP shown disassembled.

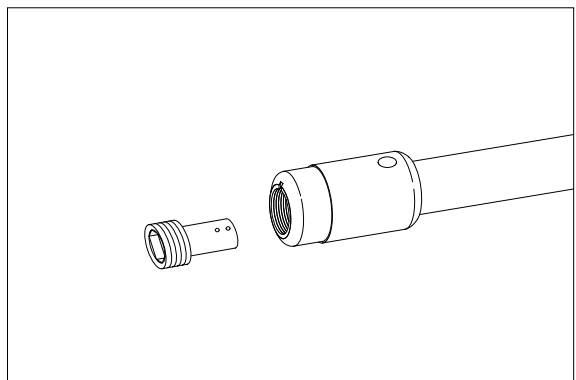


(11) Disassembly of amplifier spool

- ① Carefully remove the spring ring from the recess with 3mm screwdriver.
- ※ Avoid damage to the spring ring.

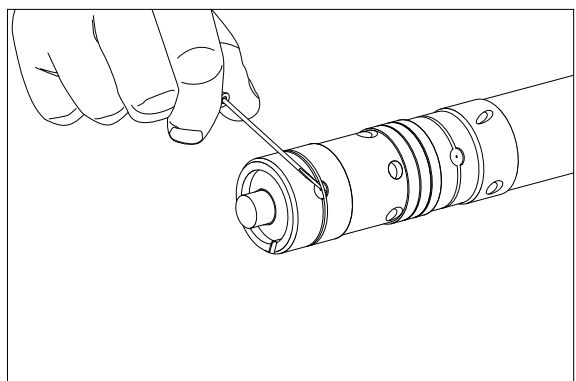


② Carefully guide the spring ring back.

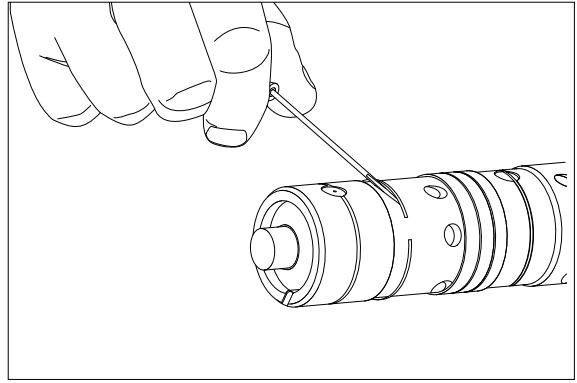


③ Carefully take the spring ring from the recess and guide it back with 3mm screwdriver.


※ Avoid damage to the spring ring.

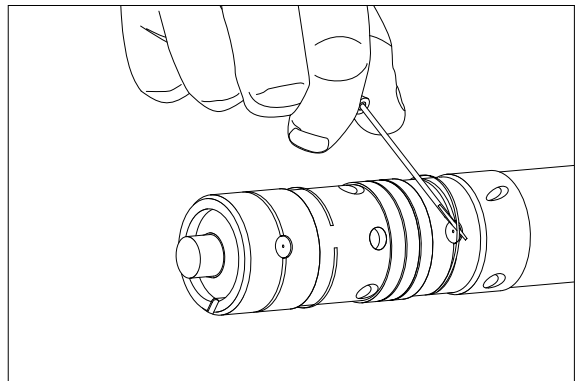


④ Press pin out gently with finger.

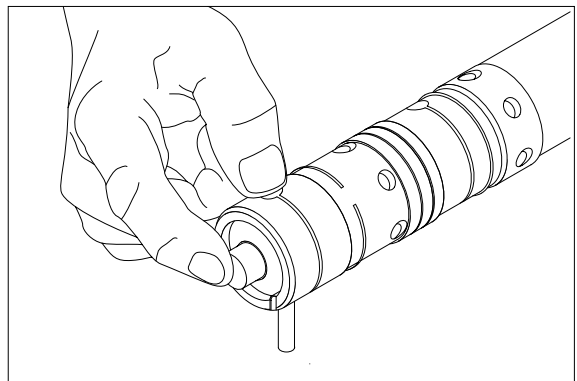


⑤ Take out plug.

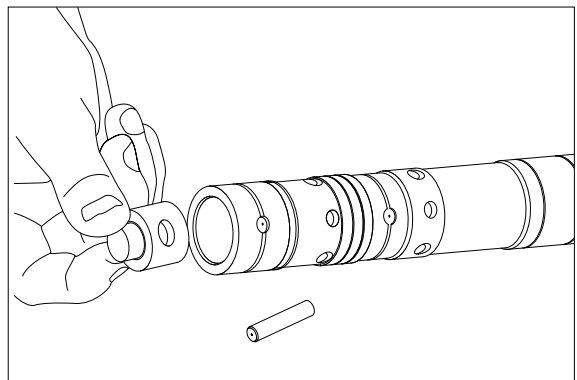


⑥ Take out spring.

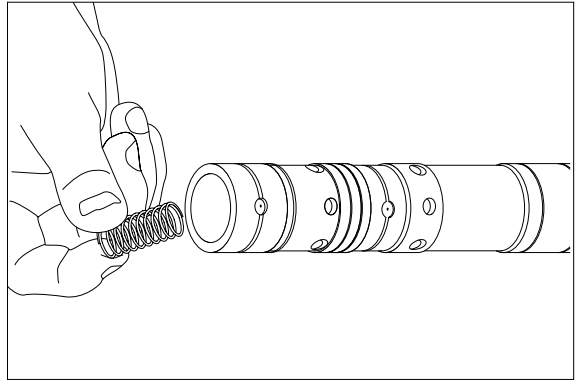

⑦ Take out pin 3mm screwdriver.

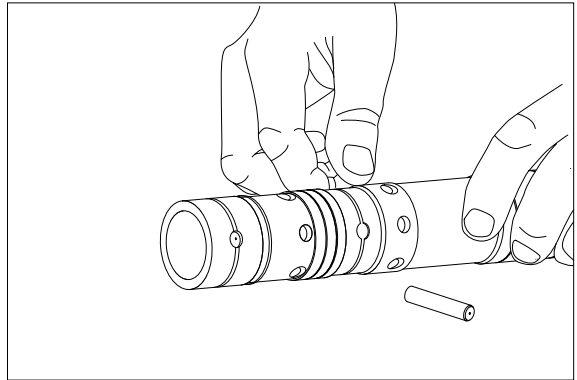


⑧ Take out inner spool.

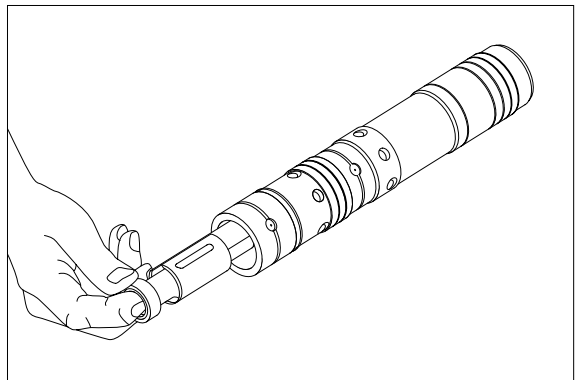


⑨ Unscrew check valve with hexagon socket for 17mm external hexagon and mandrel in the pin hole.


※ Avoid damaging the spool surface.

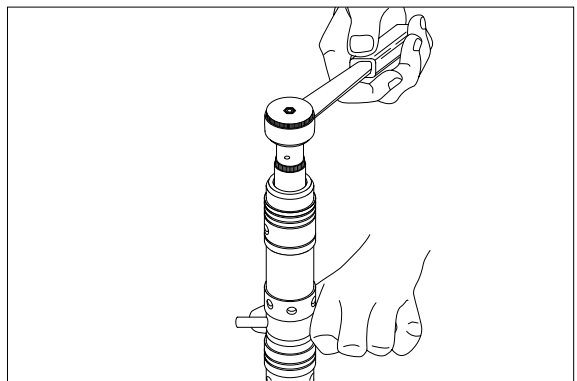

- ⑩ Unscrew orifice out of plug with 4mm hexagon key. Use a mandrel.

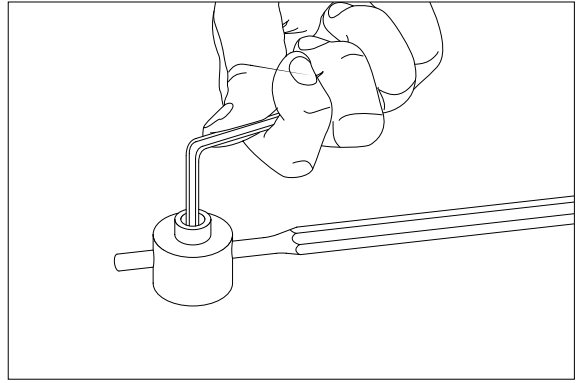


- ⑪ Amplifier spool shown disassembled.

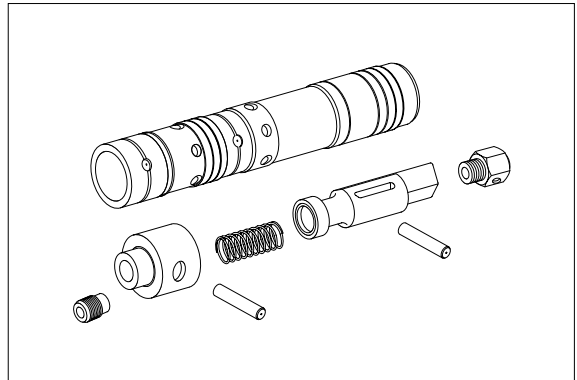


(12) Disassembly of check valve

- ① Unscrew plug with 4mm hexagon key and hexagon socket for 17mm external hexagon.

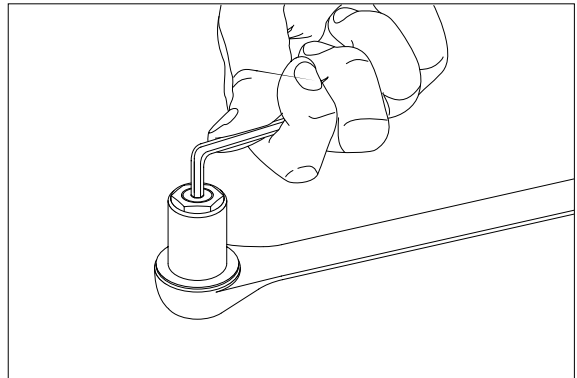


- ② Check valve shown disassembled.

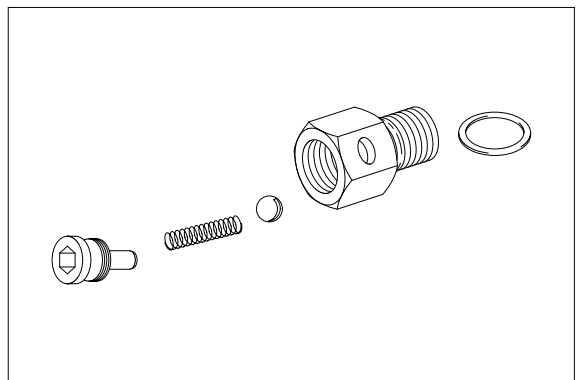


(13) Disassembly of shock valve / suction valve


- ① Unscrew locknut with hexagon socket for 13mm external hexagon. Use a mandrel.
※ When readjusting shock valve hold locknut with 13mm ring spanner.

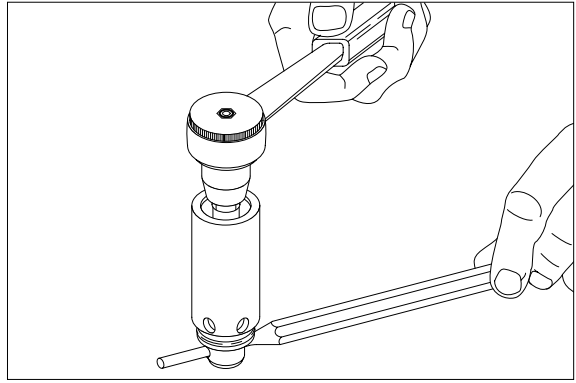


- ② Take out disc and spring.

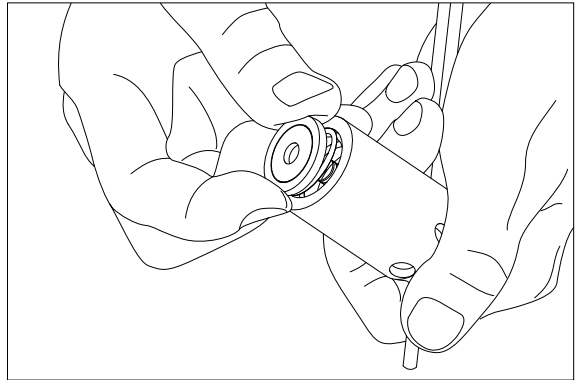


- ③ Take off housing.

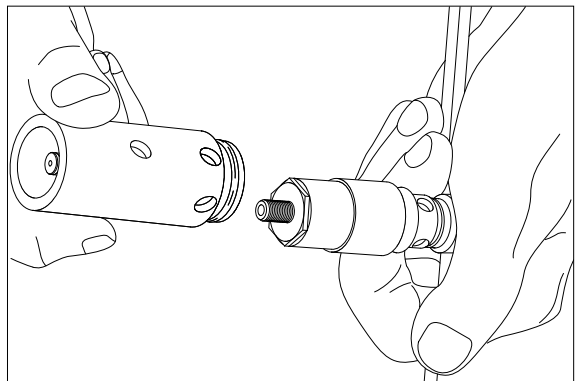


- ④ Unscrew pilot valve with hexagon socket for 19mm external hexagon. Use a mandrel.

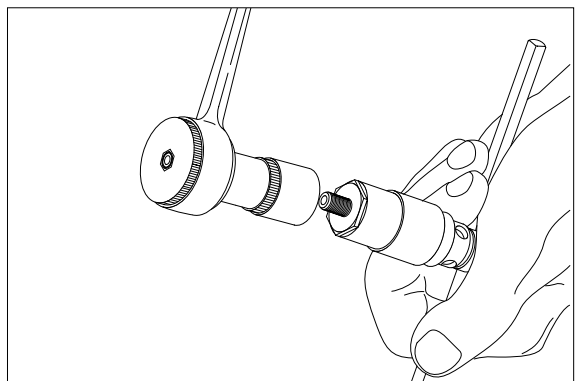


⑤ Take out pilot valve and spring.

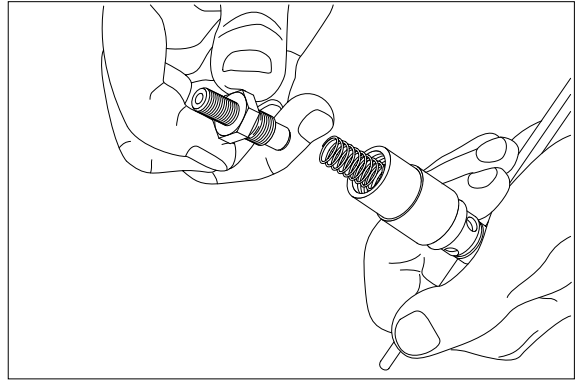


⑥ Take out spool.

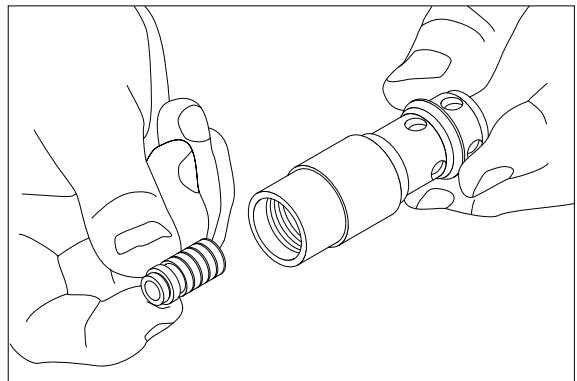

⑦ Unscrew adjustment screw and take out spring and ball.

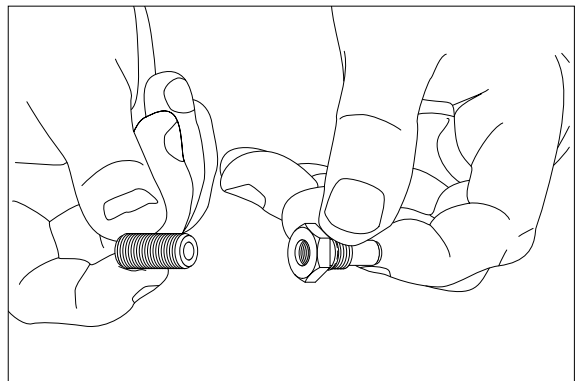

⑧ Shock valve/suction valve shown disassembled.

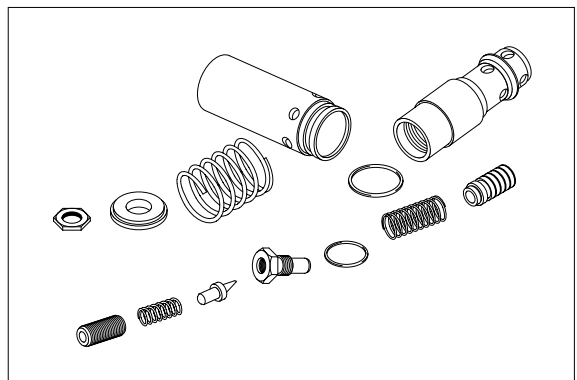

※ **Cleaning**

Clean all parts carefully with low aromatic kerosene.

※ **Inspection and replacement**

Replace all gaskets and sealing washers.
Check all other parts carefully and replace if necessary.

※ **Lubrication**


Before assembly, lubricate all parts with hydraulic oil.




4) ASSEMBLY

(1) Assembly of shock valve / suction valve


- ① Guide spring with cone into housing.

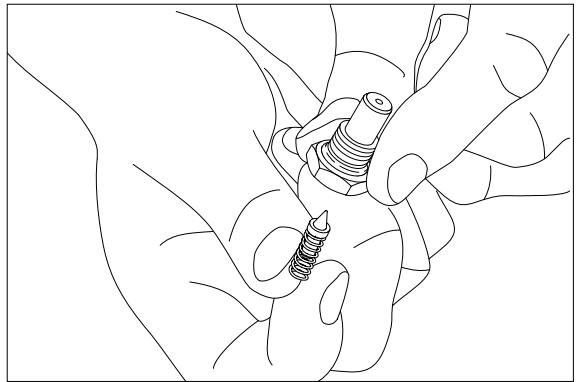


- ② Fit adjustment screw.

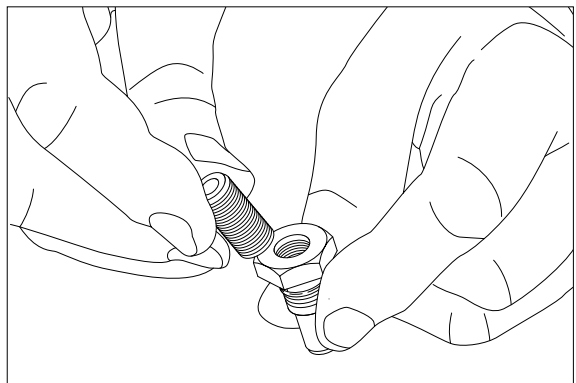


- ③ Fit spool.

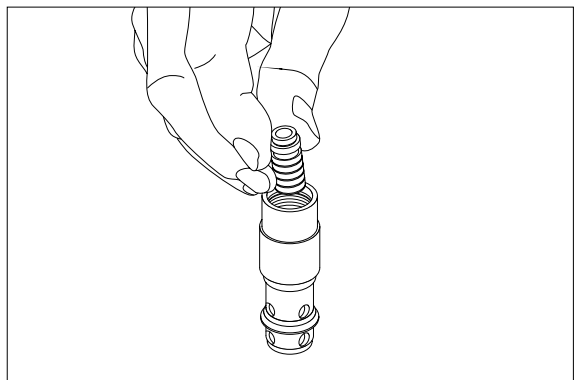


- ④ Fit spring.

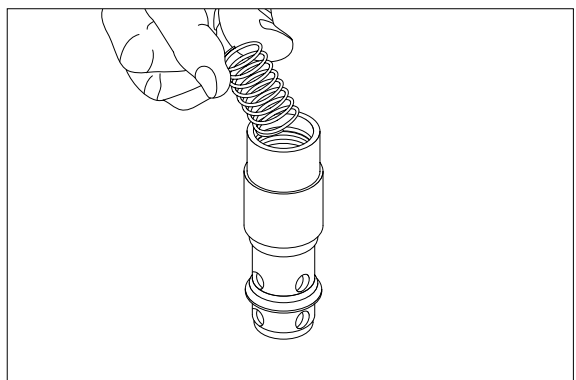


- ⑤ Fit pilot valve.
Remember O-ring.

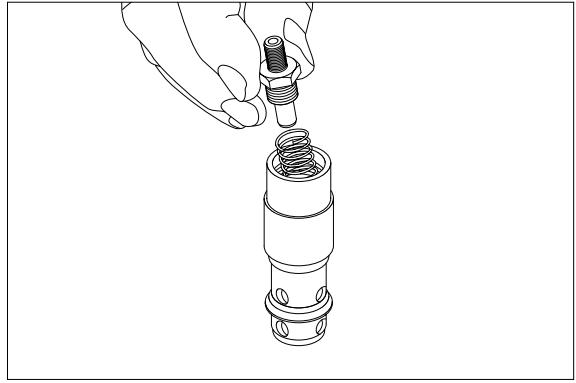


- ⑥ Tighten with torque wrench for 19mm external hexagon. Use a mandrel.
• Tightening torque : $2 \pm 0.5 \text{ kgf} \cdot \text{m}$
($14.5 \pm 3.6 \text{ lbf} \cdot \text{ft}$)

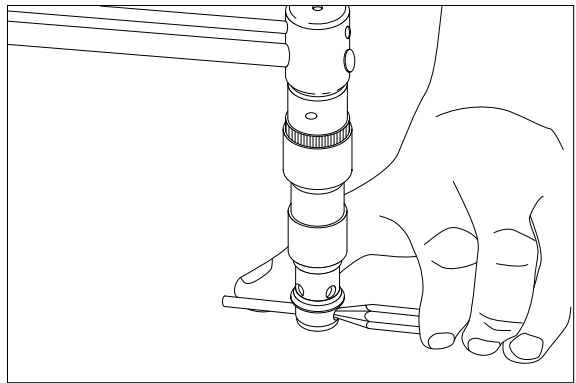


- ⑦ Fit housing.

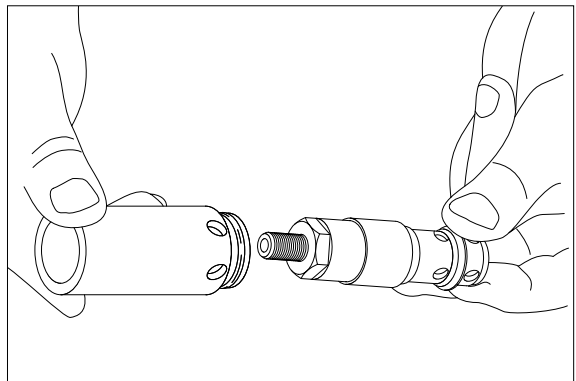

- ⑧ Fit spring.

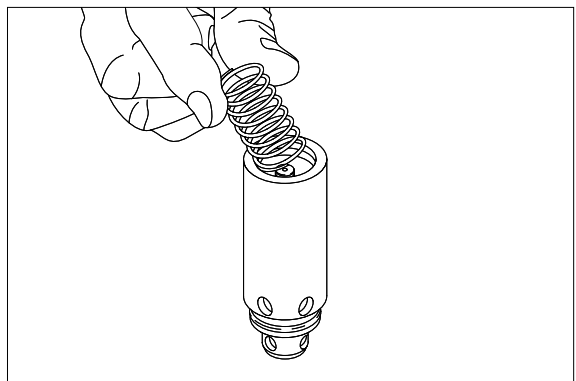


⑨ Fit disc.

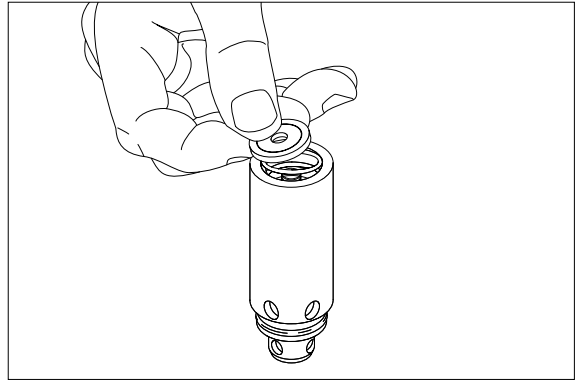

⑩ Fit locknut.


- Tightening torque : $1.5 \pm 0.2 \text{ kgf} \cdot \text{m}$
($10.8 \pm 1.4 \text{ lbf} \cdot \text{ft}$)

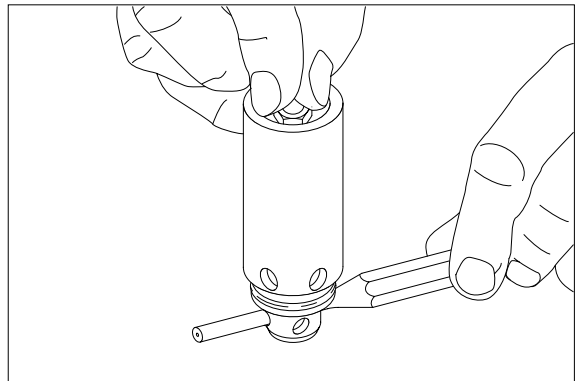

(2) Assembly of check valve

① Fit ball, spring and plug.


- Tightening torque : $0.5 \pm 0.1 \text{ kgf} \cdot \text{m}$
($3.6 \pm 0.7 \text{ lbf} \cdot \text{ft}$)

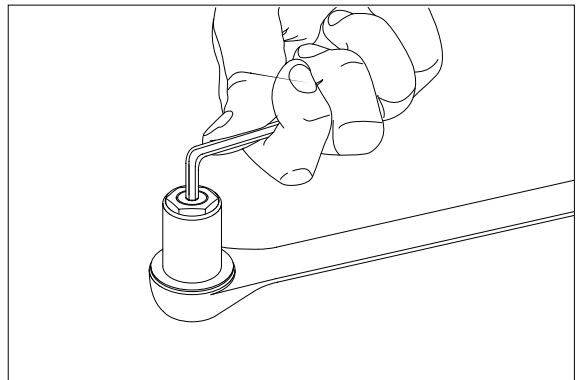

(3) Assembly of amplifier spool

① Fit orifice in plug.


- Tightening torque : $0.5 \pm 0.1 \text{ kgf} \cdot \text{m}$
($3.6 \pm 0.7 \text{ lbf} \cdot \text{ft}$)

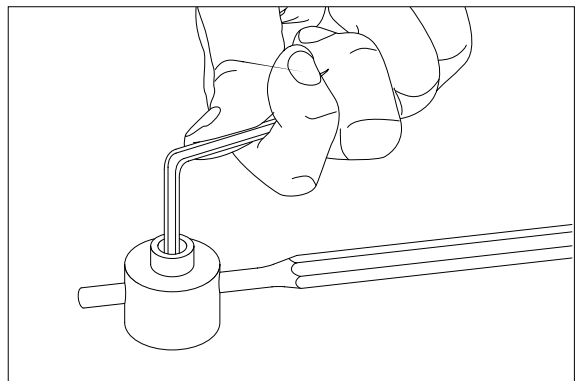


② Fit check valve.

- Tightening torque : $2 \pm 0.3\text{kgf} \cdot \text{m}$
($14.5 \pm 2.2\text{lb} \cdot \text{ft}$)


※ Avoid damaging spool surface.
Remember O-ring.

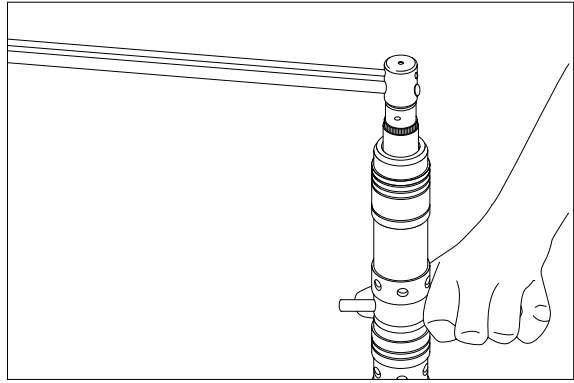


③ Place inner spool in the correct position.

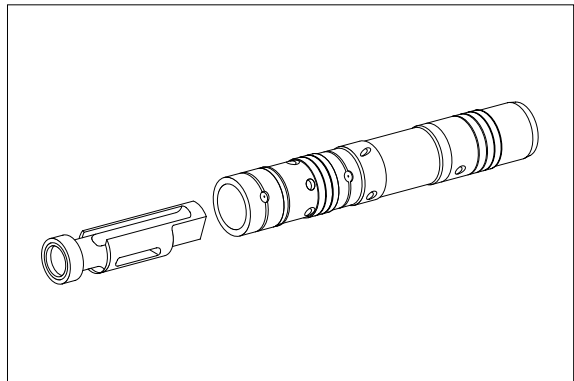


④ Guide inner spool in.

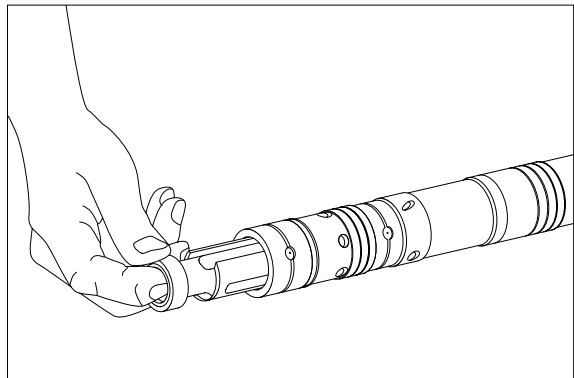


⑤ Fit pin.

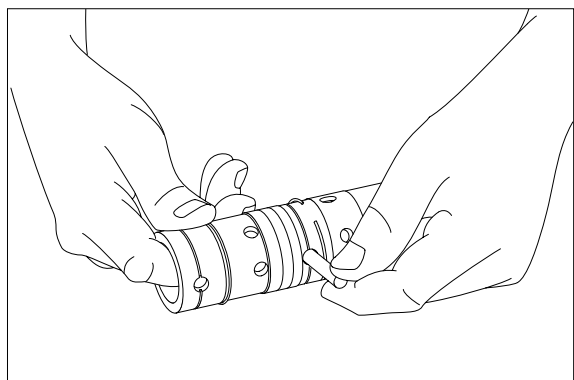


- ⑥ Push spring ring into position. Place spring ring into the recess with ends facing away from pin holes.

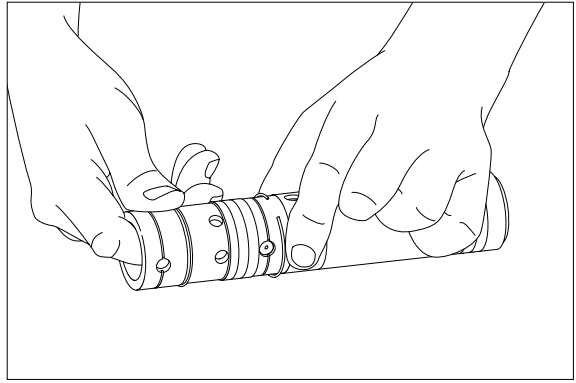


- ⑦ Fit spring.

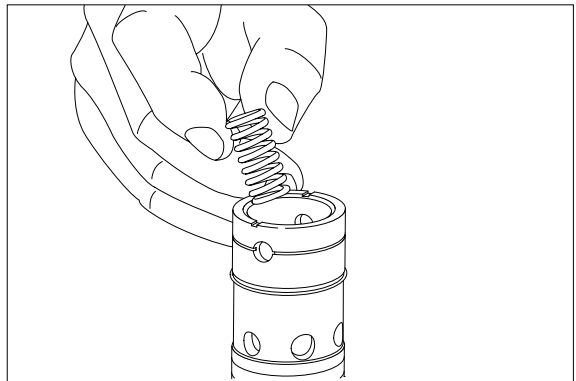


- ⑧ Fit plug.

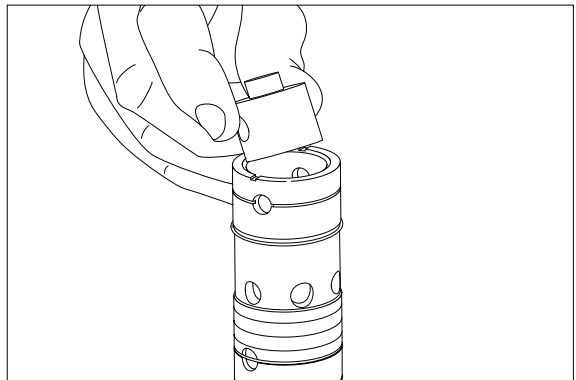

- ⑨ Fit pin.

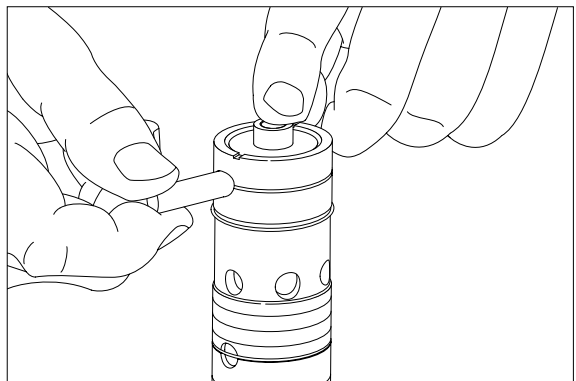


- ⑩ Push spring ring into position. Place spring ring into the recess with ends facing away from pin holes.

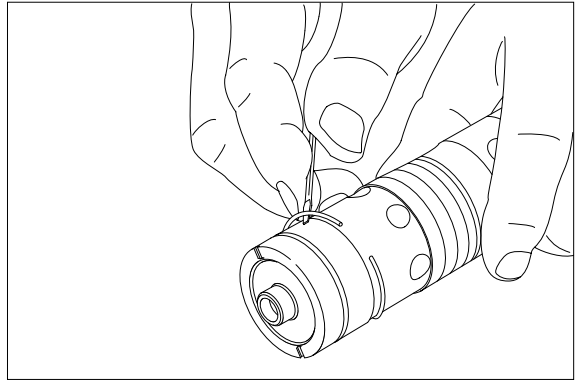


(4) Assembly of priority valve spool

- ① Fit plug or throttle check valve.
External PP : Plug.
Internal PP : Throttle check valve.
• Tightening torque : $1 \pm 0.3 \text{ kgf} \cdot \text{m}$
($7.2 \pm 2.2 \text{ lbf} \cdot \text{ft}$)

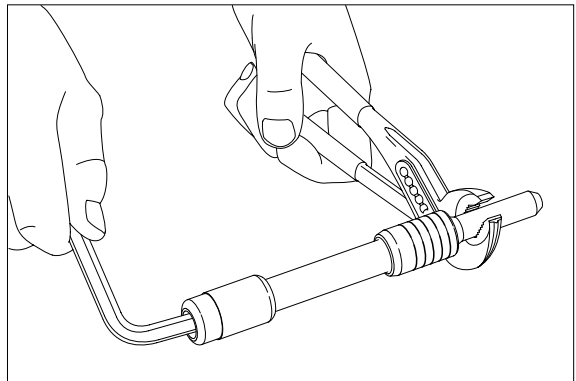


(5) Assembly of directional spool

- ① Screw in orifice.
• Tightening torque : $0.5 \pm 0.1 \text{ kgf} \cdot \text{m}$
($3.6 \pm 0.7 \text{ lbf} \cdot \text{ft}$)

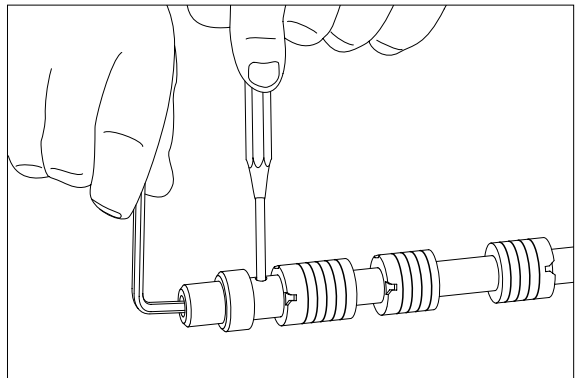


(6) Installation of orifice and throttle check valve

- ① Fit orifice in housing.
• Tightening torque : $0.5 \pm 0.1 \text{ kgf} \cdot \text{m}$
($3.6 \pm 0.7 \text{ lbf} \cdot \text{ft}$)

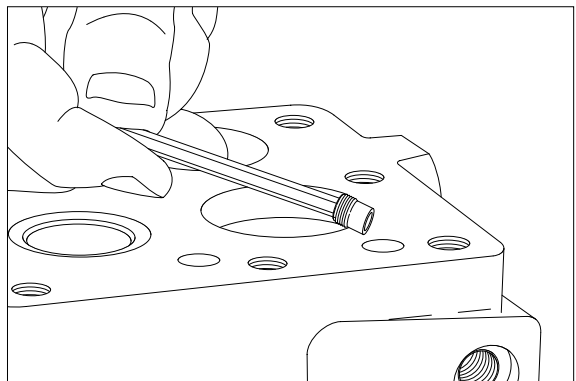


② Fit orifice in LS - connection.

- Tightening torque : $1 \pm 0.3\text{kgf} \cdot \text{m}$
($7.2 \pm 2.2\text{lbf} \cdot \text{ft}$)

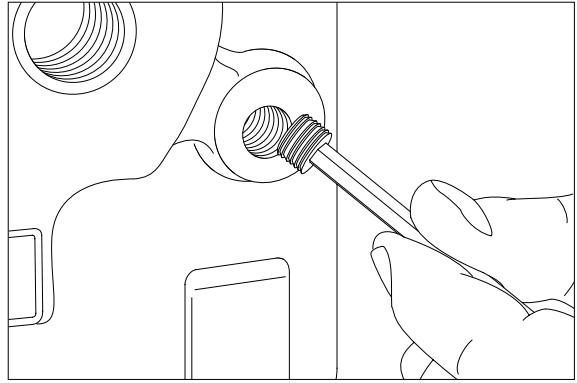

③ Fit throttle check valve in PP - connection.

- Tightening torque : $1 \pm 0.3\text{kgf} \cdot \text{m}$
($7.2 \pm 2.2\text{lbf} \cdot \text{ft}$)

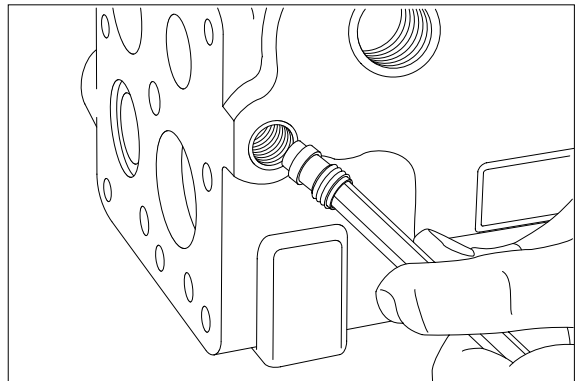

※ Comments on flow amplifiers with internal PP :

1. 1/4 BSP. F in PP - connection.

 
Fit washer and plug.

- Tightening torque : $4.1 \pm 0.3\text{kgf} \cdot \text{m}$
($29.7 \pm 2.2\text{lbf} \cdot \text{ft}$)

2. 7/16 - 20 UNF in PP - connection.

Fit O-ring and plug.


- Tightening torque : $1.5 \pm 0.5\text{kgf} \cdot \text{m}$
($10.8 \pm 3.6\text{lbf} \cdot \text{ft}$)



(7) Installation of shock valves


① Guide shock valve in and secure it by hand.

Remember O-ring.

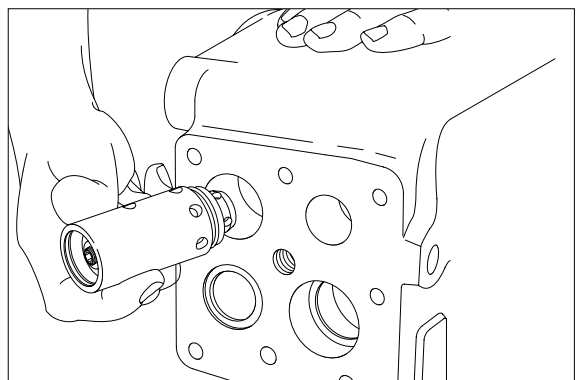


(8) Assembly of pressure relief valve

- ① Guide adjustment screw, spring and cone up into the cartridge.

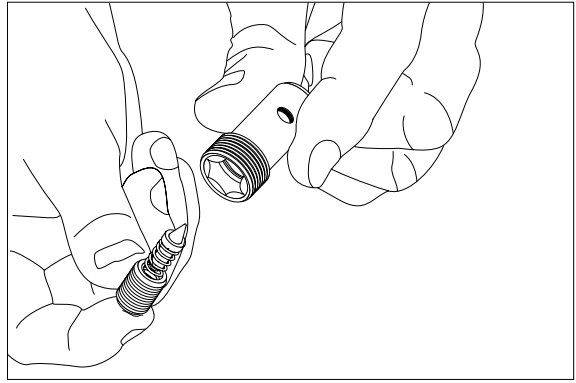


- ② Screw the adjustment screw so far in that the 10mm hexagon key fully engages.

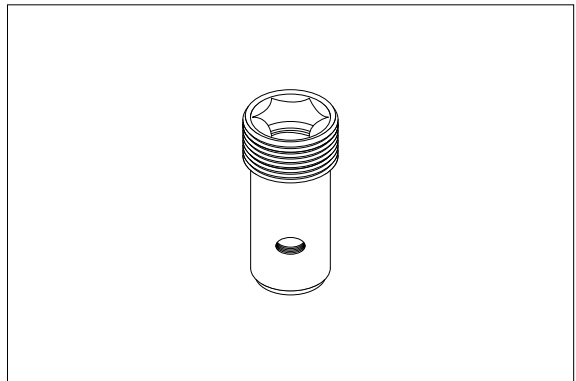


(9) Installation of pressure relief valve

- ① Let the washer drop into the hole.

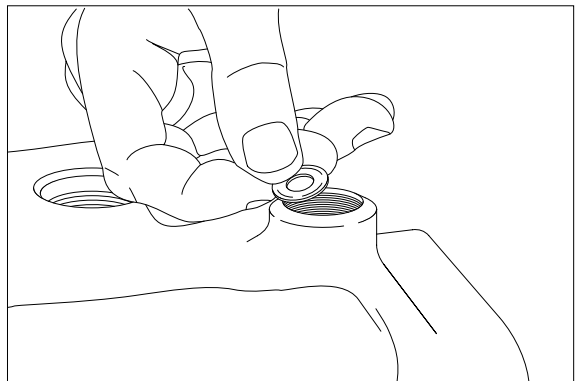


- ② Fit pressure relief valve.
 - Tightening torque : $3.1 \pm 0.3 \text{ kgf} \cdot \text{m}$
($22.4 \pm 2.2 \text{ lbf} \cdot \text{ft}$)

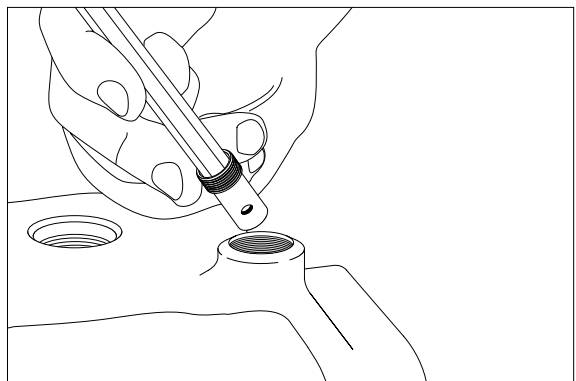

③ Fit plug with washer.

- Tightening torque : $6 \pm 0.5 \text{ kgf} \cdot \text{m}$
($44.1 \pm 3.6 \text{ lbf} \cdot \text{ft}$)

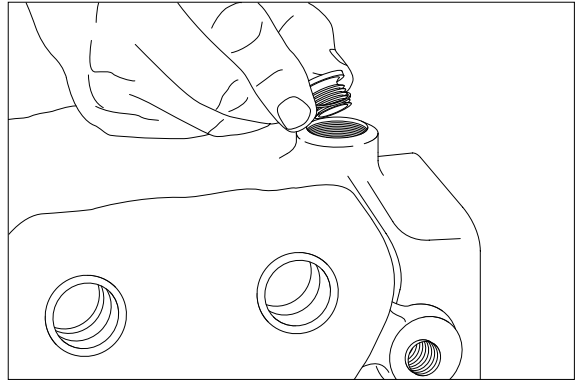


(10) Installation of spools

① Fit directional spool.


Fit priority valve spool.

- ※ Spring control must be placed in correct position against LS - connection.

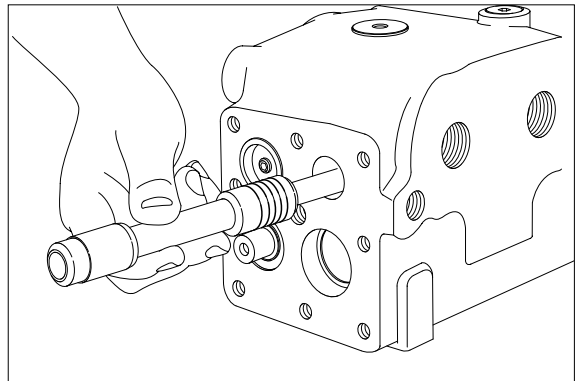


② Fit spring.

- ※ Spring must be by the LS - connection.

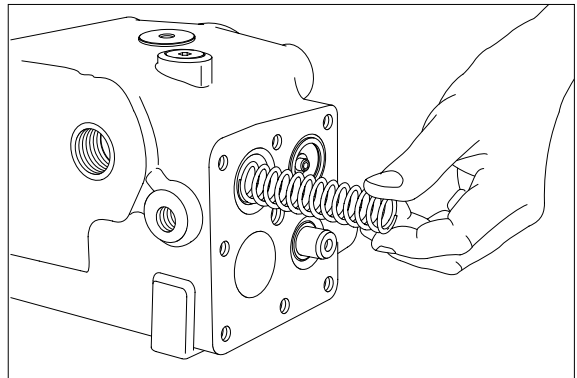


③ Fit amplifier spool.

- ※ The orifice must be placed in correct position against LS - connection.

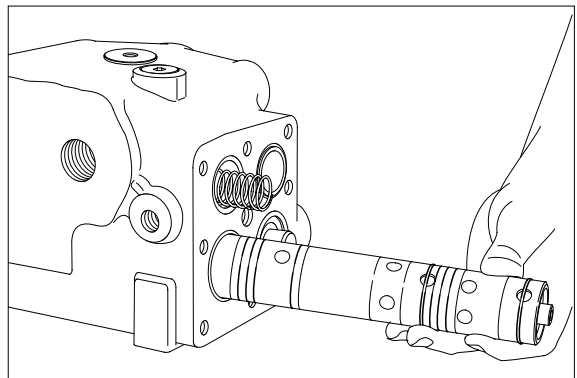


(11) Installation of end cover at PP - connection


- ① Fit spring with vaseline on amplifier spool.
- ※ The spring must be fitted at the PP - connection.

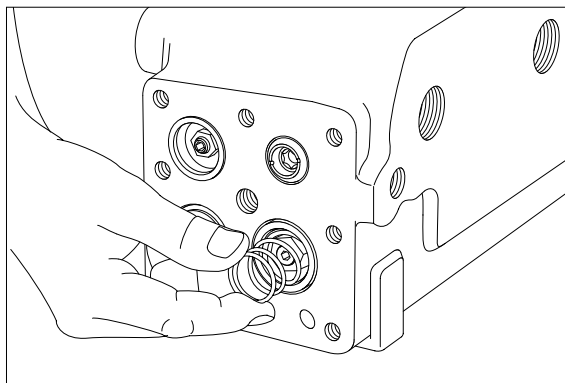


- ② Fit spring guide with vaseline.

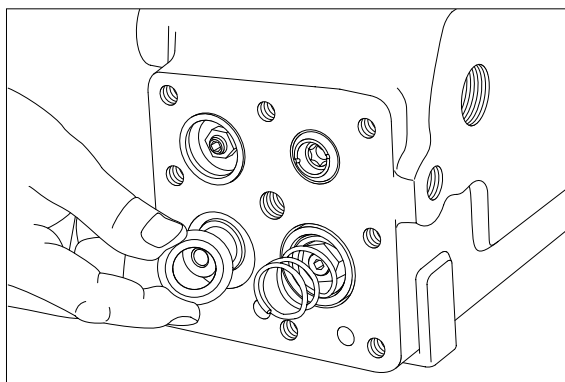


- ③ Fit large and small springs with vaseline.

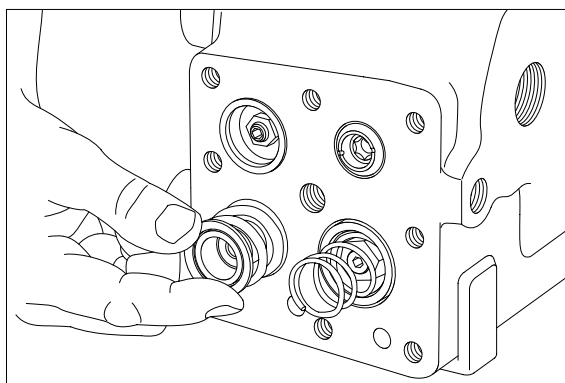


- ④ Fit guide screws.

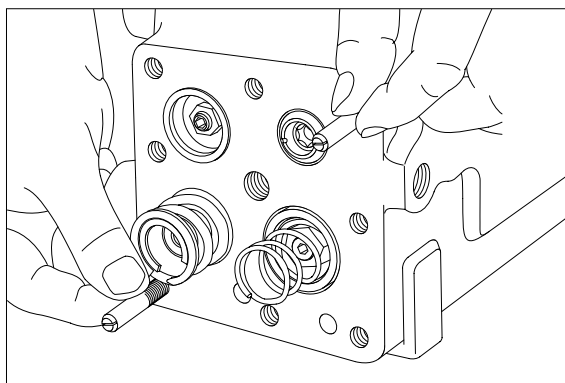


- ⑤ Fit 4 large and 2 small O-rings.

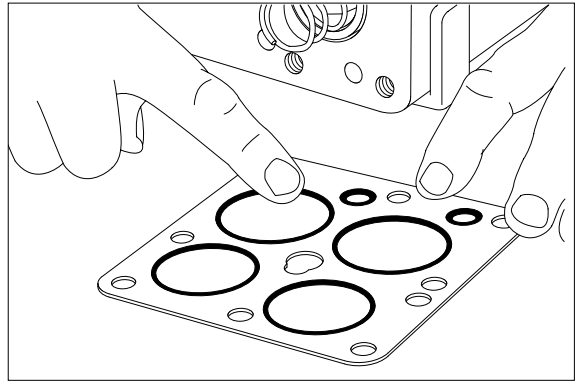


- ⑥ Guide plate in.

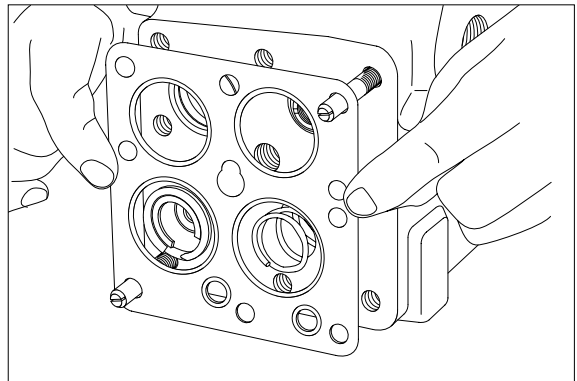


- ⑦ Fit stop(Thickness : 5mm) in end cover with vaseline.

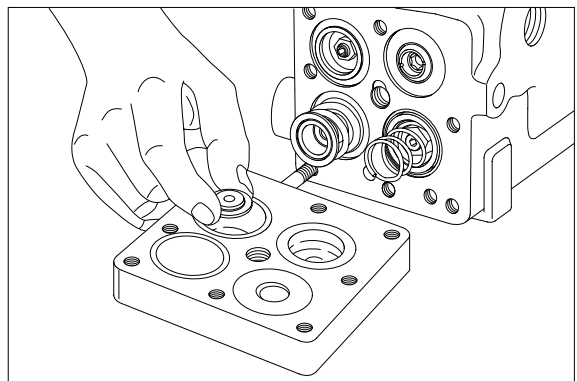


- ⑧ Guide end cover in.

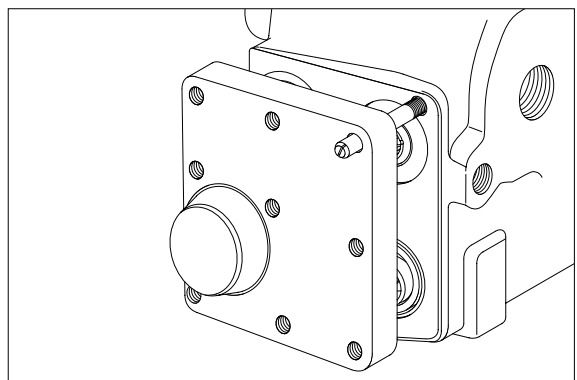

- ⑨ Fit screw with spring washer.

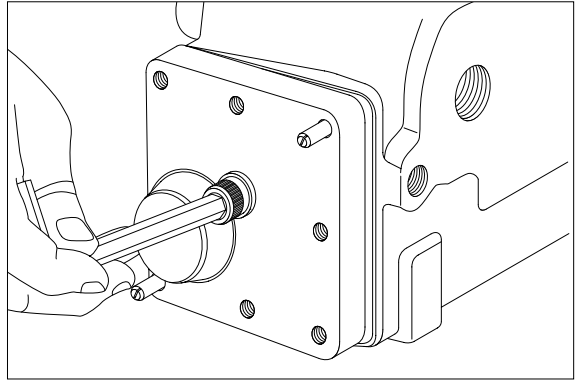


- ⑩ Fit screws with spring washer.
- Tightening torque : $2.6 \pm 0.5 \text{ kgf} \cdot \text{m}$
($18.8 \pm 3.6 \text{ lbf} \cdot \text{ft}$)
 - Tightening torque : $8.2 \pm 1 \text{ kgf} \cdot \text{m}$
for large screw ($59.3 \pm 7.2 \text{ lbf} \cdot \text{ft}$)

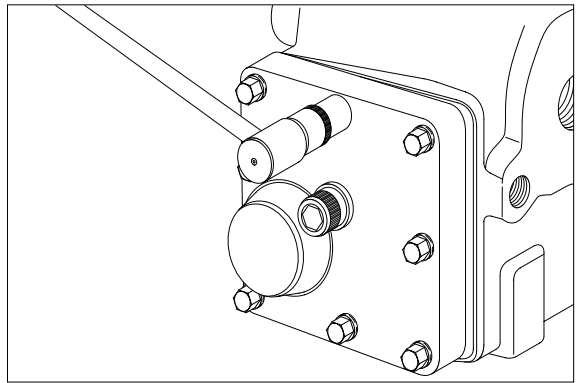


(12) Installation of end cover at LS - connection


- ① Fit guide screws.
Fit remote control with vaseline.

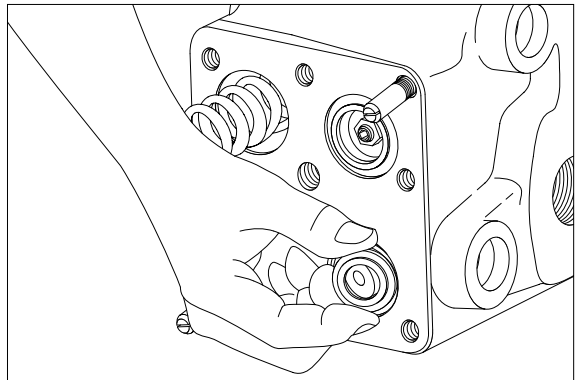


- ② Fit large and small springs with vaseline.

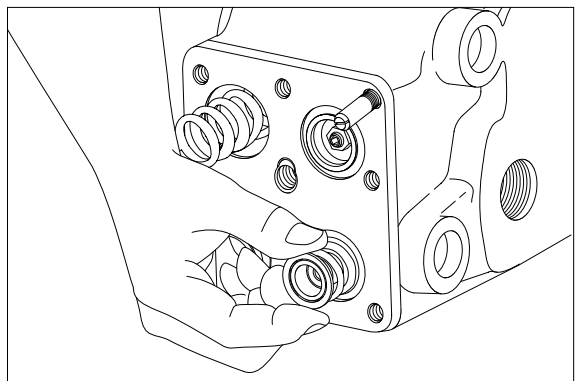


- ③ Guide in plate with 4 O-rings.

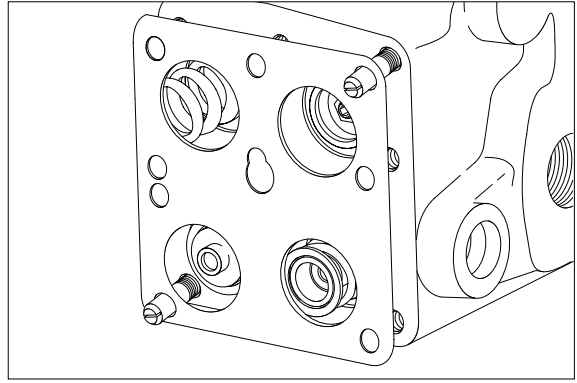


- ④ Fit stop for priority valve spool (Thickness : 8mm) with vaseline.

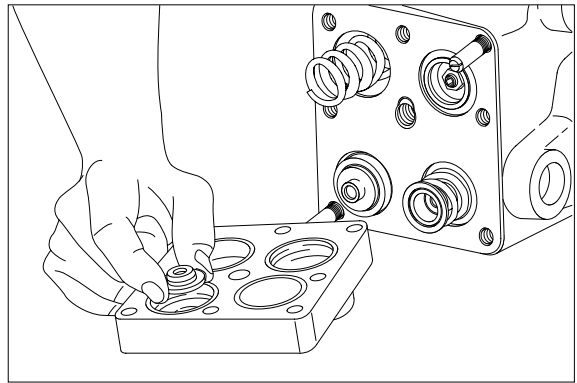


- ⑤ Fit stop for directional spool (Thickness : 5mm) with vaseline.

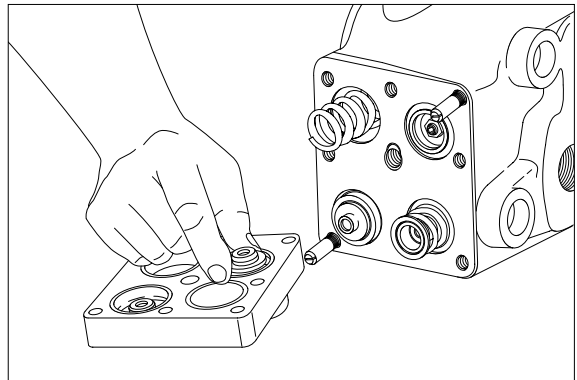

- ⑥ Guide in end cover.

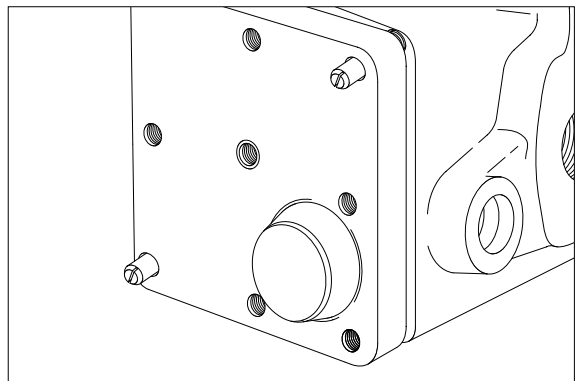


- ⑦ Fit large screw with spring washer.

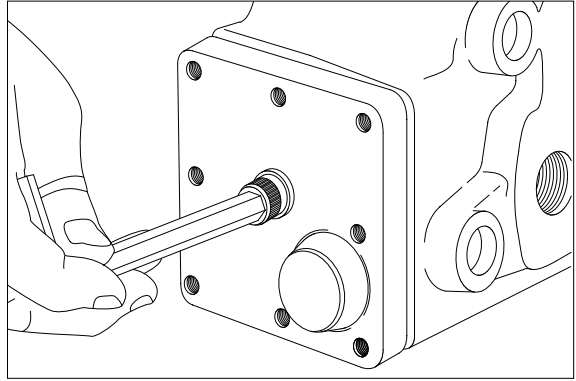


- ⑧ Fit screws with spring washers.

- Tightening torque : $2.6 \pm 0.5 \text{ kgf} \cdot \text{m}$
($18.8 \pm 3.6 \text{ lbf} \cdot \text{ft}$)
- Tightening torque : $8.2 \pm 1 \text{ kgf} \cdot \text{m}$
for large screw ($59.3 \pm 7.2 \text{ lbf} \cdot \text{ft}$)

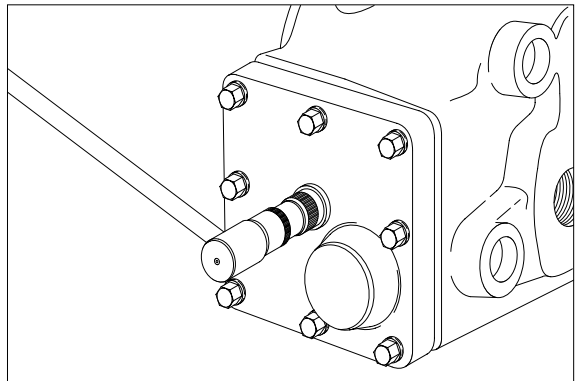


- ⑨ Fit plastic plugs.

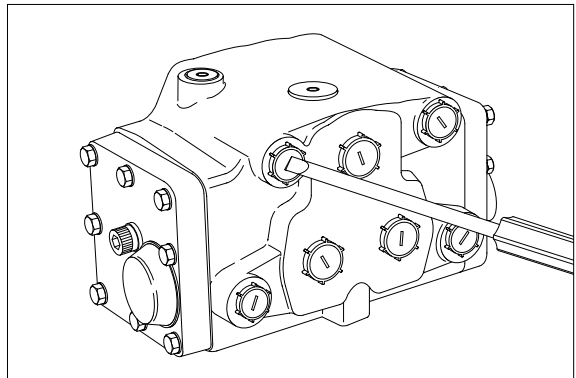

This completes assembly.

3. STEERING UNIT

1) STRUCTURE

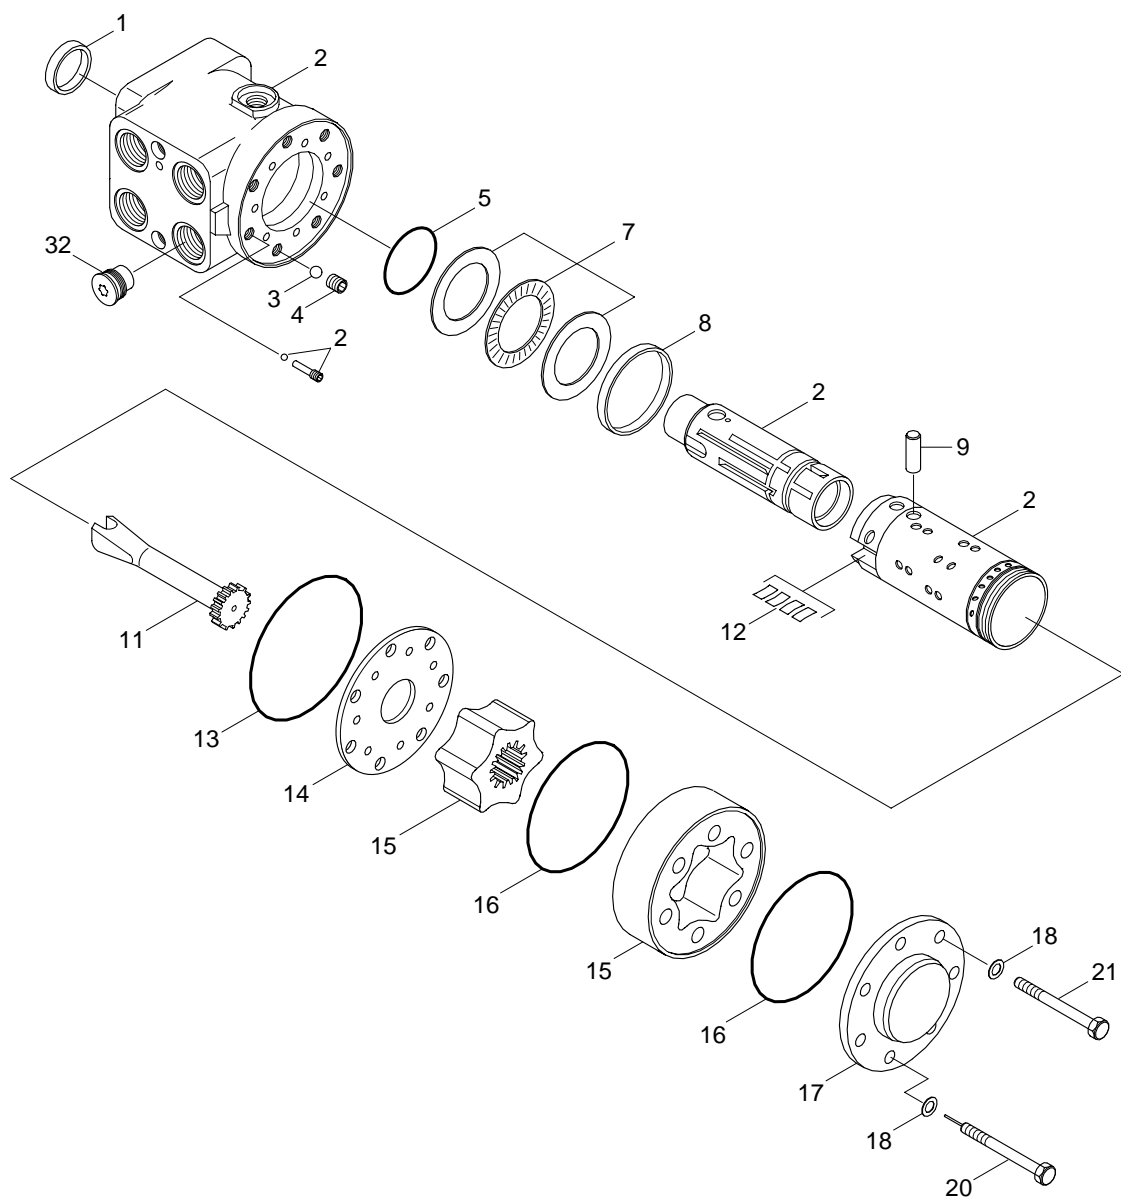


- 1 Dust seal ring
- 2 Housing, Spool, sleeve
- 3 Ball
- 4 Bushing
- 5 O-ring/Roto glyd ring
- 7 Bearing assy
- 8 Ring

- 9 Cross pin
- 11 Shaft
- 12 Spring set
- 13 O-ring
- 14 Distributor plate
- 15 Gearwheel set
- 16 O-ring


- 17 End cover
- 18 Washer
- 20 Pin screw
- 21 Screw
- 32 Check valve

2) TOOLS


(1) Holding tool.

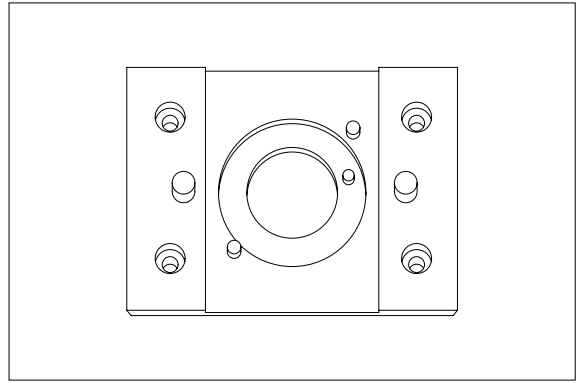


(2) Assembly tool for O-ring and kin-ring.

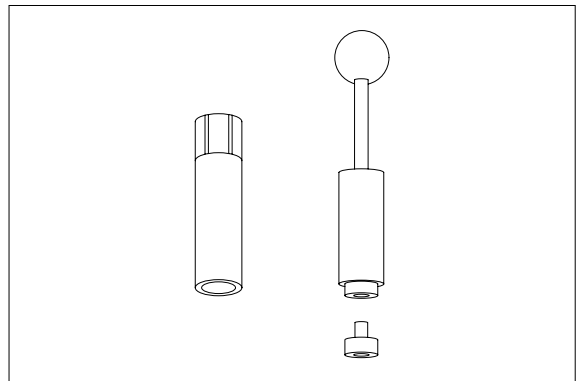


(3) Assembly tool for lip seal.

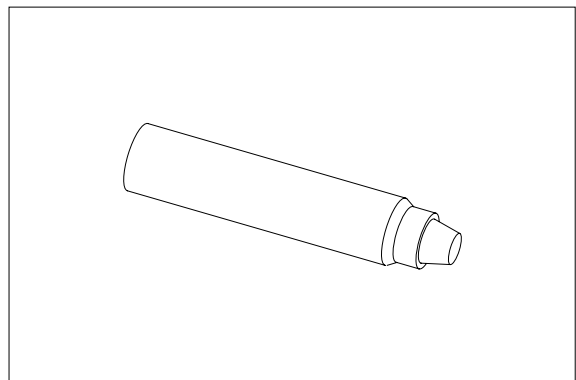


(4) Assembly tool for cardan shaft.

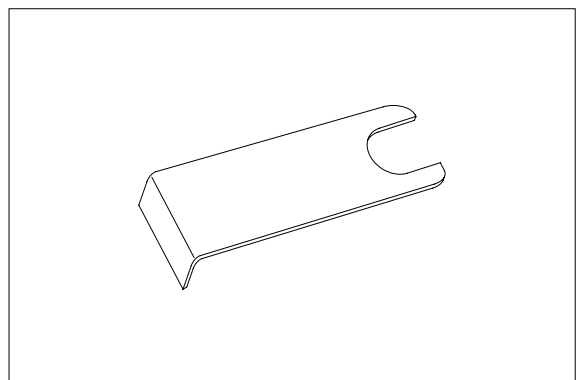

(5) Assembly tool for dust seal.

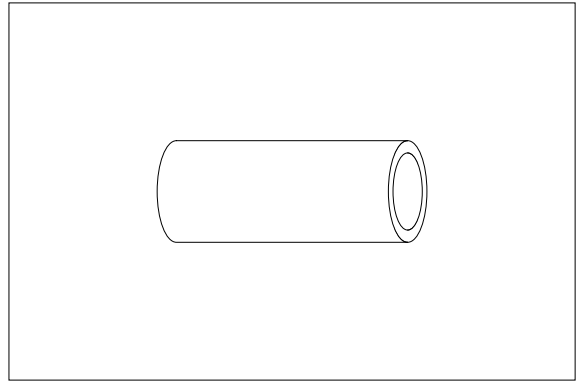


(6) Torque wrench 0~7.1kgf · m
(0~54.4lbf · ft)
13mm socket spanner
6, 8mm and 12mm hexagon sockets
12mm screwdriver
2mm screwdriver
13mm ring spanner
6, 8 and 12mm hexagon socket spanners
Plastic hammer
Tweezers

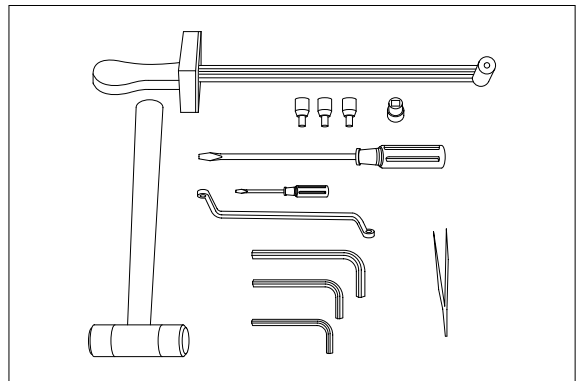

3) TIGHTENING TORQUE AND HYDRAULIC CONNECTIONS

(1) Hydraulic connections

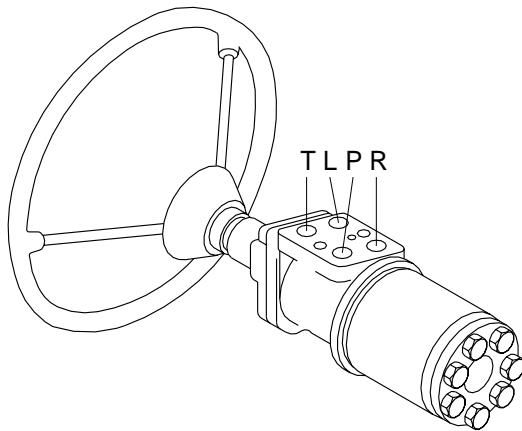


L : Left port
R : Right port
T : Tank
P : Pump

(2) Tightening torque


Screwed connection	Max. tightening torque [kgf · m(lbf · ft)]			
	With cutting edge	With copper washer	With aluminum washer	With O - ring
1/4 BSP.F	4.1(29.7)	2.0(14.5)	3.1(22.4)	-
3/8 BSP.F	6.1(44.1)	2.0(14.5)	5.1(36.9)	-
1/2 BSP.F	10.2(73.8)	3.1(22.4)	8.2(59.3)	-
7/16-20 UNF	-	-	-	2.0(14.5)
3/4-16 UNF	-	-	-	6.1(44.1)
M 12 × 1.5	4.1(29.7)	2.0(14.5)	3.1(22.4)	2.0(14.5)
M 18 × 1.5	7.1(51.4)	2.0(14.5)	5.1(36.9)	5.1(36.9)
M 22 × 1.5	10.2(73.8)	3.1(22.4)	8.2(59.3)	7.1(51.4)

4) DISASSEMBLY


- (1) Disassemble steering column from steering unit and place the steering unit in the holding tool.
Screw out the screws in the end cover(6-off plus one special screw).

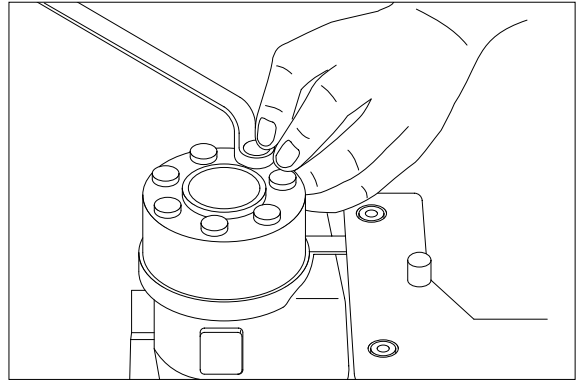


- (2) Remove the end cover, sideways.

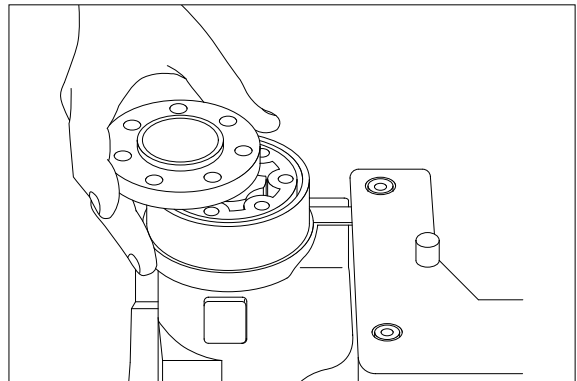


- (3) Lift the gearwheel set (With spacer if fitted) off the unit.
Take out the two O-rings.

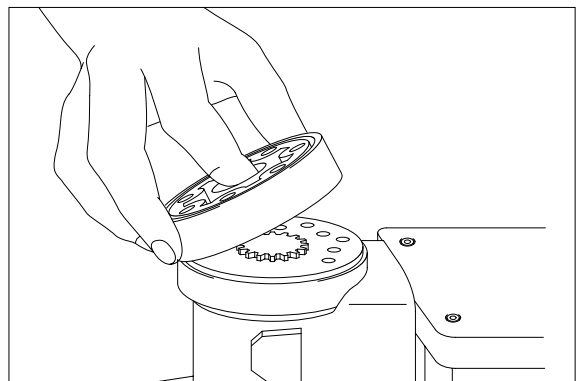


- (4) Remove cardan shaft.

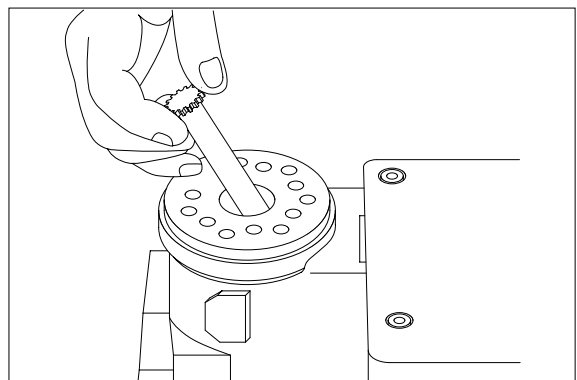


(5) Remove distributor plate.

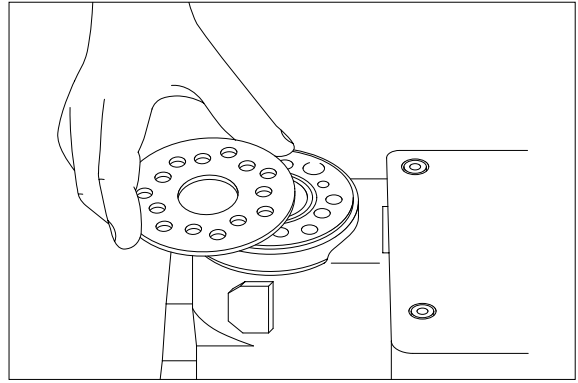


(6) Screw out the threaded bush over the check valve.

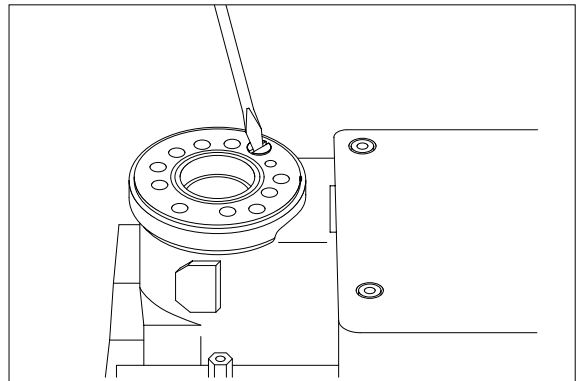


(7) Remove O-ring.

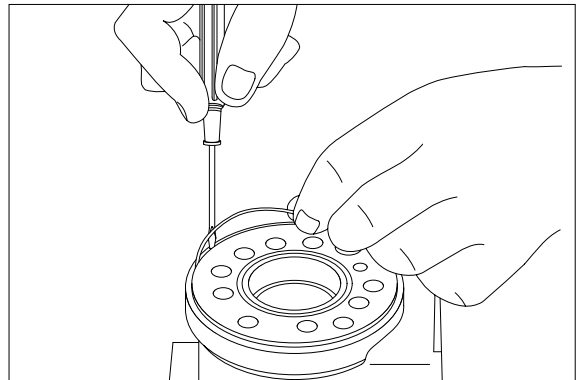


(8) Take care to keep the cross pin in the sleeve and spool horizontal. The pin can be seen through the open end of the spool. Press the spool inwards and the sleeve, ring, bearing races and needle bearing will be pushed out of the housing together.

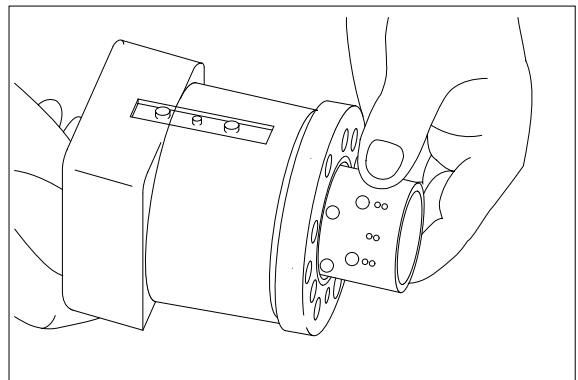


- (9) Take ring, bearing races and needle bearing from sleeve and spool. The outer (Thin) bearing race can sometimes "stick" in the housing, therefore check that it has come out.

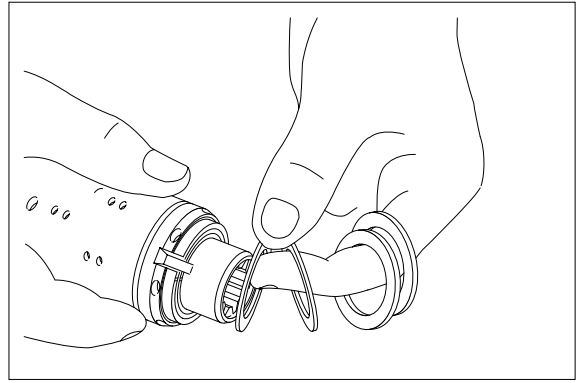


- (10) Press out the cross pin. Use the special screw from the end cover.

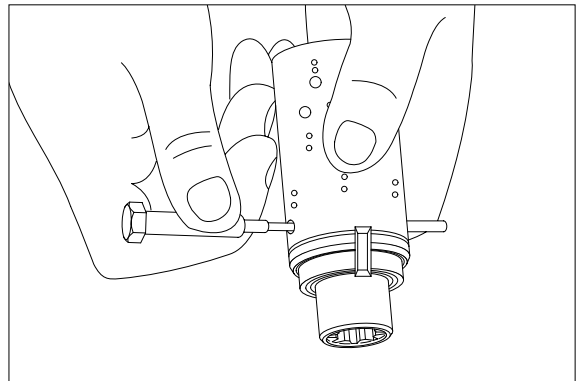


- ※ A small mark has been made with a pumice stone on both spool and sleeve close to one of the slots for the neutral position springs (See drawing).
If the mark is not visible, remember to leave a mark of your own on sleeve and spool before the neutral position springs are disassembled.

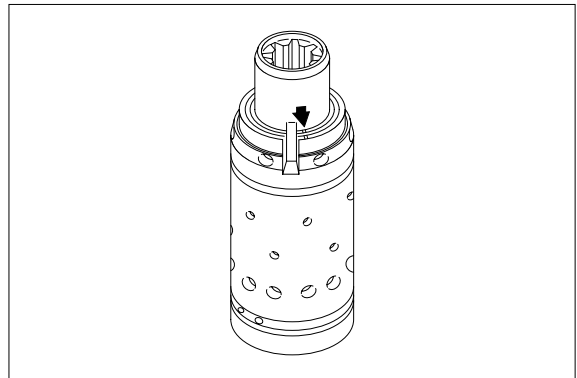


- (11) Carefully press the spool out of the sleeve.

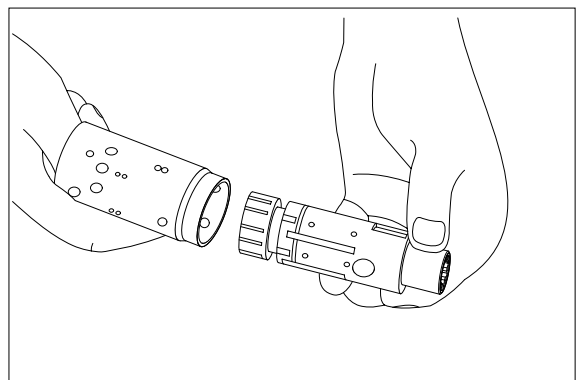


- (12) Press the neutral position springs out of their slots in the spool.

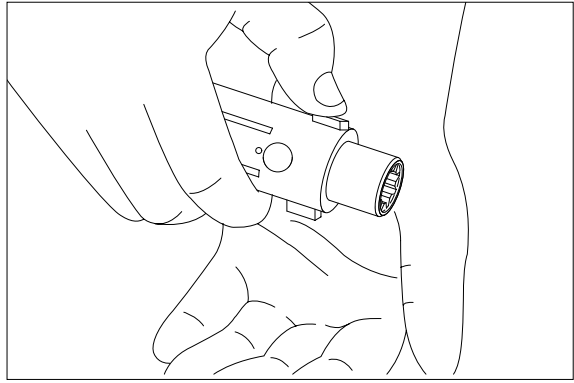

- (13) Remove dust seal and O-ring.

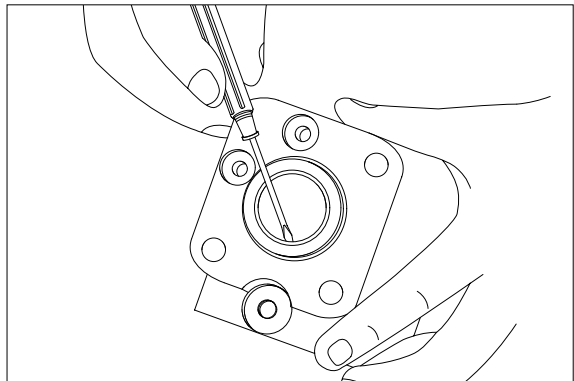

- (14) The steering unit is now completely disassembled.

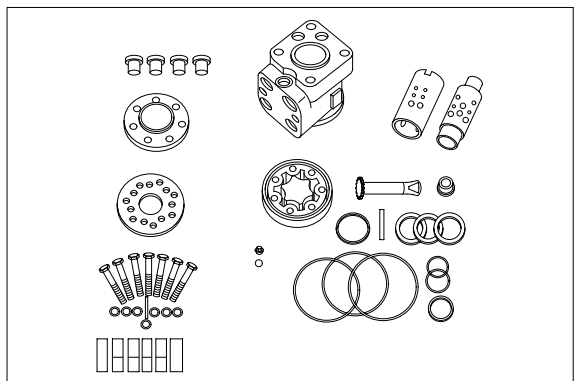

※ **Cleaning**

Clean all parts carefully in Shellsol K or the like.

※ **Inspection and replacement**

Replace all seals and washers. Check all parts carefully and make any replacements necessary.


※ **Lubrication**

Before assembly, lubricate all parts with hydraulic oil.

5) ASSEMBLY


(1) Assemble spool and sleeve.

- ※ When assembling spool and sleeve only one of two possible ways of positioning the spring slots is correct. There are three slots in the spool and three holes in the sleeve in the end of the spool / sleeve opposite to the end with spring slots. Place the slots and holes opposite each other so that parts of the holes in the sleeve are visible through the slots in the spool.

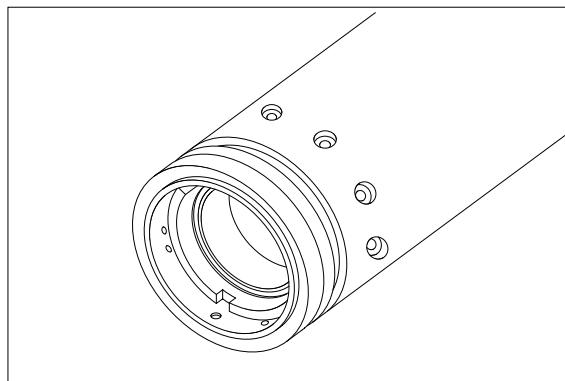

(2) Place the two flat neutral position springs in the slot.

Place the curved springs between the flat ones and press them into place (See assembly pattern).

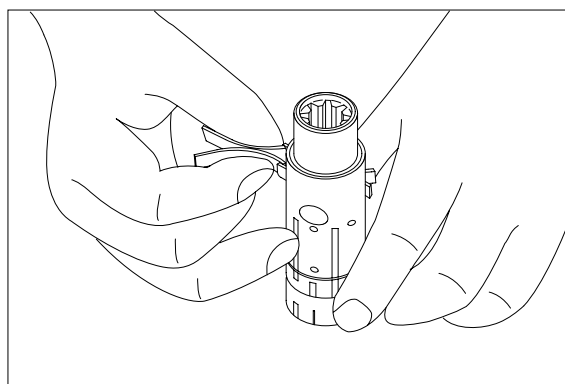

※ Assembly pattern


• Weak springs (Blue)

2 - off flat, blue : Part no. 150-0748


2 - off curved, blue : Part no. 150-0749

• Blue set


Spare set : Part no. 150-4265

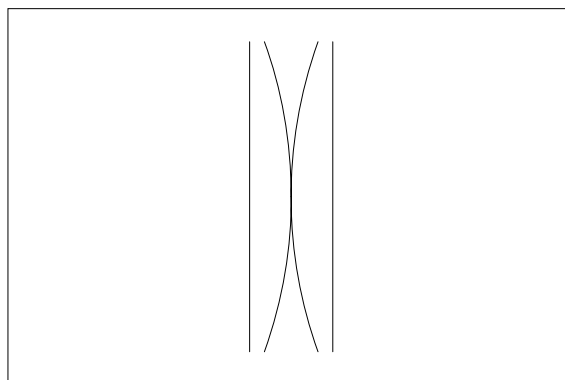


(3) Line up the spring set.

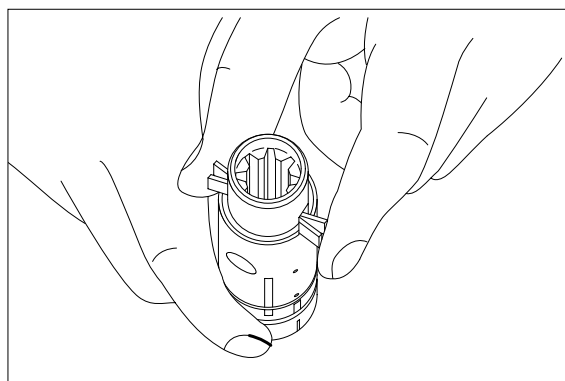


- (4) Guide the spool into the sleeve. Make sure that spool and sleeve are placed correctly in relation to each other (See page 3-76, No.(1)).

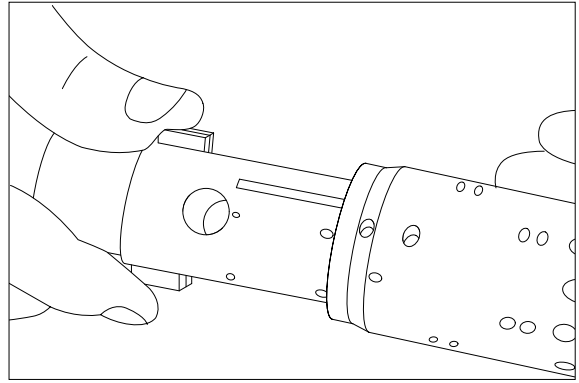


- (5) Press the springs together and push the neutral position springs into place in the sleeve.

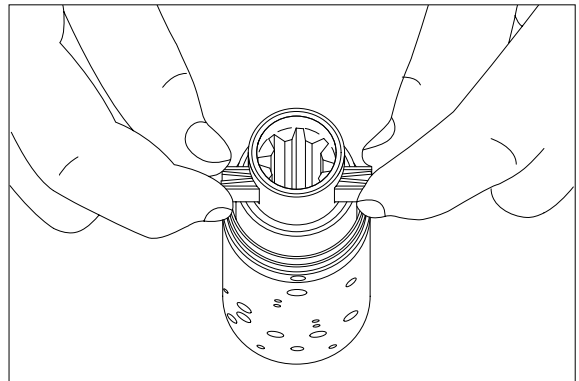


- (6) Line up the springs and center them.

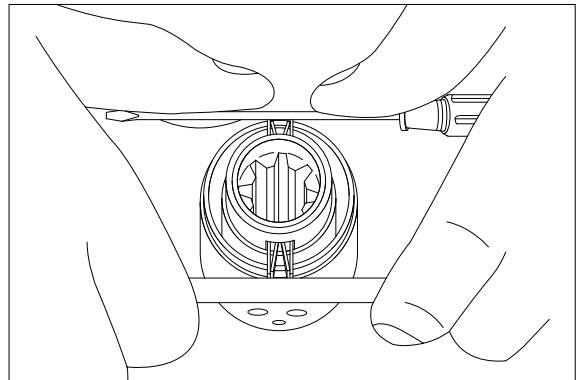


- (7) Guide the ring down over the sleeve.
※ The ring should be able to rotate free of the springs.

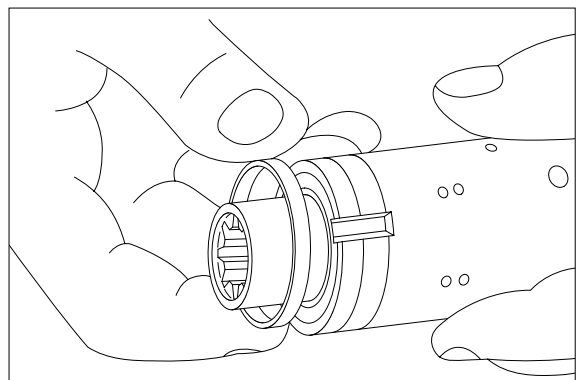

(8) Fit the cross pin into the spool / sleeve.

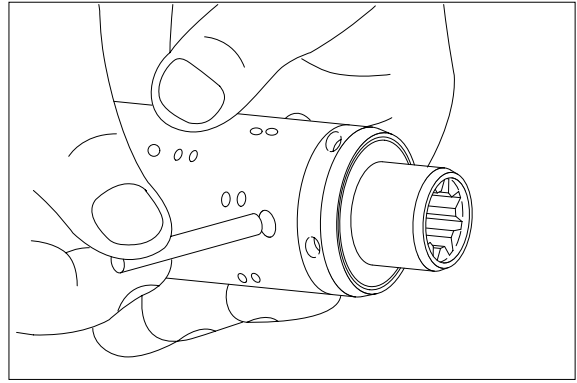


(9) Fit bearing races and needle bearing as shown on below drawing.

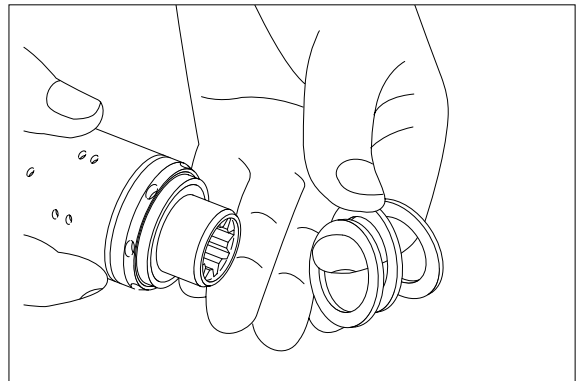


※ **Assembly pattern for standard bearings**

- 1 Outer bearing race
- 2 Needle bearing
- 3 Inner bearing race
- 4 Spool
- 5 Sleeve


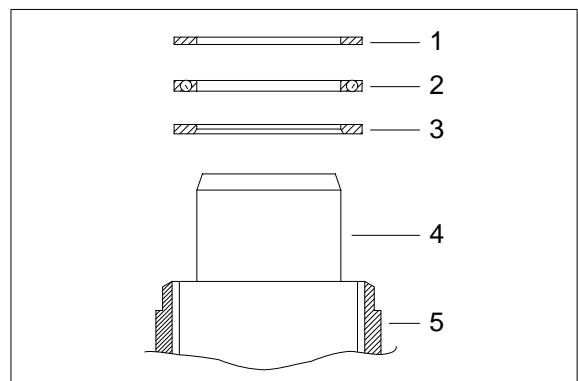


Installation instruction for O-ring


(10) Turn the steering unit until the bore is horizontal. Guide the outer part of the assembly tool into the bore for the spool / sleeve.

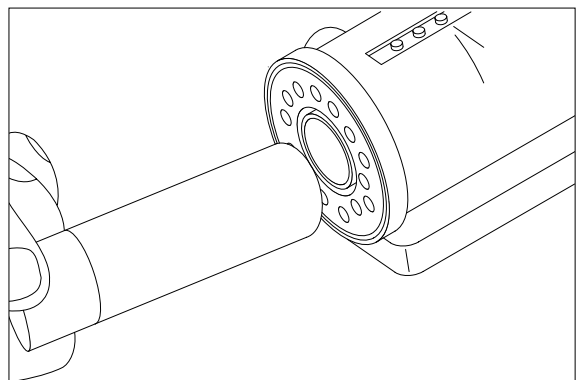


- (11) Grease O-ring with hydraulic oil and place them on the tool.

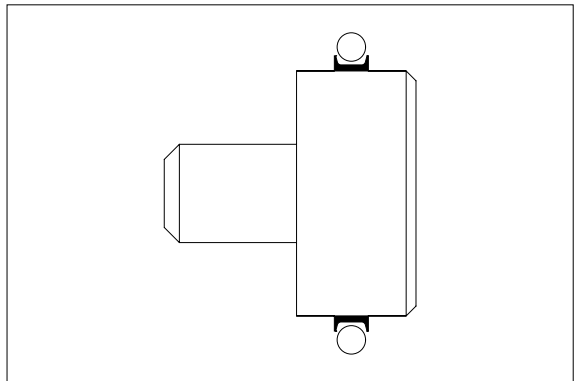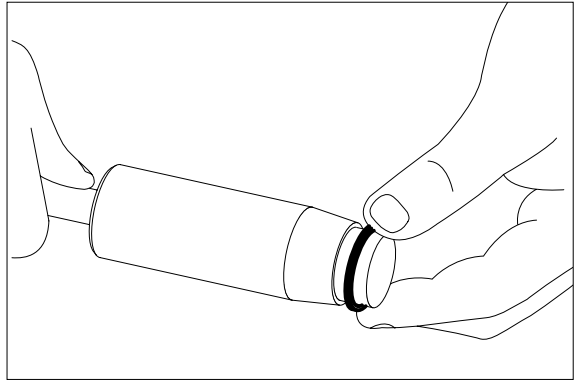


- (12) Hold the outer part of the assembly tool in the bottom of the steering unit housing and guide the inner part of the tool right to the bottom.

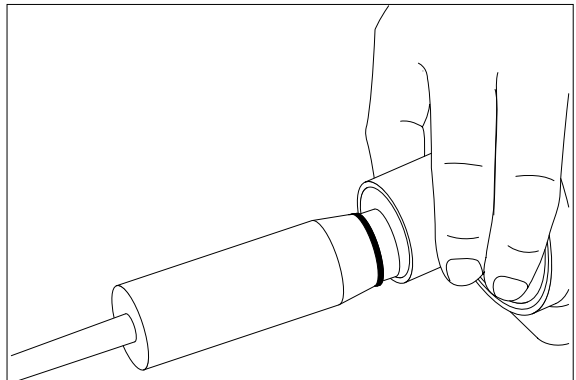

- (13) Press and turn the O-ring into position in the housing.


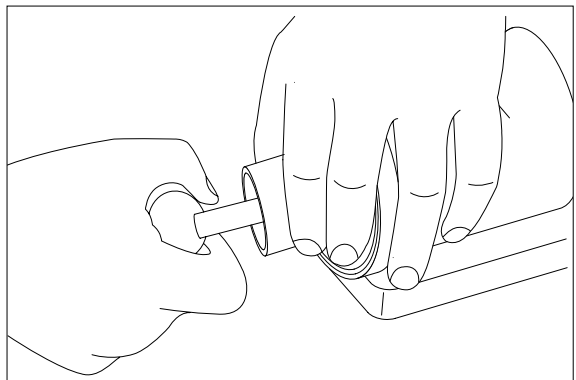


- (14) Draw the inner and outer parts of the assembly tool out of the steering unit bore, leaving the guide from the inner part in the bore.

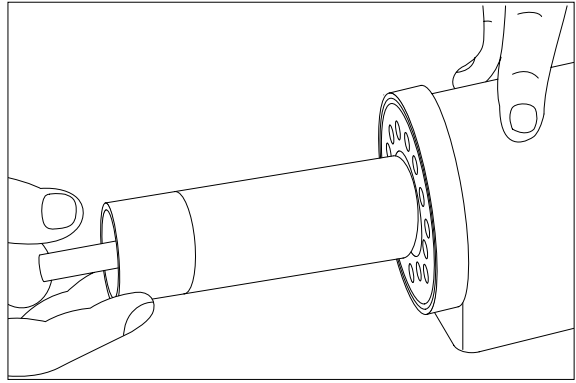


Installation instructions for lip seal


- (15) Lubricate the lip seal with hydraulic oil and place it on the assembly tool.

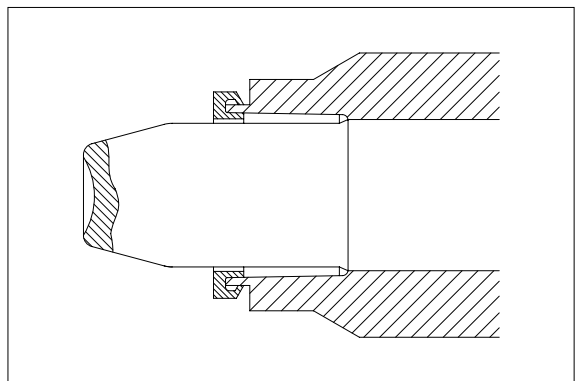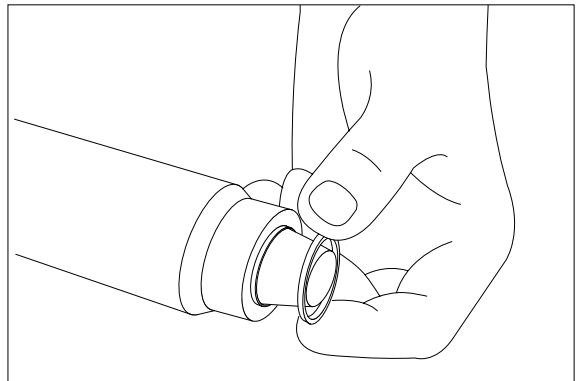


- (16) Guide the assembly tool right to the bottom.

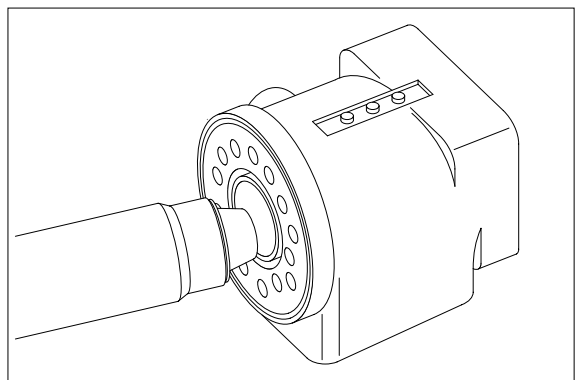


- (17) Press and turn the lip seal into place in the housing.

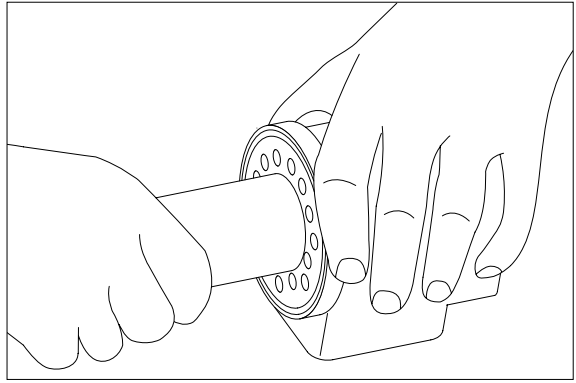


- (18) With a light turning movement, guide the spool and sleeve into the bore.
※ Fit the spool set holding the cross pin horizontal.

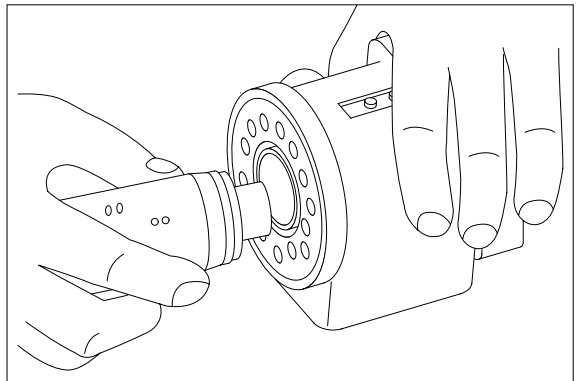


- (19) The spool set will push out the assembly tool guide. The O-ring are now in position.

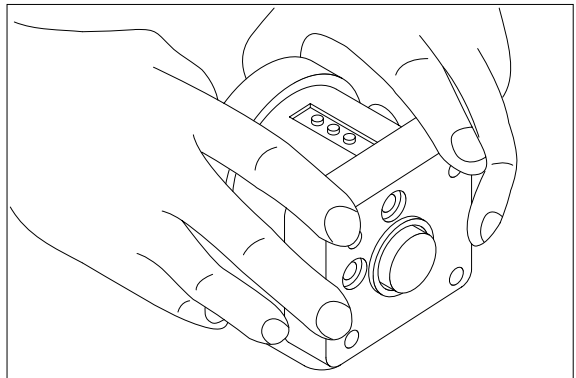


- (20) Turn the steering unit until the bore is vertical again. Put the check valve ball into the hole indicated by the arrow.

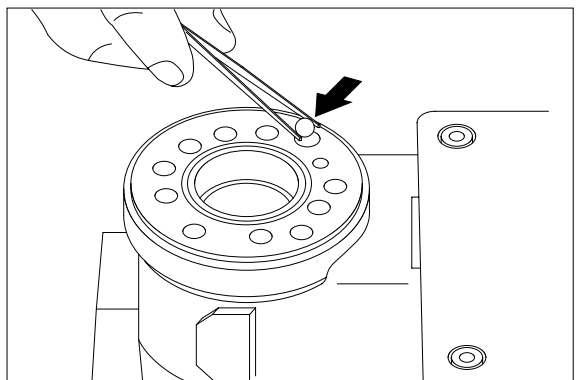


- (21) Screw the threaded bush lightly into the check valve bore. The top of the bush must lie just below the surface of the housing.

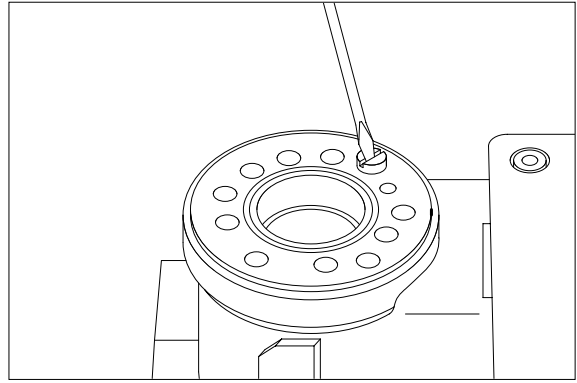


- (22) Grease the O-ring with mineral oil approx. viscosity 500 cSt at 20°C.

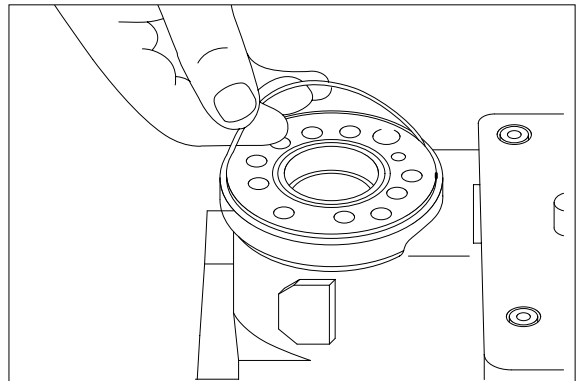


- (23) Place the distributor plate so that the channel holes match the holes in the housing.

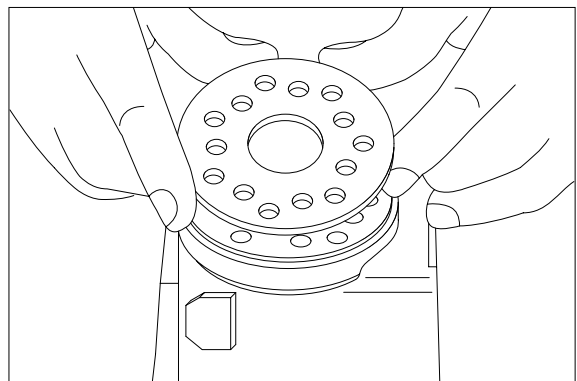


- (24) Guide the cardan shaft down into the bore so that the slot is parallel with the connection flange.

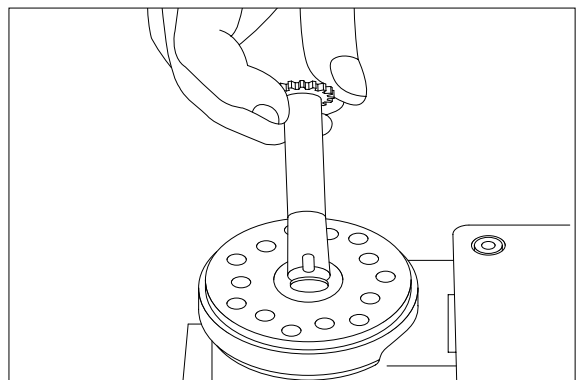

- (25) Place the cardan shaft as shown - so that it is held in position by the mounting fork.

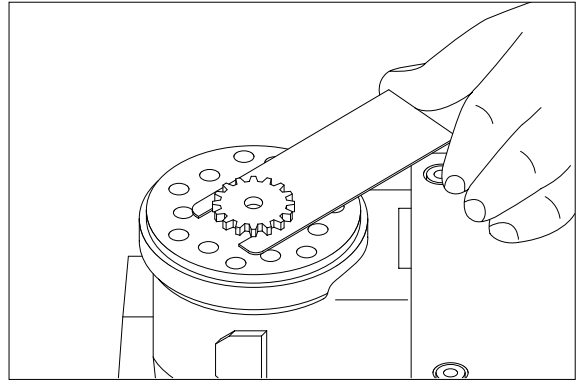


- (26) Grease the two O-rings with mineral oil approx. viscosity 500 cSt at 20°C and place them in the two grooves in the gear rim. Fit the gearwheel and rim on the cardan shaft.

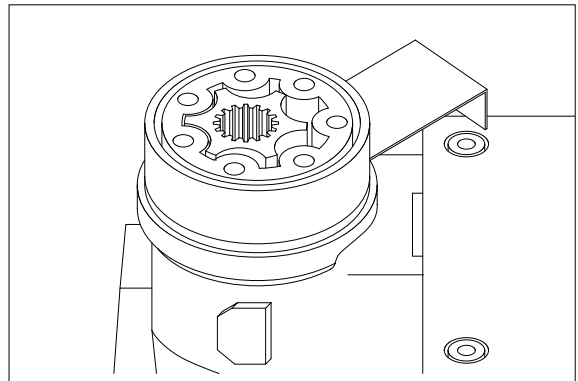


(27) Important

Fit the gearwheel (Rotor) and cardan shaft so that a tooth base in the rotor is positioned in relation to the shaft slot as shown.


Turn the gear rim so that the seven through holes match the holes in the housing.

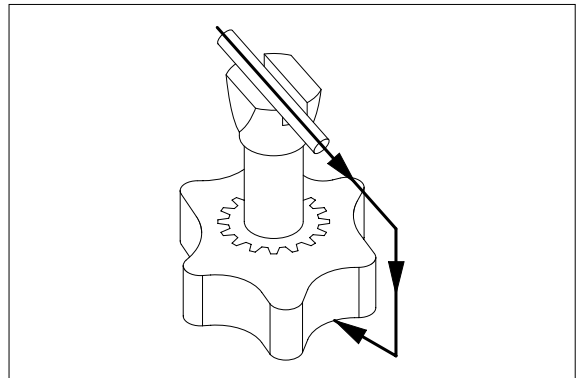


- (28) Fit the spacer, if any.

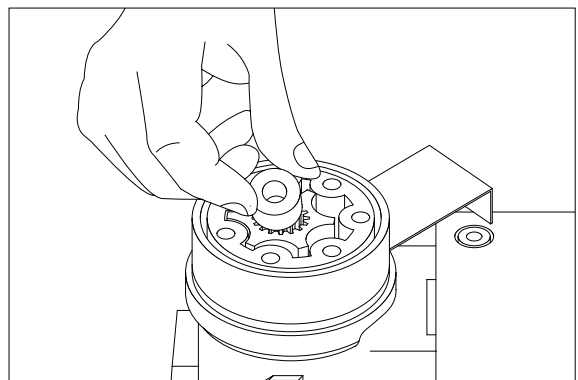


(29) Place the end cover in position.

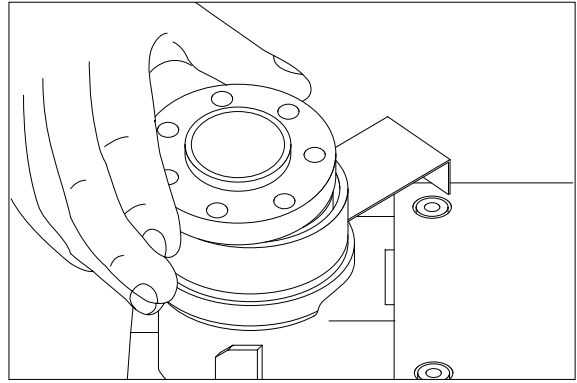


(30) Fit the special screw with washer and place it in the hole shown.

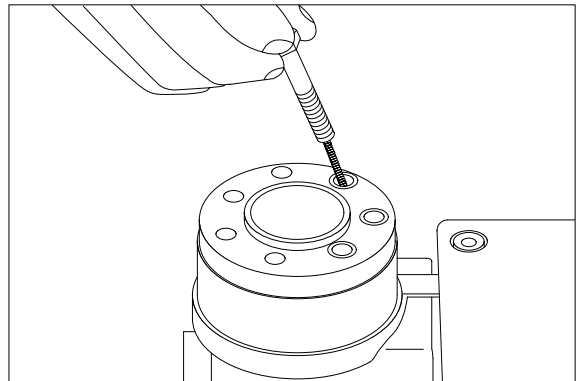


(31) Fit the six screws with washers and insert them. Cross-tighten all the screws and the rolled pin.
• Tightening torque : $3.1 \pm 0.6 \text{ kgf} \cdot \text{m}$
($22.4 \pm 4.3 \text{ lbf} \cdot \text{ft}$)

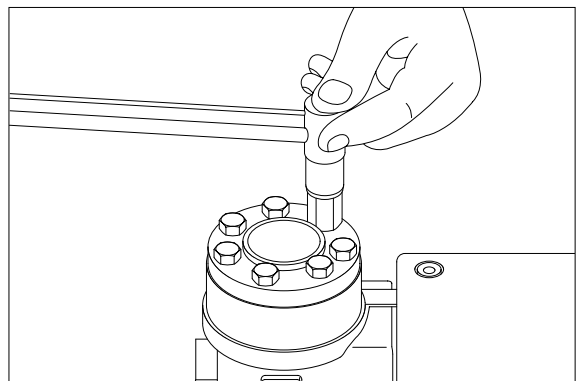

(32) Place the dust seal ring in the housing.

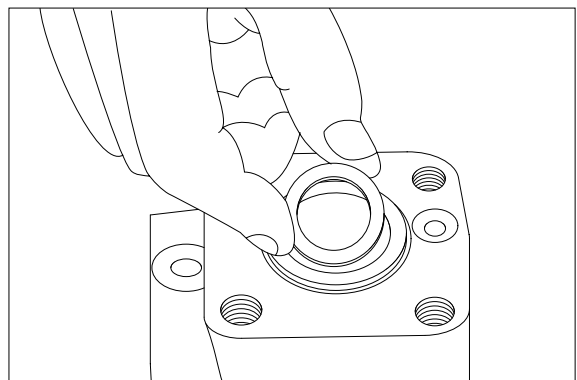


(33) Fit the dust seal ring in the housing.

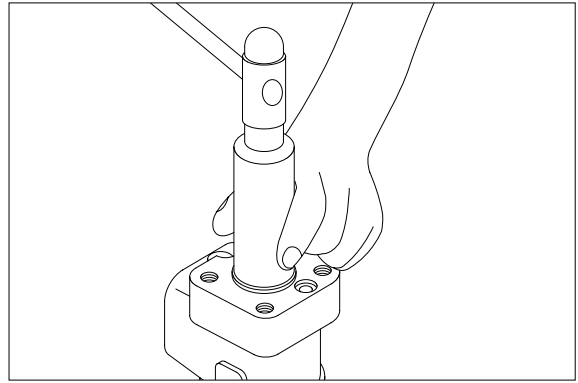


(34) Press the plastic plugs into the connection ports.

※ Do not use a hammer!

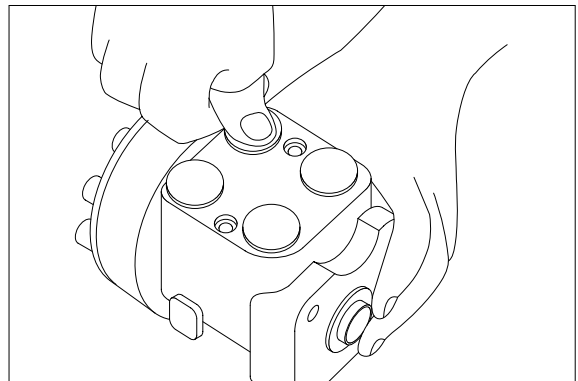

5. STEERING CYLINDER


1) STRUCTURE

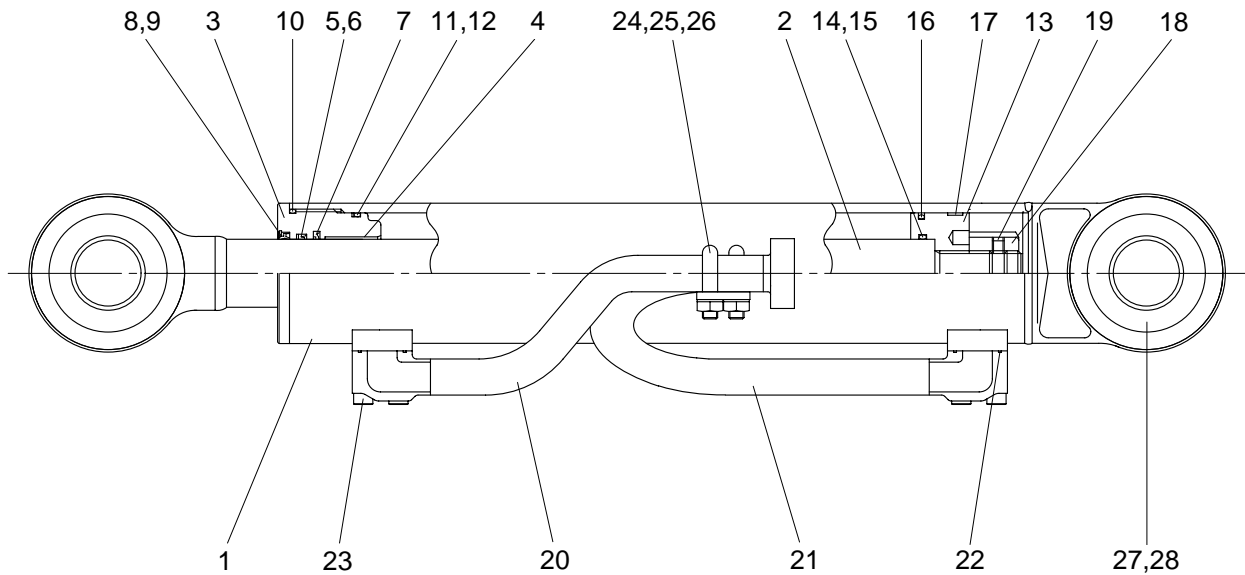

1	Tube assy	11	O-ring	21	Pipe assy
2	Rod assy	12	Back up ring	22	O-ring
3	Gland	13	Piston	23	Bolt
4	Bushing	14	O-ring	24	U-bolt
5	Rod seal	15	Back up ring	25	Nut
6	Back up ring	16	Piston seal	26	Spring washer
7	Buffer ring	17	Wear ring	27	Spherical bearing
8	Dust wiper	18	Piston nut	28	Retaining ring
9	Snap ring	19	Screw		
10	O-ring	20	Pipe assy		

2) TOOLS AND TIGHTENING TORQUE

(1) Tools

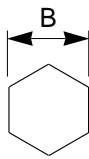Tool name	B	Remark
L-wrench	5	
Spanner	17	
	70	
Wrench	For gland	
(-) Driver	Small and large sizes	
Torque wrench	Capable of tightening with the specified torques	

(2) Tightening torque

Part name	Item	Size	Torque	
			kgf · m	lbf · ft
Gland	3	M115×3	60±10	434±72
Piston	13	M 45×2	75±8	542±58
Piston nut	18	M 45×2	100±10	723±72
Set screw	19	M 10×1.5	5.4±0.5	39±3.6
Bolt	23	M 10×1.5	5.4±0.5	39±3.6
Nut	25	M 10×1.5	3.2×0.3	23±2.2


3) DISASSEMBLY

(1) Remove cylinder head and piston rod

① Hold the clevis section of the tube in a vise.


※ Use mouth pieces so as not to damage the machined surface of the cylinder tube. Do not make use of the outside piping as a locking means.

② Pull out piston rod(2) about 200mm (7.8in). Because the piston rod is rather heavy, finish extending it with air pressure after the oil draining operation.

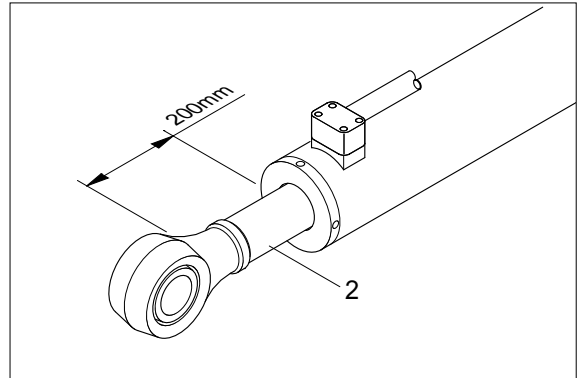


③ Loosen and remove the gland(3).

※ Cover the extracted piston rod(2) with rag to prevent it from being accidentally damaged during operation.

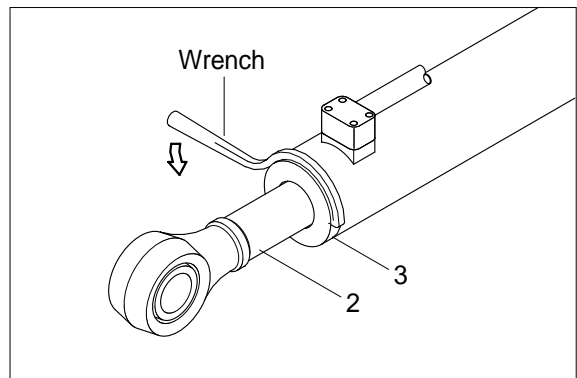


④ Draw out gland(3) and piston rod (2) assembly together from cylinder tube(1).

※ Since the piston rod assembly is heavy in this case, lift the tip of the piston rod(2) with a crane or some means and draw it out. However, when piston rod(2) has been drawn out to approximately two thirds of its length, lift it in its center to draw it completely.

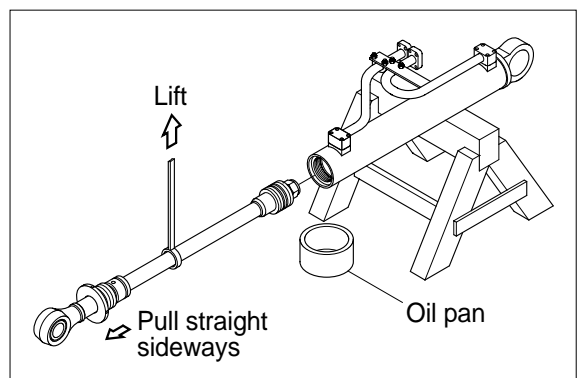


Note that the plated surface of piston rod(2) is to be lifted. For this reason, do not use a wire sling and others that may damage it, but use a strong cloth belt or a rope.

- ⑤ Place the removed piston rod assembly on a wooden V-block that is set level.
- ※ Cover a V-block with soft rag.

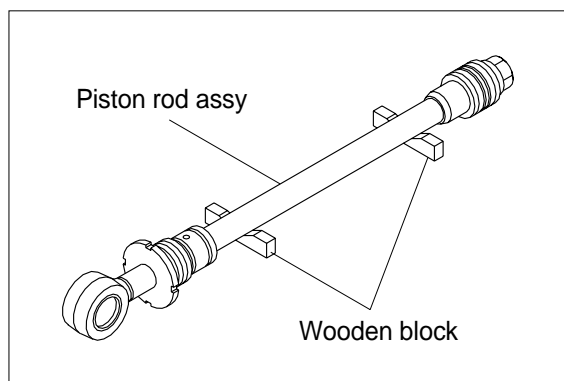


(2) Remove piston and gland assembly

- ① Remove the set screw(19).
- ② Remove the piston nut(18).
- ③ Remove piston assembly(13), back up ring(15) and O-ring(14).

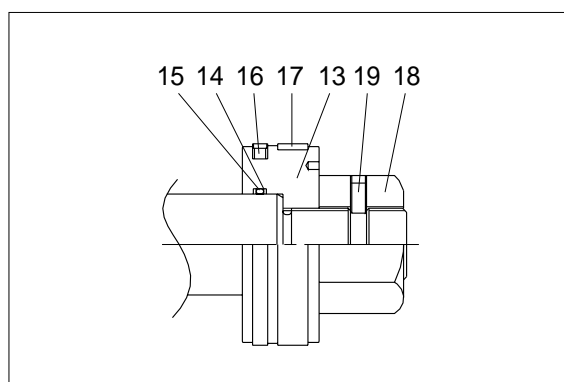


- ③ Remove the gland(3) assembly from piston rod(2).
 - ※ If it is too heavy to move, move it by striking the flanged part of gland(3) with a plastic hammer.
 - ※ Pull it straight with gland assembly lifted with a crane.
- Exercise care so as not to damage the lip of rod bushing(4) and packing(5,6,7,8,9) by the threads of piston rod(2).

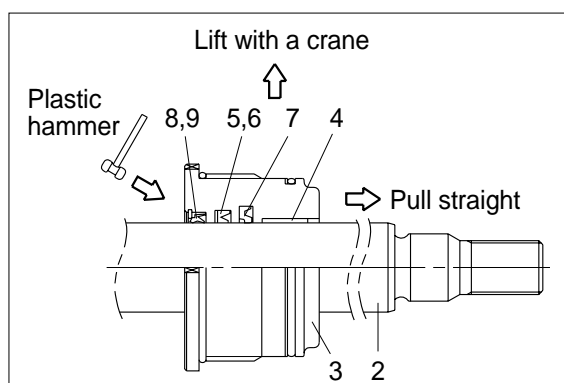


(3) Disassemble the piston assembly

- ① Remove wear ring(17).
- Remove and piston seal(16).
- ※ Exercise care in this operation not to damage the grooves.

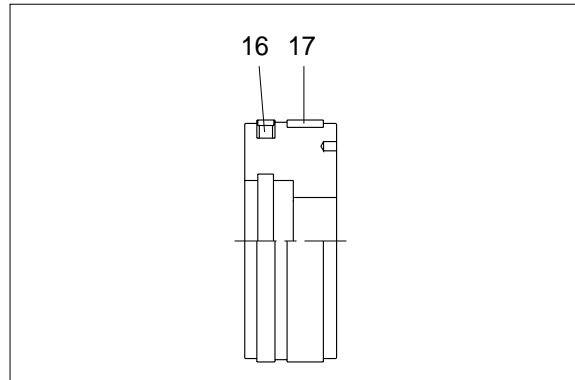

(4) Disassemble gland assembly

- ① Remove back up ring(12), and O-ring (11).
- ② Remove O-ring (10).
- ③ Remove snap ring(9) and dust wiper(8).
- ④ Remove back up ring(6), rod seal(5) and buffer ring(7).
- ※ Exercise care in this operation not to damage the grooves.
- ※ Do not remove seal and ring, if does not damaged.

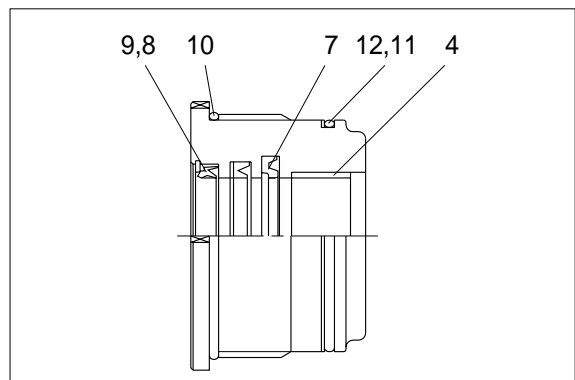


4) ASSEMBLY

(1) Assemble gland assembly

※ Check for scratches or rough surfaces if found smooth with an oil stone.


- ① Coat the inner face of gland(3) with hydraulic oil.

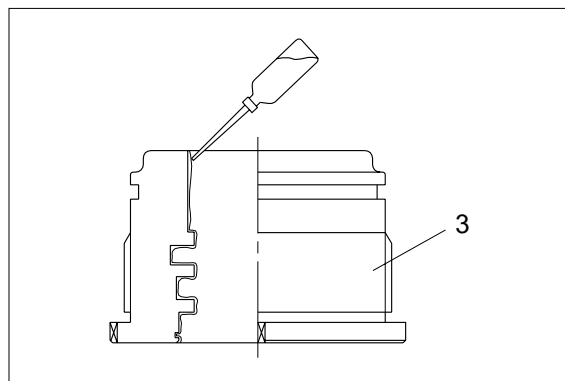

- ② Coat dust wiper(8) with grease and fit dust wiper(8) to the bottom of the hole of dust wiper.

At this time, press a pad metal to the metal ring of dust seal.


- ③ Fit snap ring(9) to the stop face.

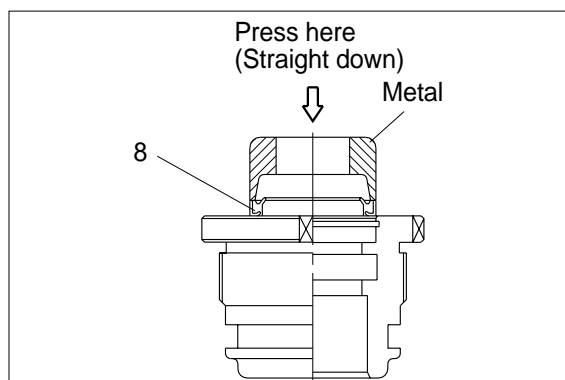

- ④ Fit back up ring(6) and rod seal(5), and buffer ring(7) to corresponding grooves, in that order.

※ Coat each packing with hydraulic oil before fitting it.


※ Insert the backup ring until outside of it is inserted into groove.

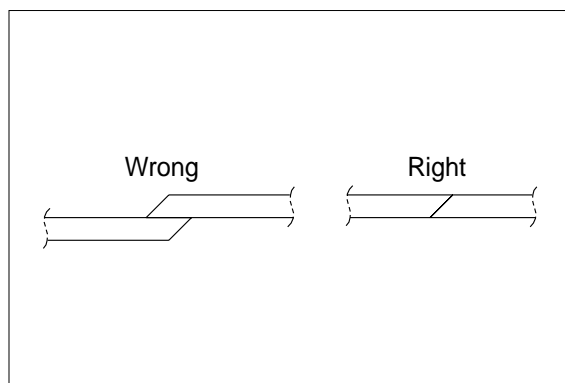


※ Rod seal(5) has its own fitting direction.

Therefore, confirm it before fitting them.

※ Fitting rod seal(5) up side down may damage its lip. Therefore check the correct direction that is shown in fig.

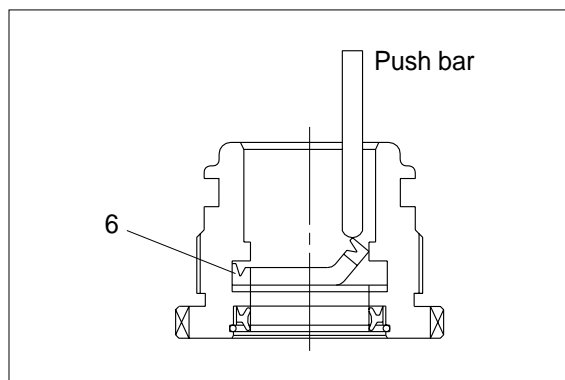


- ⑤ Fit back up ring(12) to gland (3).
- ※ Put the backup ring in the warm water of 30~50°C.
- ⑥ Fit O-ring(11) to gland(3).

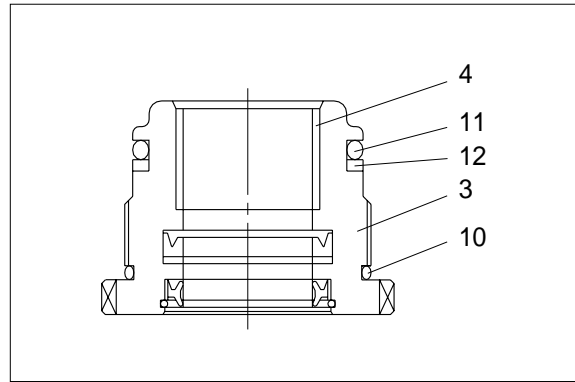


(2) Assemble piston assembly


- ※ Check for scratches or rough surfaces.
- ① If found smooth with an oil stone.
Coat the outer face of piston(13) with hydraulic oil.

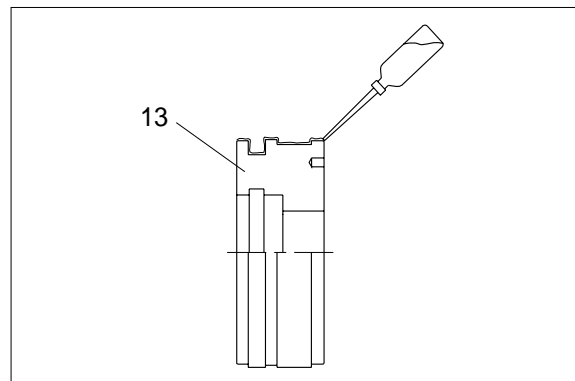

- ② Fit piston seal(16) to piston
- ※ Put the piston seal in the warm water of 60~100°C for more than 5 minutes.
- ※ After assembling the piston seal, press its outer diameter to fit in.

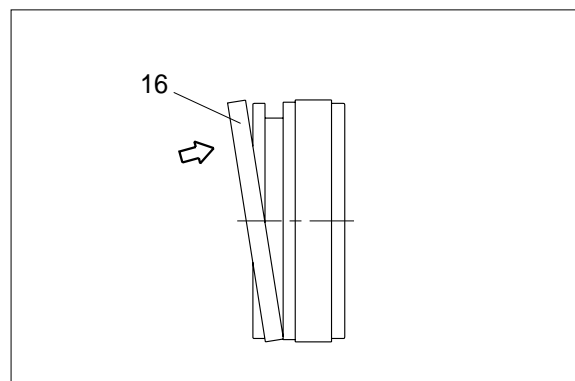


- ③ Fit wear ring(17) to piston(13).
- ④ Fit back up ring(15) and O-ring(14) to piston(13).

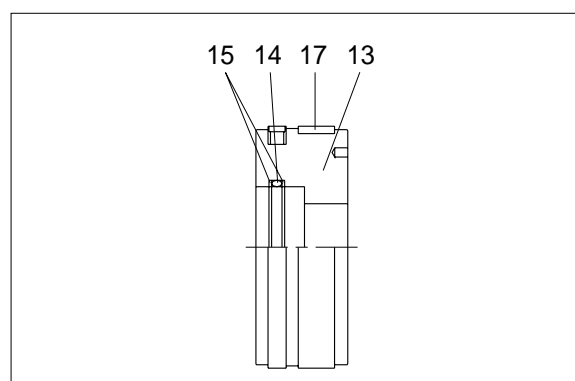


(3) Install piston and gland assembly


- ① Fix the piston rod assembly to the work bench.
- ② Apply hydraulic oil to the outer surface of piston rod(2), the inner surface of piston and gland.
- ③ Insert gland assembly to piston rod(2).

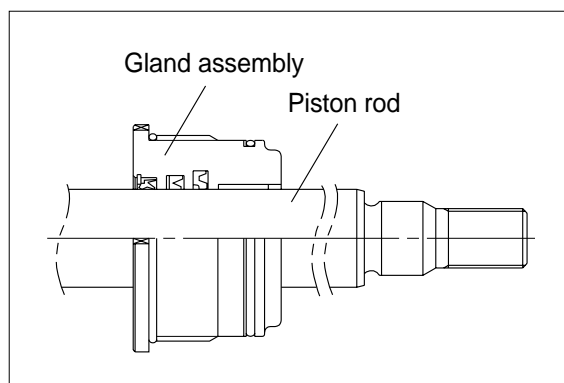

- ④ Fit piston assembly to piston rod.

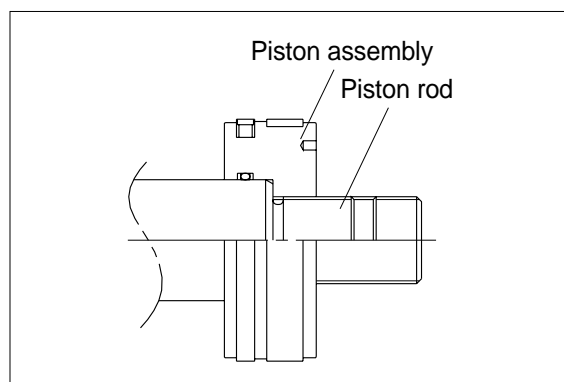

- ⑤ Tighten piston nut(18) to piston rod(2).
 - Tightening torque : $100 \pm 10 \text{ kgf} \cdot \text{m}$
($723 \pm 72 \text{ lbf} \cdot \text{ft}$)
- Tighten set screw(19) to piston nut(18).
 - Tightening torque : $5.4 \pm 0.5 \text{ kgf} \cdot \text{m}$
($39 \pm 3.6 \text{ lbf} \cdot \text{ft}$)

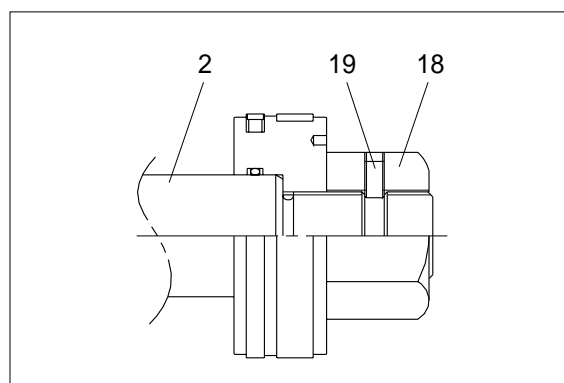

(4) Overall assemble

- ① Place a V-block on a rigid work bench.
Mount the cylinder tube assembly on it and fix the assembly by passing a bar through the clevis pin hole to lock the assembly.
- ② Insert the piston rod assembly in to the cylinder tube assembly, while lifting and moving the piston rod assembly with a crane.
 - ※ Be careful not to damage piston seal by thread of cylinder tube.
- ③ Match the bolts holes in the cylinder head flange to the tapped holes in the cylinder tube assembly and tighten socket bolts to a specified torque.
 - ※ Refer to the table of tightening torque.

